


SARGENT® 688 Trim Retrofit Kit

For retrofit of Von Duprin 98/99 Series Rim Exit Device

For assistance, contact SARGENT at 800-727-5477 or www.sargentlock.com

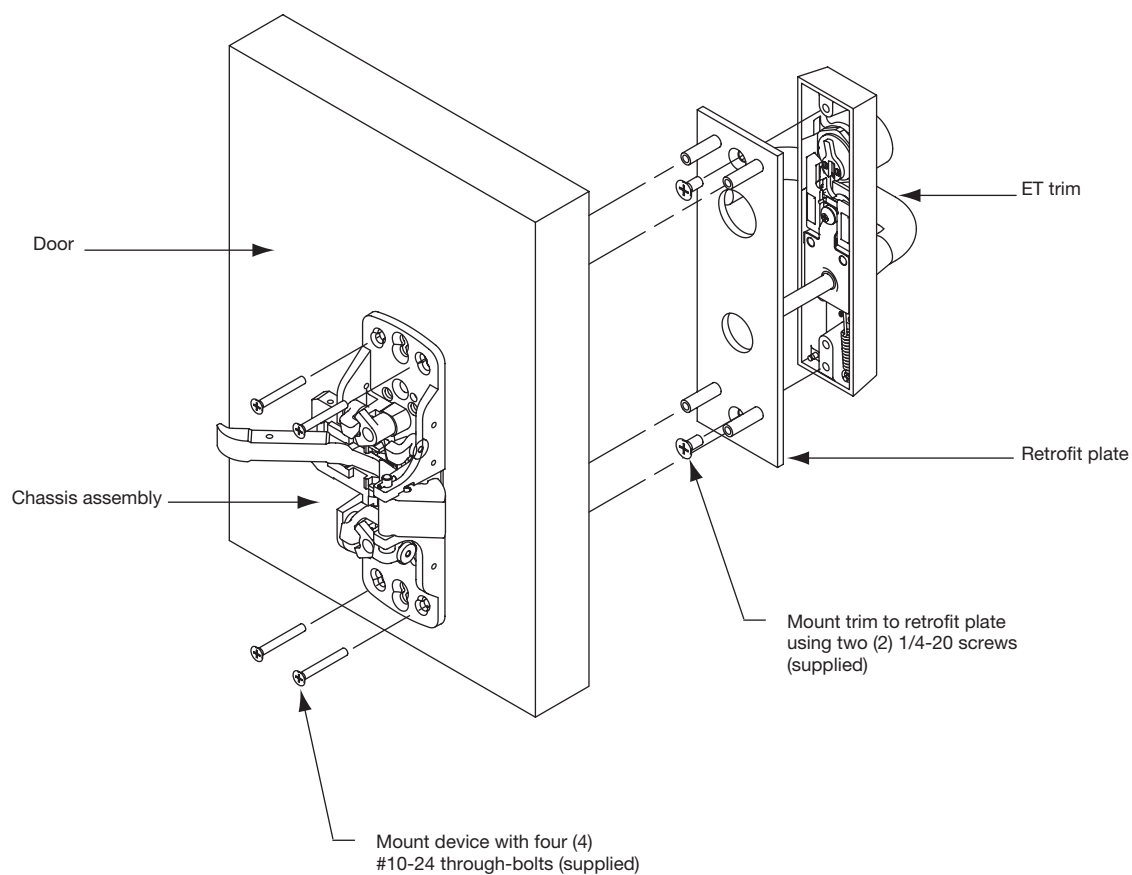

1. Mount trim to retrofit plate using (2) 1/4 - 20 screws (supplied)
2. Insert posts of plate into existing prep
3. Mount chassis assembly with (4) #10-24 through-bolts (supplied)