


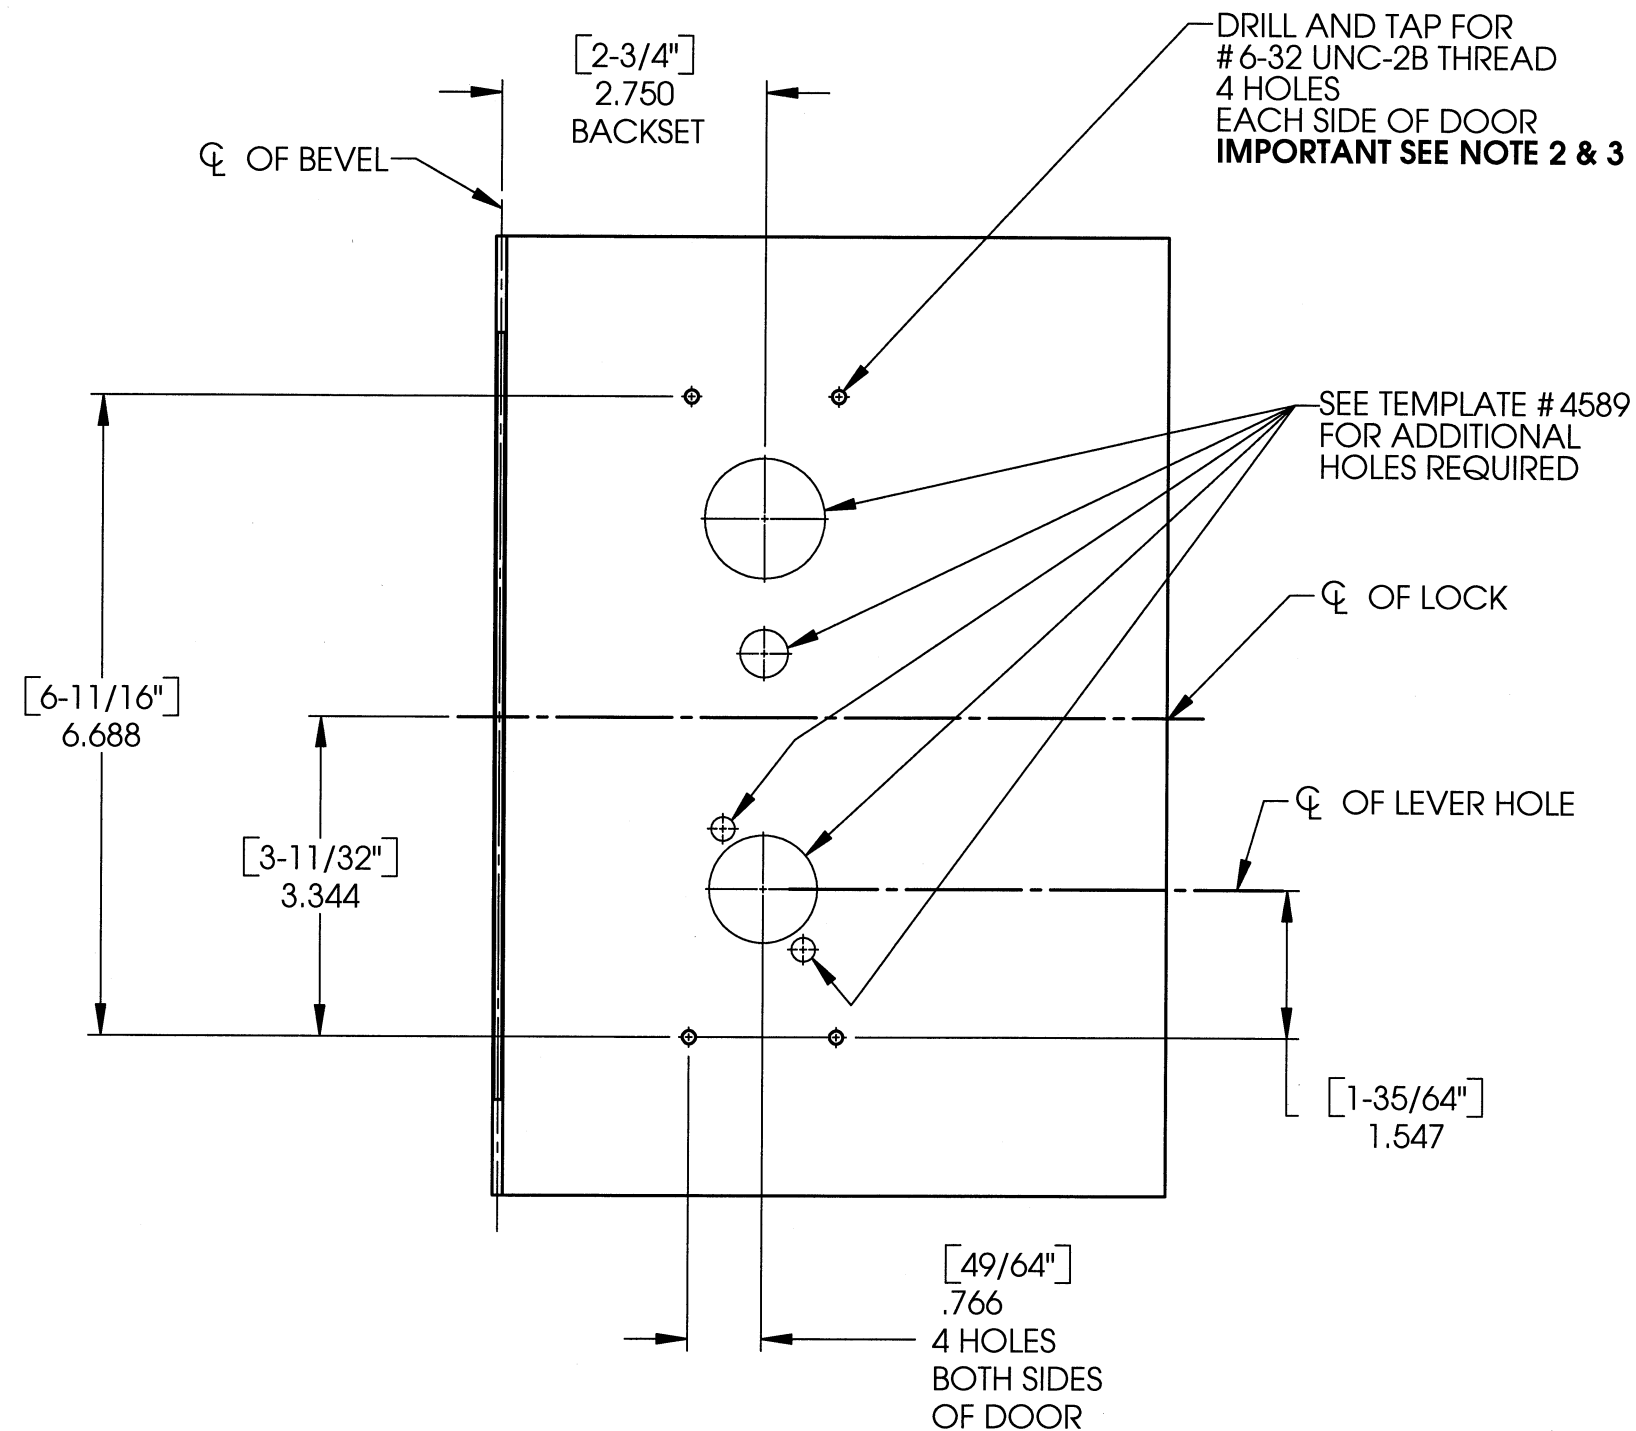

HOLES REQUIRED FOR WT ESCUTCHEON

NOTES:

1. TO ASSURE CORRECT ALIGNMENT OF TRIM, SCREW HOLES MUST BE LOCATED IN RELATION TO LEVER HOLE AFTER LOCK BODY IS INSTALLED IN DOOR. (REFERENCE TEMPLATE #4589)
2. SUITABLE REINFORCEMENT REQUIRED FOR MOUNTING SCREWS.
3. FOR TRIM ONE SIDE FUNCTIONS PUT HOLES ON TRIM SIDE ONLY.

SARGENT Manufacturing Company
100 Sargent Drive New Haven, CT 06511

7900 MORTISE LOCK
WT ESCUTCHEONS

RELEASE DATE

11-JUN-07

TEMPLATE NO.
4609 A