


SWITCH KIT K-101

- STEP 1: Remove two screws from bottom of hinge style case.
- STEP 2: With plate and spring removed, position switch assembly on plate as shown. Run wires thru existing hole of the formed tab opposite of tab used to position return spring.
- STEP 3: Resecure plate, spring and switch assembly to the hinge style housing with screws.

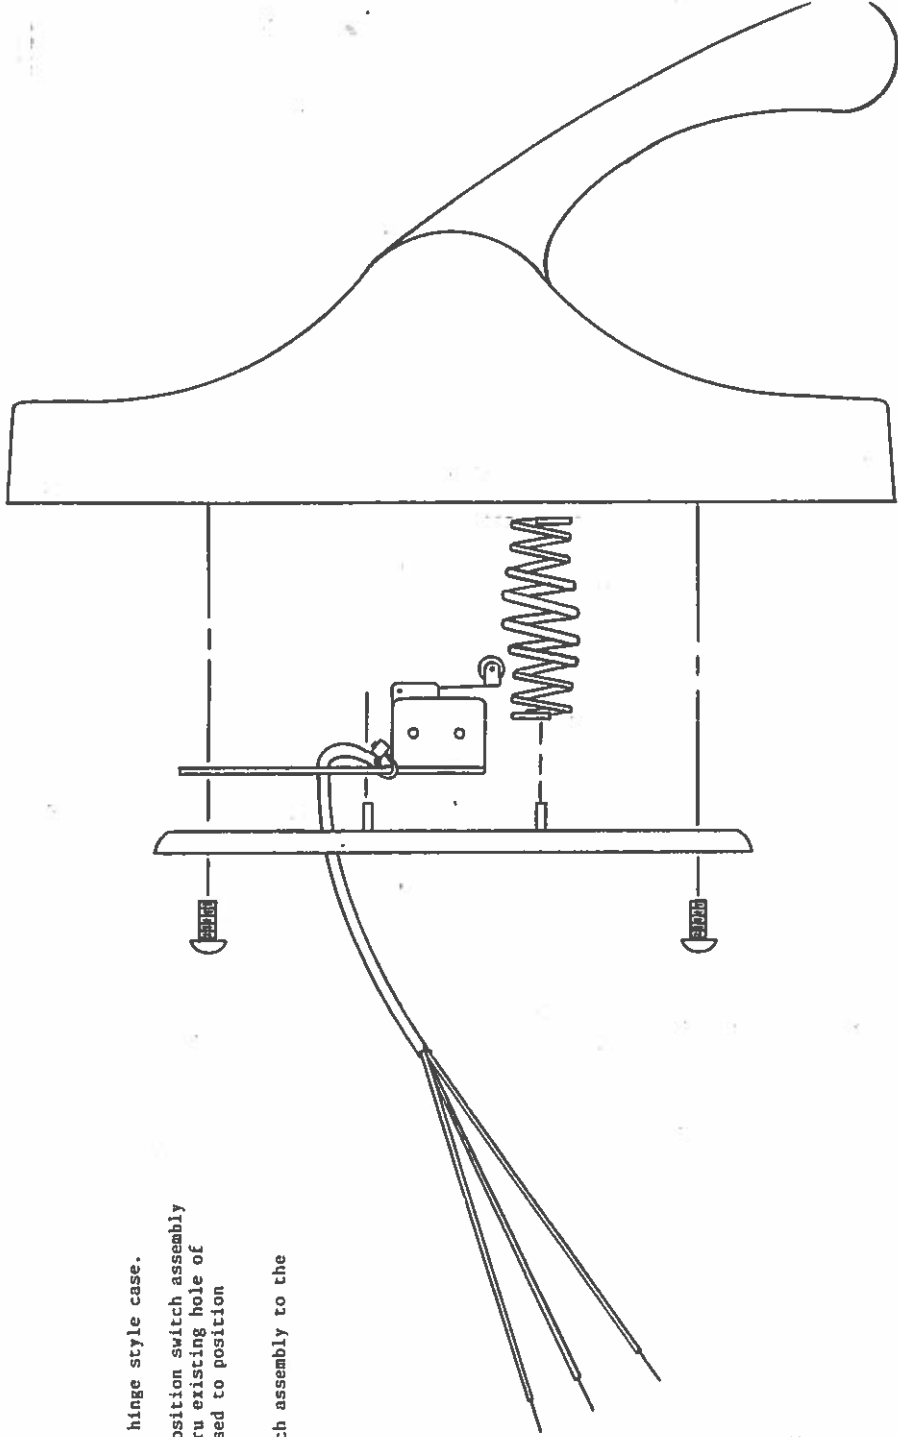

ELECTRICAL SPECIFICATION

- SWITCH RATING: 4 AMP, 250VAC
- RED WIRE (NORHALLY OPEN)
- GRAY WIRE (NORHALLY CLOSED)
- YELLOW WIRE (COMMON)

ARCHITECTURAL CONTROL SYSTEMS, INCORPORATED ST. LOUIS, MISSOURI	TOLERANCES UNLESS NOTED FRACTION ± 1/64 DECIMAL ± .008 ANGULAR ± 1°		DRILL ± .002 REAM ± .001 PUNCH ± .001
	DESCRIPTION K101 SWITCH KIT VON DUREN # 55	DRAWING NO. I.D. 1072	MATERIAL
DATE 6/27/04		SCALE 1 OF 1	SHEET 1 OF 1
REV	ENG ORDER	DRAWN BY MM	APPR BY MM
DO NOT SCALE THIS DRAWING			DATE 6/27/04