
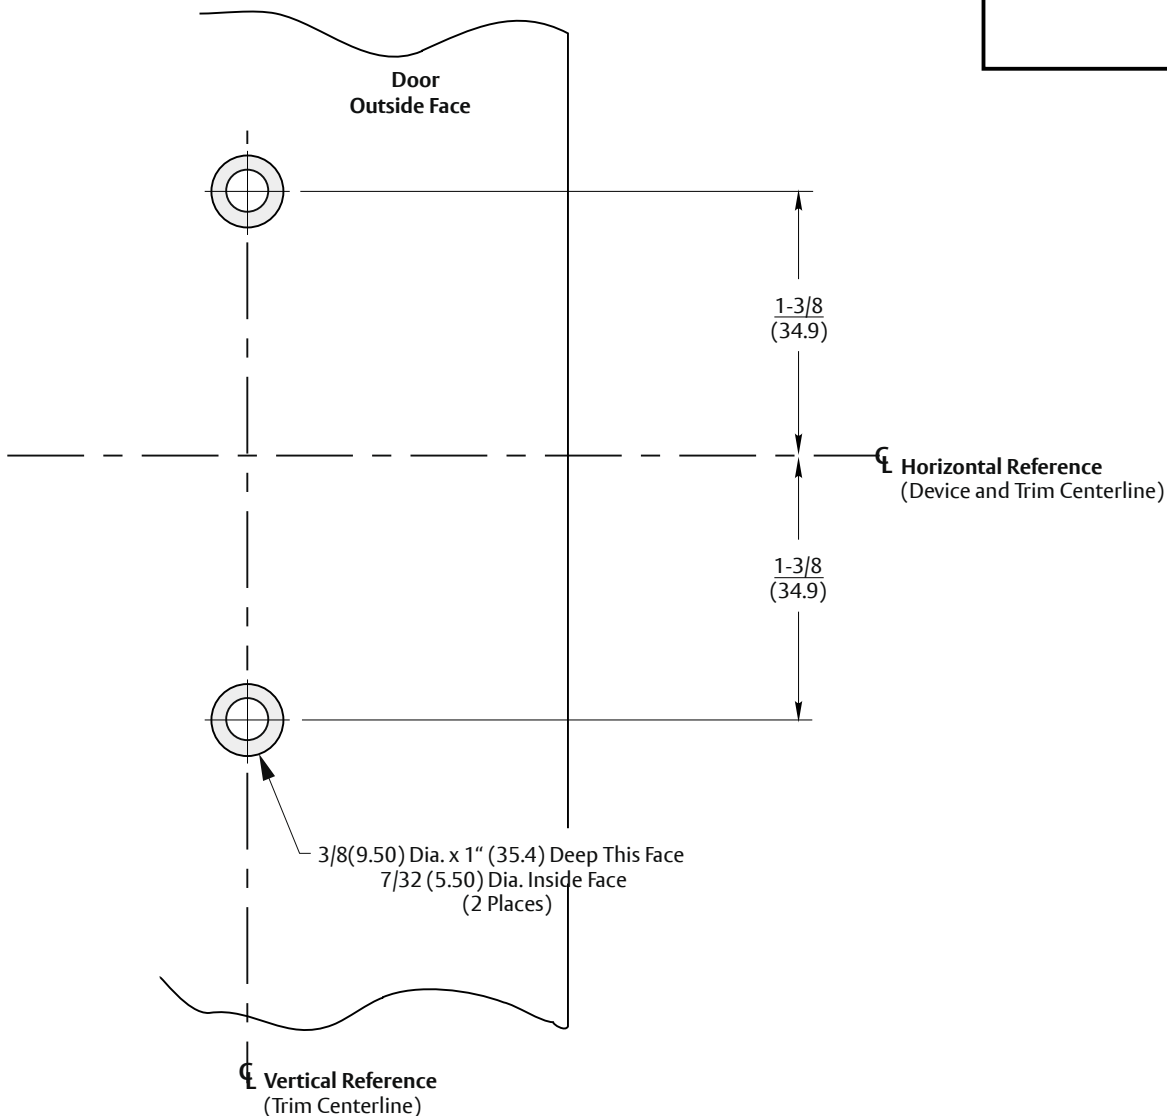


NOTES:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.
6. Provide adequate structural support to maintain door integrity during operation.

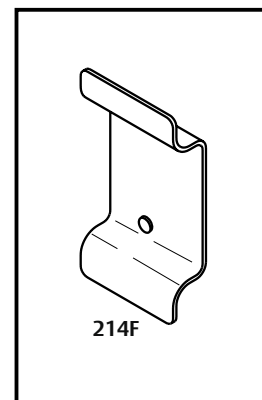

<p>RESPONSIBILITY DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.</p>	<p>214F Trim For 2100(F) Series Rim and Vertical Rod Exit Devices Wood Door Preparation</p> <p>Contact us for support at 1-855-557-5078.</p>	<p style="text-align: center; font-size: 2em; font-weight: bold;">ASSA ABLOY</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="font-size: 0.8em;">SUPERSEDES</td> <td style="text-align: center; font-size: 1.2em;">8/99</td> <td colspan="2" style="font-size: 0.8em;">DO NOT SCALE DRAWING</td> </tr> <tr> <td style="font-size: 0.8em;">TEMPLATE NUMBER</td> <td style="text-align: center; font-size: 1.2em;">7400-1214</td> <td style="font-size: 0.8em;">DATE</td> <td style="text-align: center; font-size: 1.2em;">12-23</td> </tr> </table>	SUPERSEDES	8/99	DO NOT SCALE DRAWING		TEMPLATE NUMBER	7400-1214	DATE	12-23
SUPERSEDES	8/99	DO NOT SCALE DRAWING								
TEMPLATE NUMBER	7400-1214	DATE	12-23							

Experience a safer and more open world