


Installation Instructions for Horizontal application between door leaves:

1. Do not scale drawing.
2. Dimensions are given in inches (mm).
3. Hang the doors per the manufactures instructions. The doors should be square and plumb and have the correct gaps between the doors and finished floor.
4. Insert the 60-7110-0002-999 in the 9/16" (14) dia. hole in the inactive door.
5. Install black hole plug in the 5/8" (16) dia. hole in the active door.

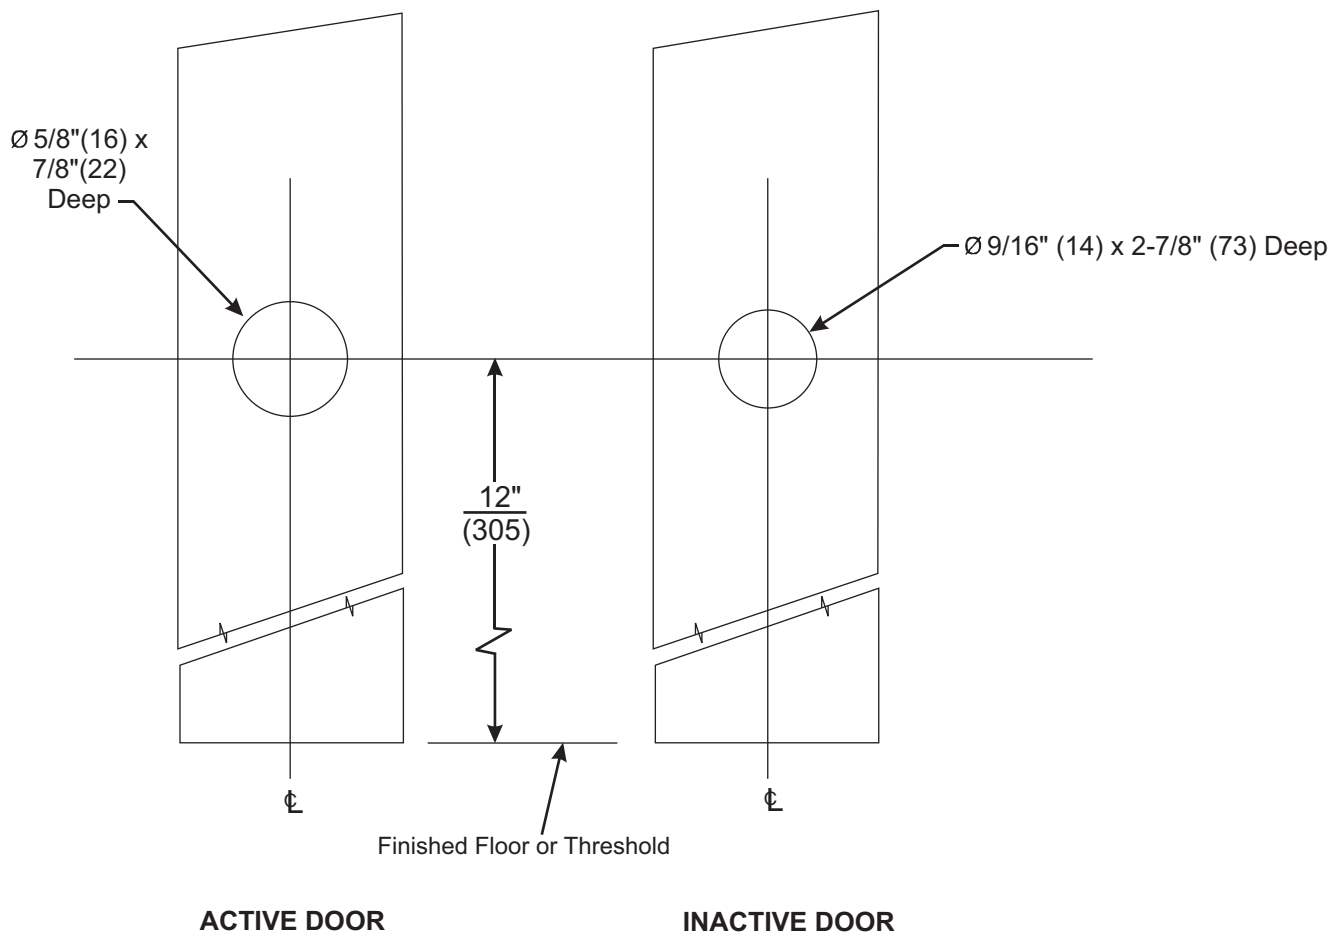

Yale® Thermal Pin Assembly
For Fire Rated Less Bottom Rod Applications
Pair of Wood or Metal Doors




1-800-438-1951
www.yalelocks.com

TEMPLATE NUMBER	PAGE	DATE
7470-1700	1 of 2	12-16

Installation Instructions for Vertical installation between door leaf and finished floor:

Notes:

1. Do not scale drawing.
2. Dimensions are given in inches (mm).
3. Hang the doors per the manufactures instructions. The doors should be square and plumb and have the correct gaps between the doors and finished floor.

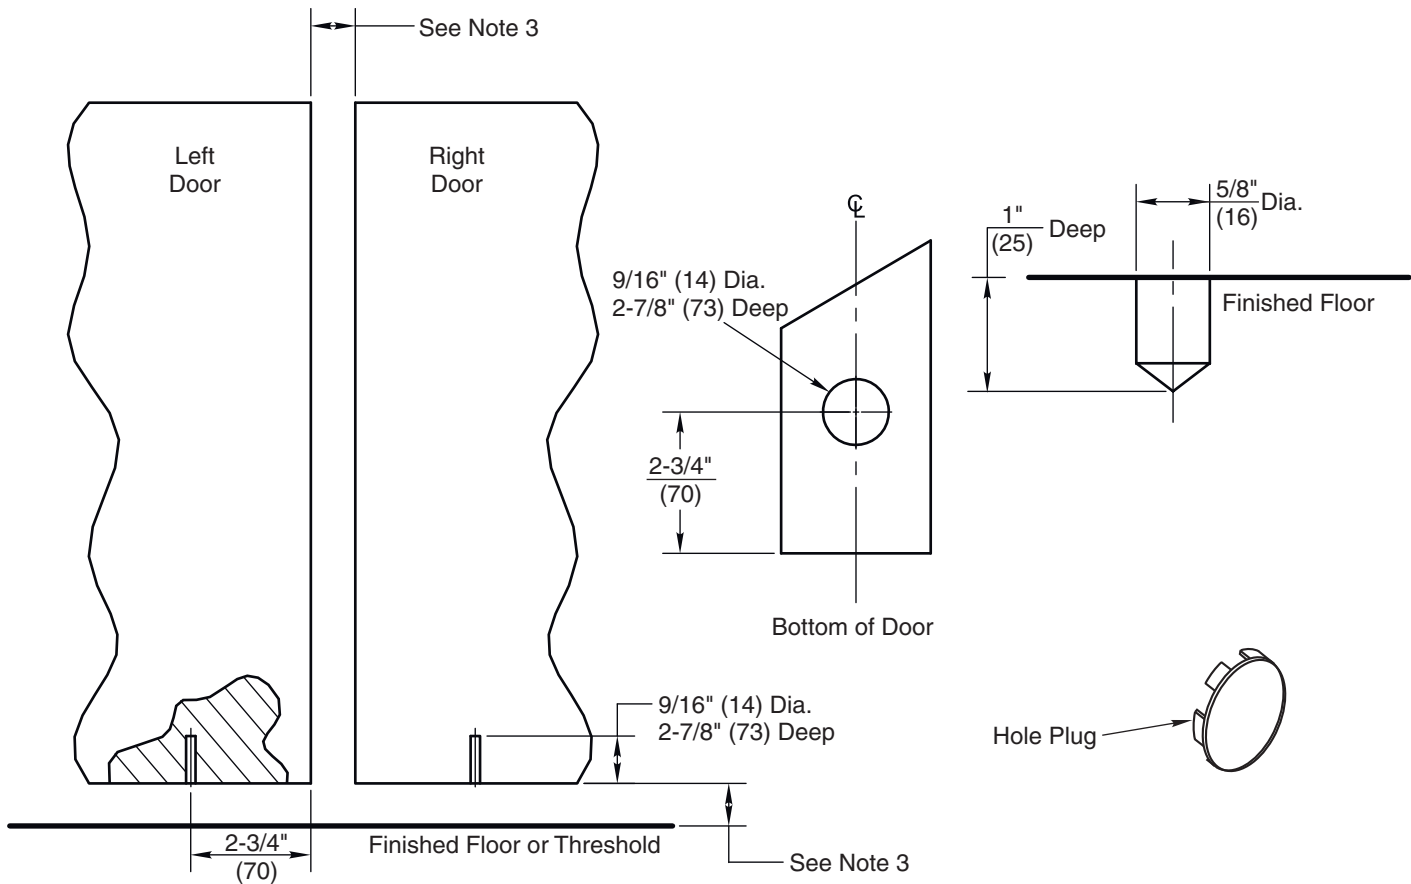

Yale® Thermal Pin Assembly
For Fire Rated Less Bottom Rod Applications
Pair of Wood or Metal Doors

Yale

1-800-438-1951
www.yalelocks.com

TEMPLATE NUMBER

7470-1700

PAGE

2 of 2

DATE

12-16