


5300 SERIES Knob Locks		
Backset	Latch No.	Link No.
$\frac{2-3/4}{(70)}$	380AN, 380BN	-
$\frac{3-3/4}{(95)}$	3380AN, 3380BN	-
$\frac{5}{(127)}$	380AN, 380BN	381AN
$\frac{6}{(152)}$	3380AN, 3380BN	381AN

Notes:

1. When ANSI A115.2 (Fig. 1) Strike is specified, refer to No. 497 Strike, Template No. 7102-0003.
2. When ANSI A115.2 (Fig. 2) Strike is specified, refer to No. 371 Strike, Template 7102-0005.
3. Dimensions marked with * have tolerances of +.015, -.000
4. All dimensions given in inches (mm).
5. For universal or square edge doors use latchbolts with flat front (i.e. F380AN, F3380AN, etc.)

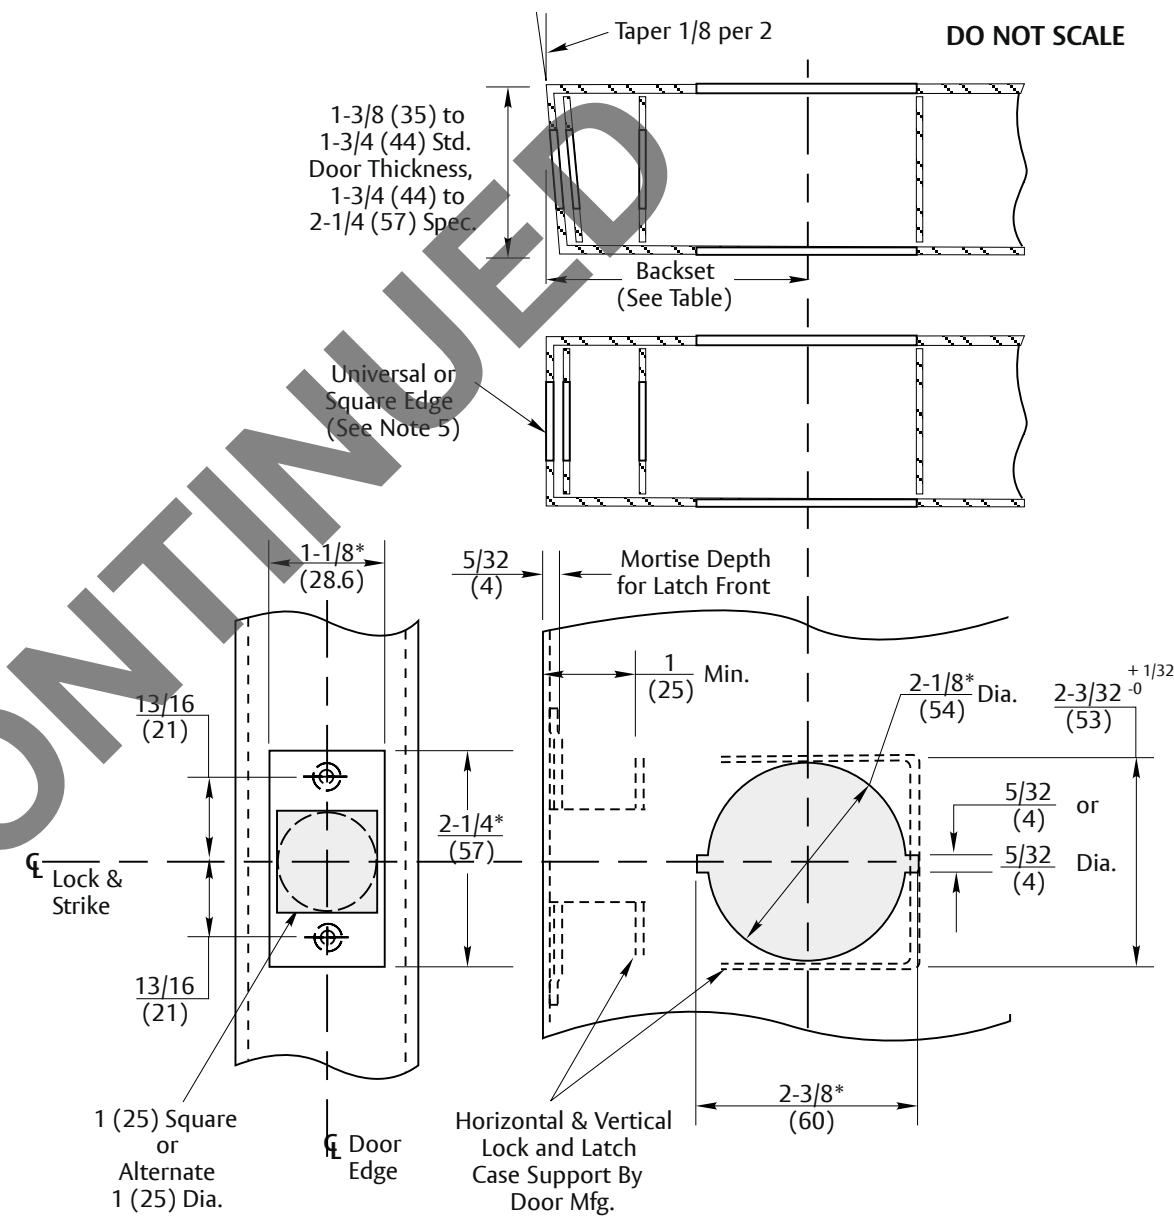

Experience a safer and more open world

5300 Series Knob Cylindrical Locks - 1-1/8" Wide Front
H.M. Door Preparation (ANSI A115.2) (FIG. 1)
2-3/4" and Optional Backsets

Template Number: 7150-0062
Sheet: 1 of 1
Date: 12/23

ASSA ABLOY

1-855-557-5078
www.assaabloy.com