



NOTES:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.

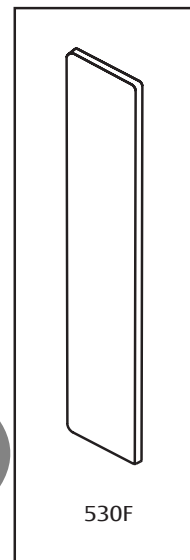

530F

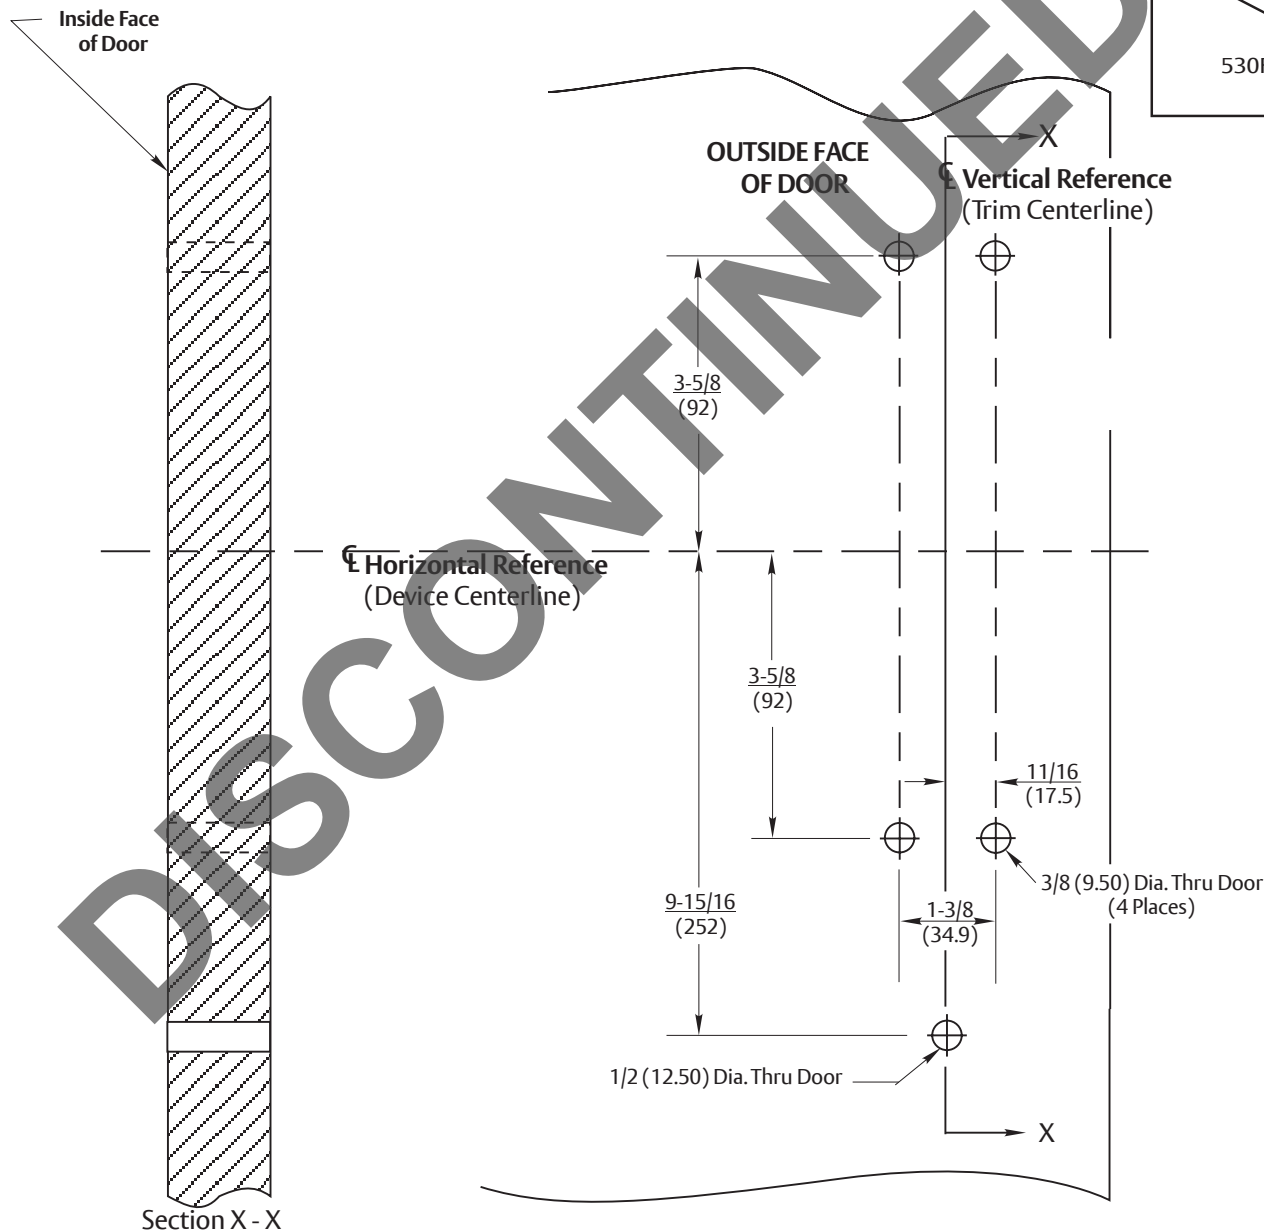

Section X - X

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

530F Trim

with 1500(F), 2100(F) or 7100(F) Series Rim, Mortise and Vertical Rod Exit Devices
Wood or Composite Door Preparation

Contact us for support at 1-855-557-5078.

ASSA ABLOY

| | | |
|-----------------|-----------|----------------------|
| SUPERSEDES | 8/99 | DO NOT SCALE DRAWING |
| TEMPLATE NUMBER | 7400-1530 | DATE 12-23 |