
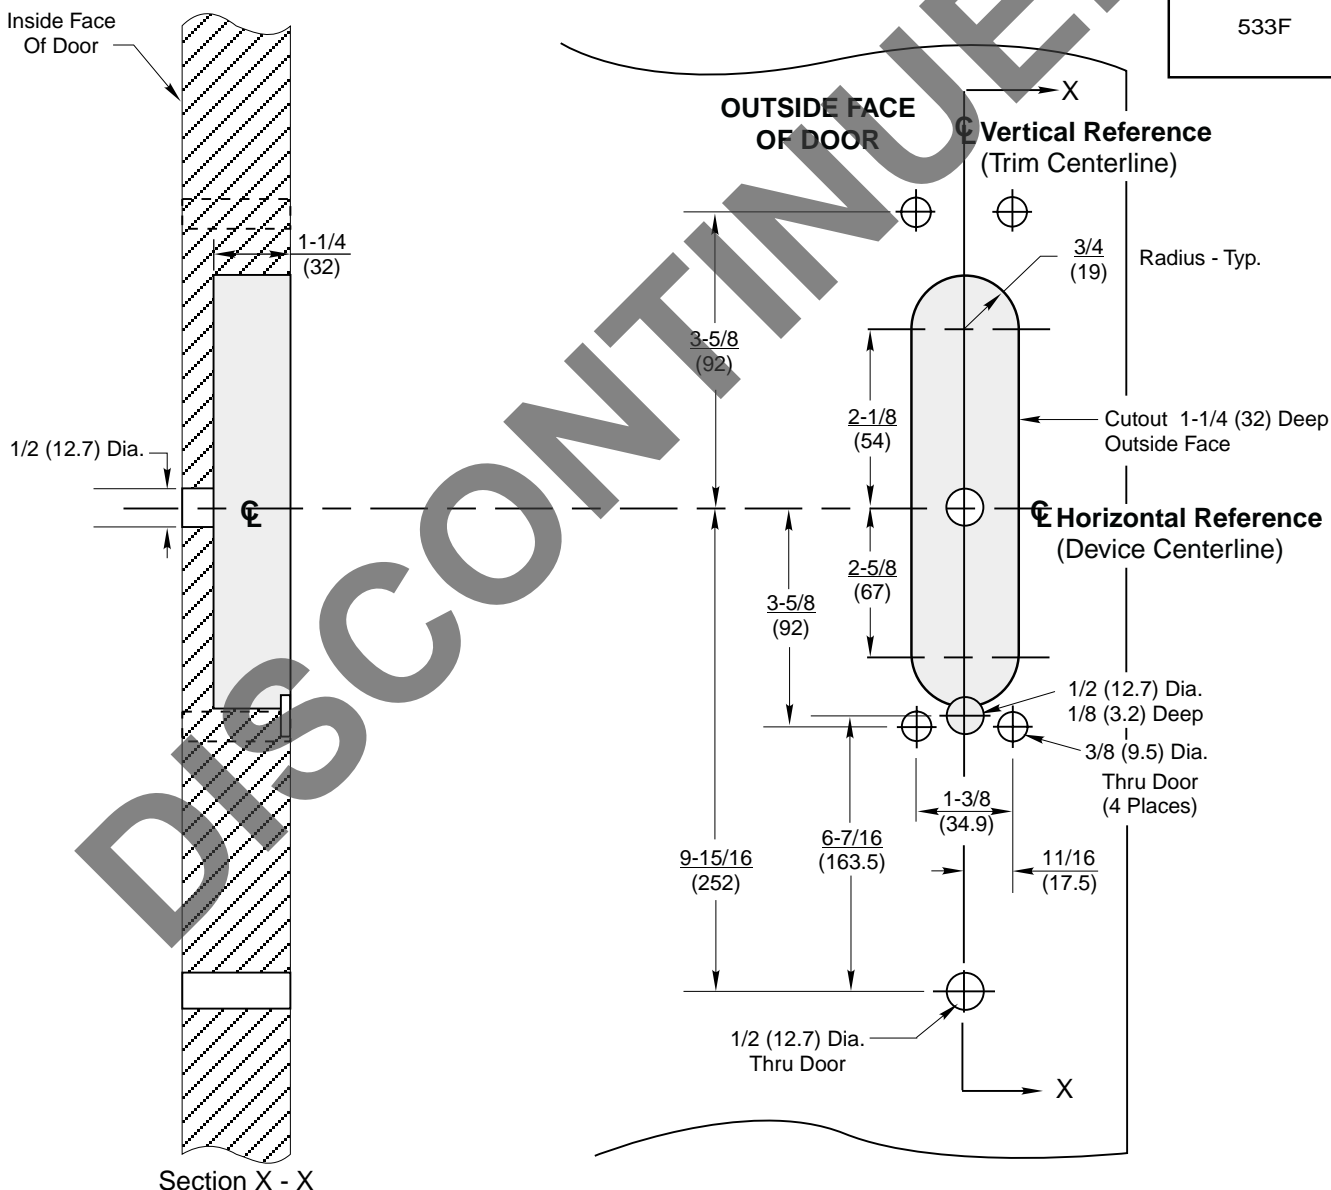


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Dimensions given about a centerline are symmetrical.
8. Unspecified radii 1/8 (3.20) maximum.

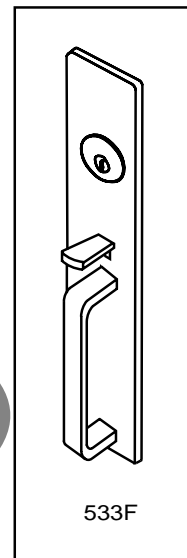

DISCONTINUED

533F Trim Application
 With 1500(F), 2100(F) or 7100(F) Series
 Rim and Vertical Rod Exit Devices
Wood or Composite Door Preparation

Yale	
Yale Commercial Locks and Hardware	
www.yalecommercial.com	
TEMPLATE NUMBER	DATE
7400-1533-1	01-02