



Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template 7400-0000.
6. Prepare mounting holes when installing trim.
7. Provide adequate internal support to prevent door deformation from bolting trim to the device.

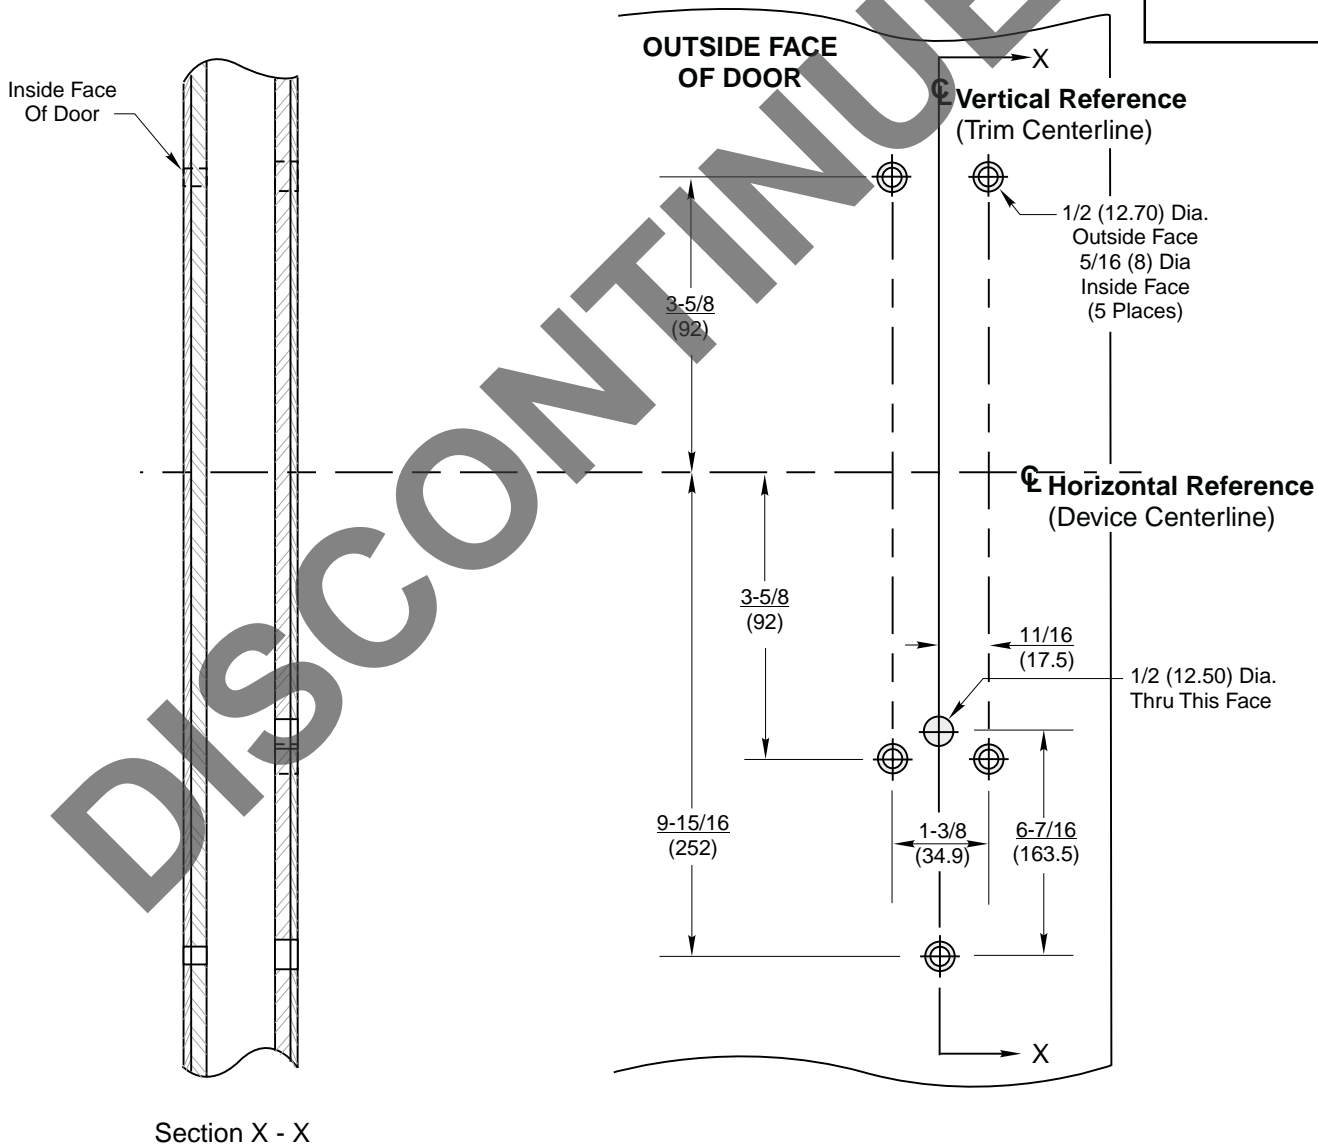

534F Trim
 With 1500(F), 2100(F) or 7100(F) Series
 Rim, Mortise and Vertical Rod Exit Devices
Metal Door Preparation

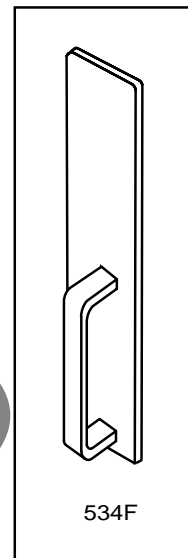

Yale Commercial Locks and Hardware

www.yalecommercial.com

TEMPLATE NUMBER

7400-0534

DATE

8-99