

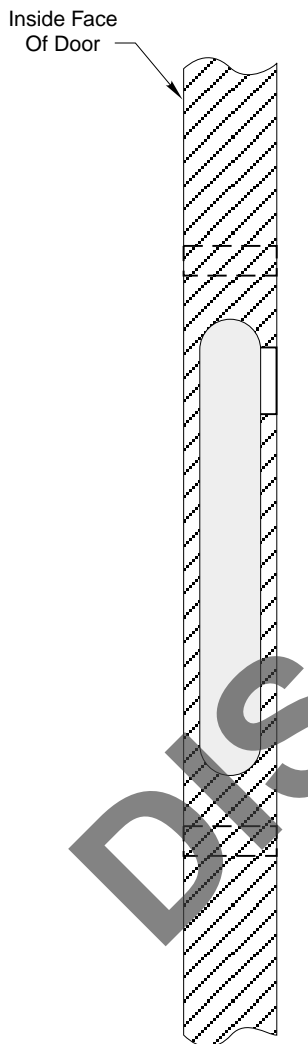


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Shaded area represents mortise lock cavity from device template.

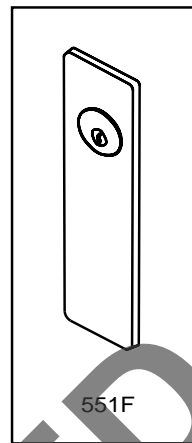

Section X - X

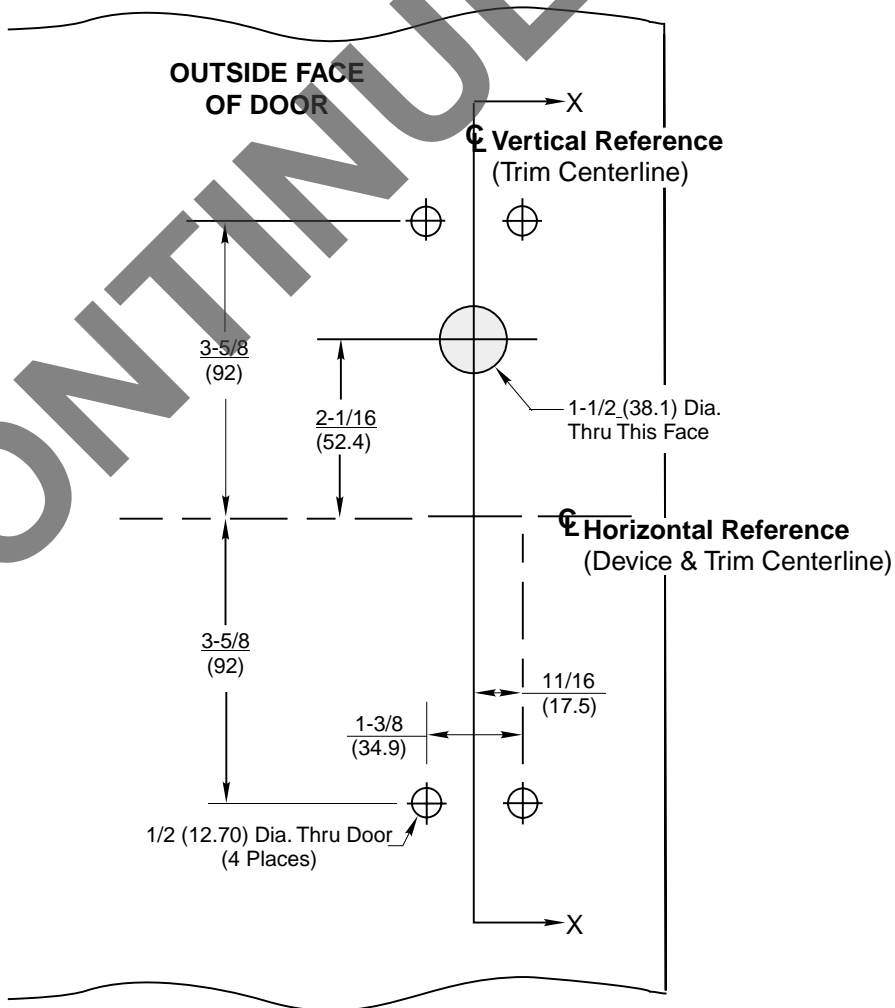

551F Trim
 With 1530(F) or 7130(F) Series Mortise Exit Devices
Wood or Composite Door Preparation

Yale	
Yale Commercial Locks and Hardware	
www.yalecommercial.com	
TEMPLATE NUMBER	DATE
7400-1551	9-06