

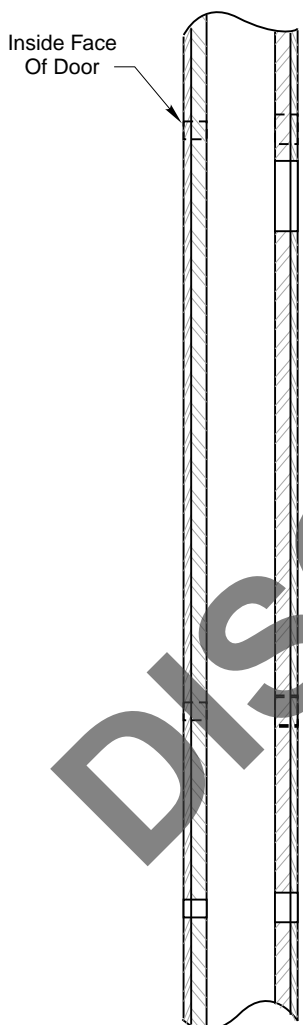


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template 7400-0000.
6. Prepare mounting holes when installing trim.
7. Provide adequate internal support to prevent door deformation from bolting trim to the device.

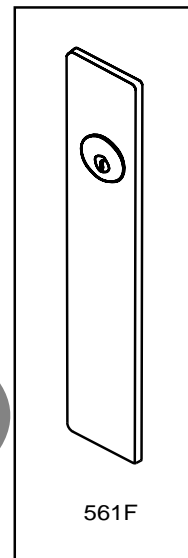

Section X - X

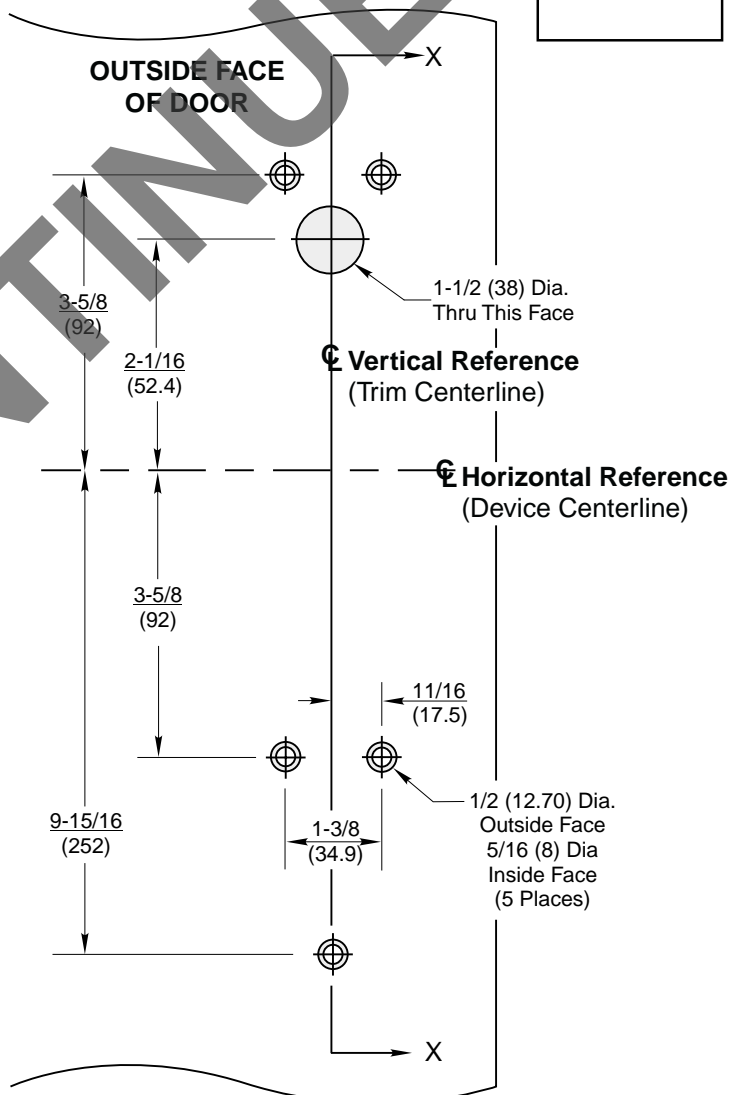

DISCONTINUED

561F Trim
With 1530(F) or 7130(F) Series Mortise Exit Devices
Metal Door Preparation

Yale

Yale Commercial Locks and Hardware

www.yalecommercial.com

TEMPLATE NUMBER

7400-0561

DATE

8-99