


NOTES:

1. Do not scale drawing. Dimensions shown in inches(mm).
2. LHR Door shown. Preparation is typical or both door hands.
3. Prepare mounting holes when installing the hardware.
4. Provide adequate structural support to maintain transom rigidity and integrity after installation and during door operation.

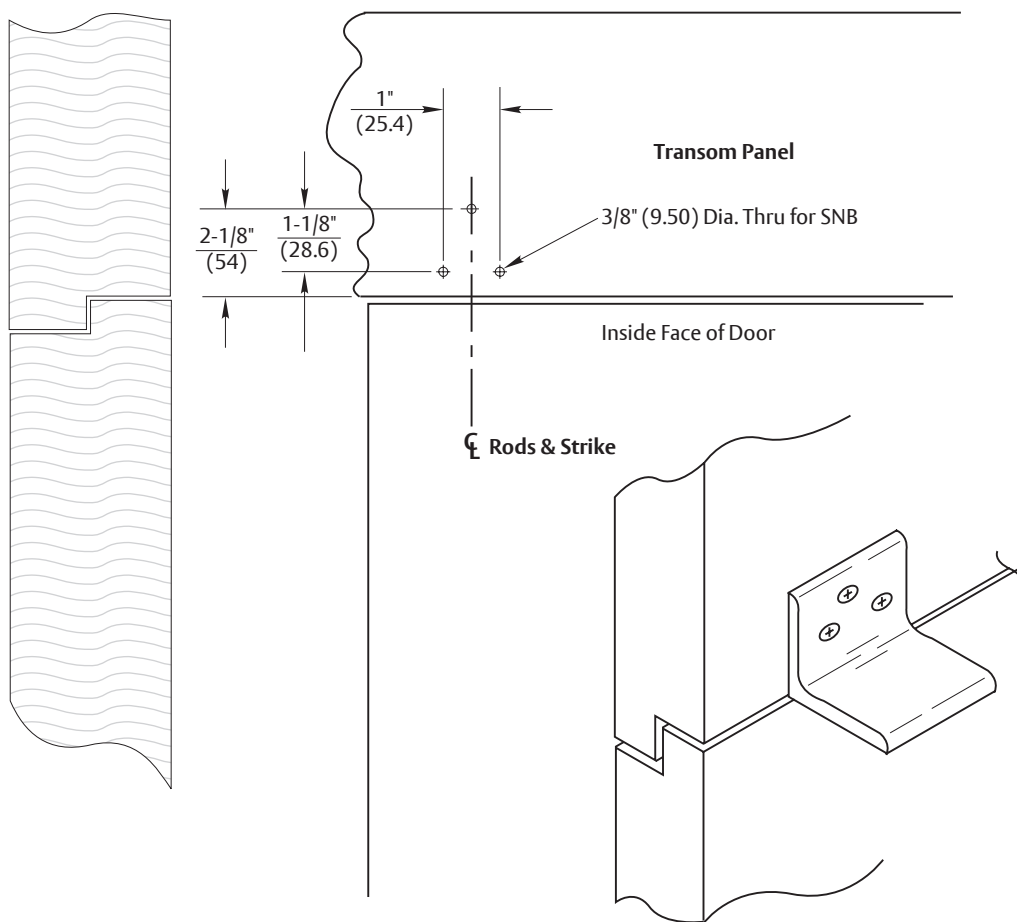

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

797 Auxiliary Bracket for Surface Vertical Rod Exit Devices

Application to FlushWood Transom

Contact us for support at 1-800-438-1951.

ASSA ABLOY

SUPERSEDES	7400-1797 (08-99)	DO NOT SCALE DRAWING
TEMPLATE NUMBER	7400-1797	DATE 01-24