



Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing the trim.
6. Provide adequate structural support to maintain door integrity during operation.
7. At specifiers option stock door with ANSI A115.W2 cutout may be substituted for surface mounted devices. These doors require a filler plate for the door edge cutout (by others).

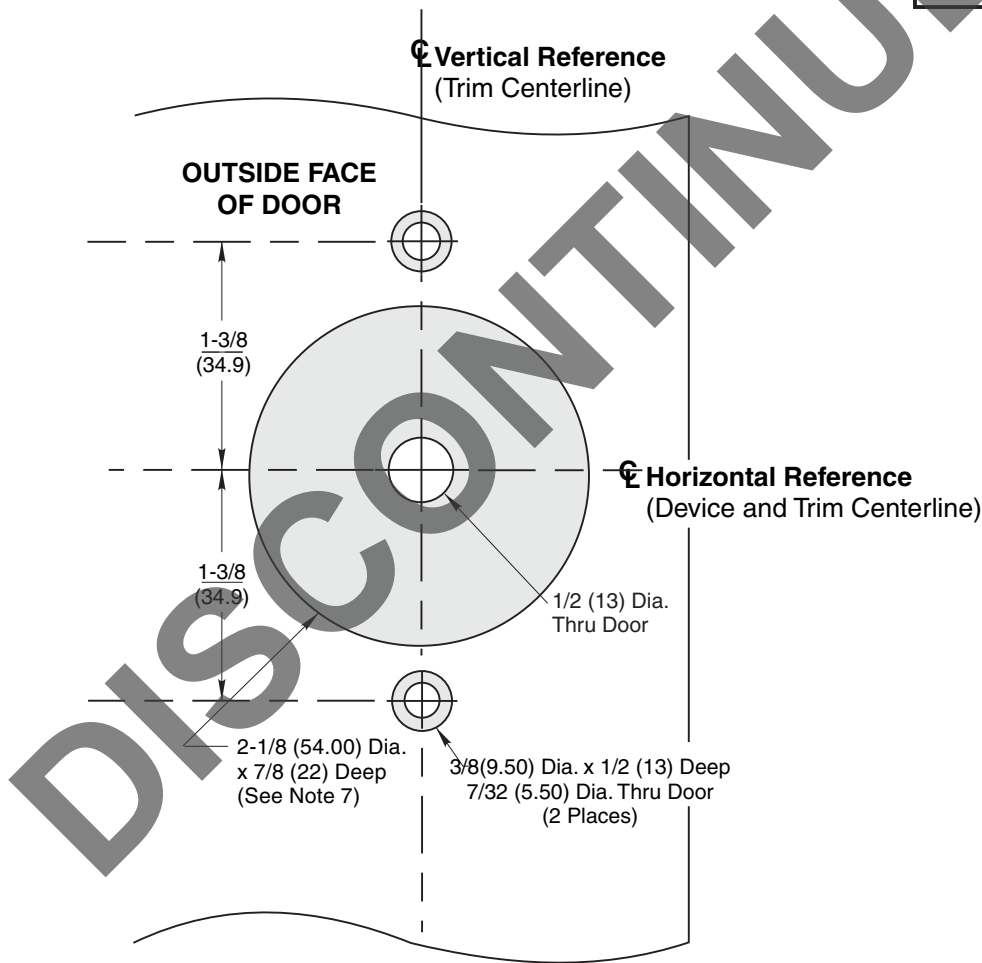

CA542F and CA544F Trim
 With 2100(F), 6100(F), or 7100(F)
 Rim and Vertical Rod Exit Devices
Wood or Composite Door Preparation

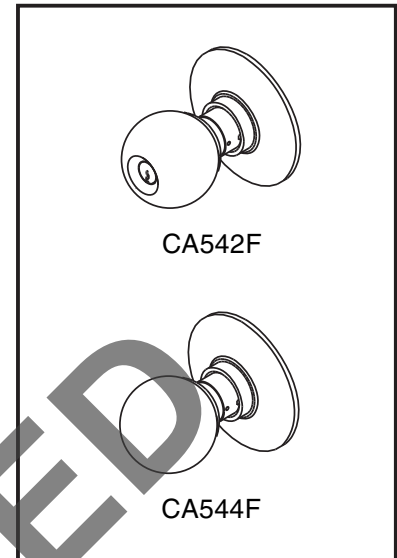

1-800-438-1951
 www.yalelocks.com

TEMPLATE NUMBER

7400-1542

DATE

05-15