

1. Install Roses

- a. Insert rose onto outside rose plate.
- b. Insert posts of outside rose plate into thru-bolt holes in door and lock body. Align inside rose plate with holes on inside surface of door. Insert two connecting screws through inside rose plate into the outside rose plate posts. Tighten securely.
- c. Insert inside rose onto rose plate and insert bushings in both roses.

2. Install Lever Handles

- a. For swivel spindles, unscrew the two halves of the spindle one full turn. Turn the ramp on the spindle as shown in the illustration. Insert the outside lever/spindle assembly through the outside rose, door, lock and inside rose
- b. Slide the inside lever handle onto the spindle and ensure that the lever is tight against the rose. Using the allen wrench provided, tighten the set screw securely.

3. Install Cylinders (if required)

Slip cylinder ring over threaded portion of cylinder. Thread cylinder into lock body. Be sure "ASSA ABLOY" on cylinder face is upright. Tighten cylinder set screw accessible thru the lock front.

4. Install Thumbturn (if required)

Attach thumbturn mounting plate with two No. 6 wood screws supplied. Insert thumbturn shaft into lockbody and secure thumbturn and rose assembly with two set screws provided.

5. Attach Armor Front

- a. Extended deadbolt (if required) and attach the armor front with the two No. 8 machine screws provided.


6. Check Operation of Lock

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Any retrofit or other field modification to a fire rated opening can potentially impact the fire rating of the opening, and ASSA ABLOY makes no representations or warranties concerning what such impact may be in any specific situation. When retrofitting any portion of an existing fire-rated opening, or specifying and installing a new fire-rated opening, please consult with a code specialist or local code official (Authority Having Jurisdiction) to ensure compliance with all applicable codes and ratings.

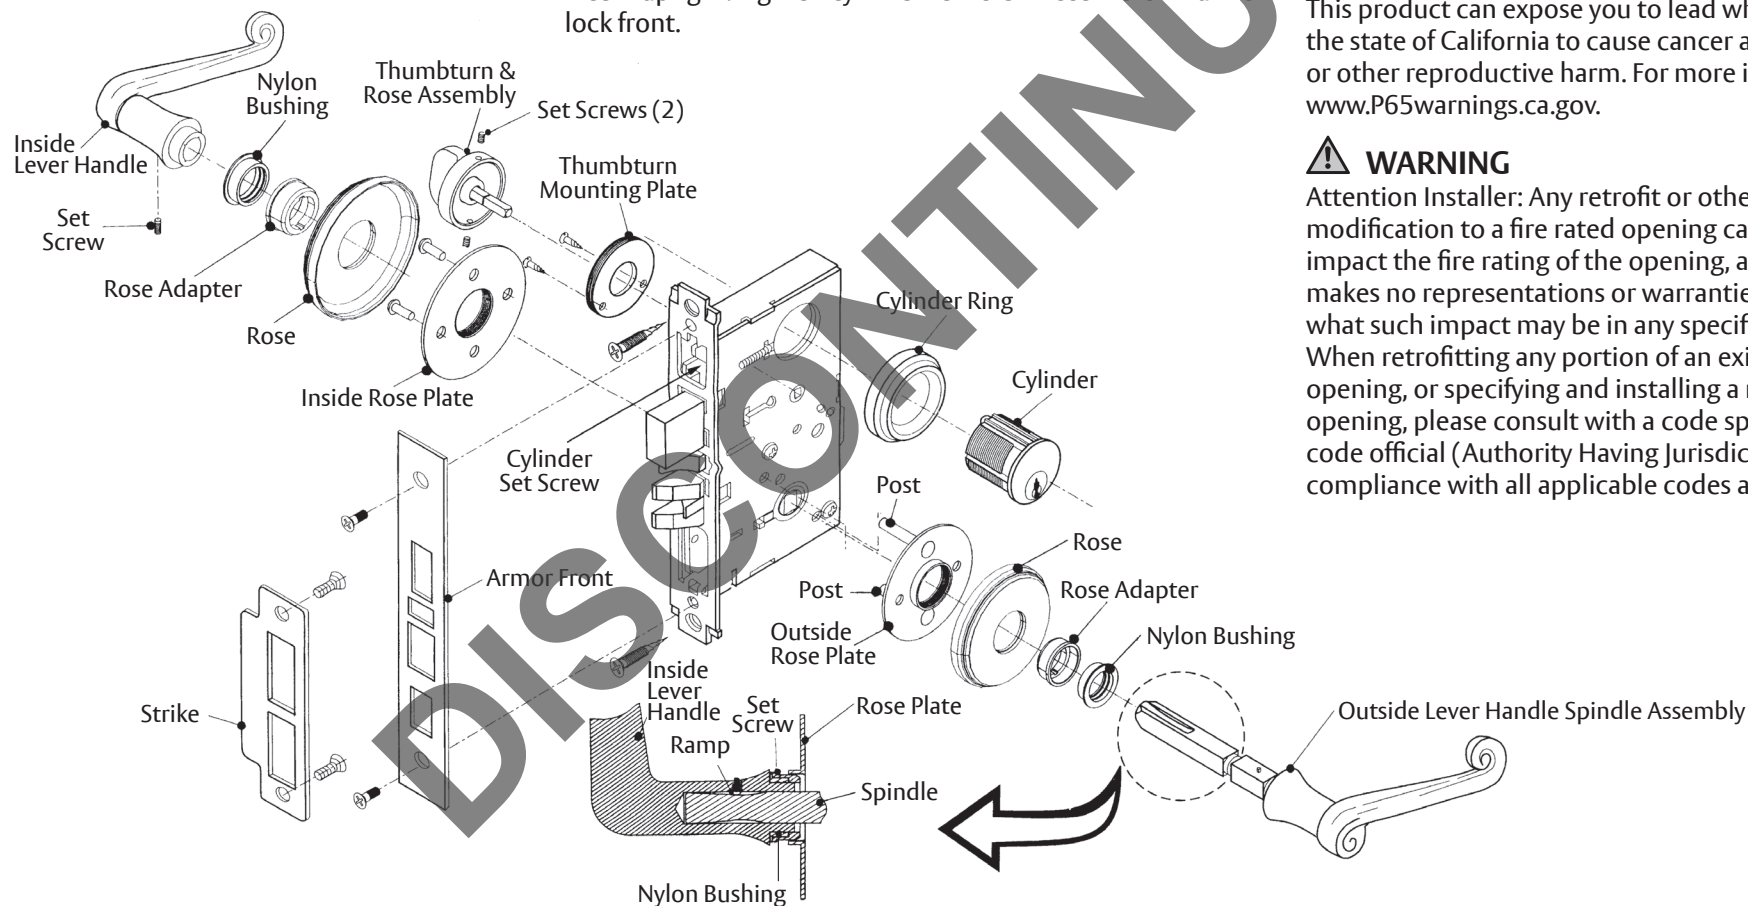

Experience a safer
and more open world

Copyright © 1996, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

Mortise Locks
4600, 8600 & 8700 Series
Designer Sectional Trim
Installation Instructions (Trim)

Instruction Number:
80-9086-0019-010
Sheet: 1 of 1
Date: 01/24

ASSA ABLOY
1-800-438-1951
www.assaabloy.com