

9VDC Hardwire Harness

Supplemental

Installation Instructions

ACCENTRA

ASSA ABLOY

This Installation Instruction Supplement is for adding the 9VDC hardwire option to the existing alarm products (7116, & SDA16).

Installation

1. Connect the (two wire) terminal of the Wiring Harness to J1 on the Circuit Board.
2. Connect the (three wire) terminal to J3.
3. Connect the (six wire) terminal to J4.
4. Connect the Grounding Lug to the 2nd Mounting Hole on the Circuit Board (see Figure 1) by removing the screw, placing the grounding lug over the screw, and then re-installing the screw.
- *5. For SVR option see Figure 2. Connect SVR Ingress Signal Switch to the Wire Harness via (2) Methode Connector as shown.

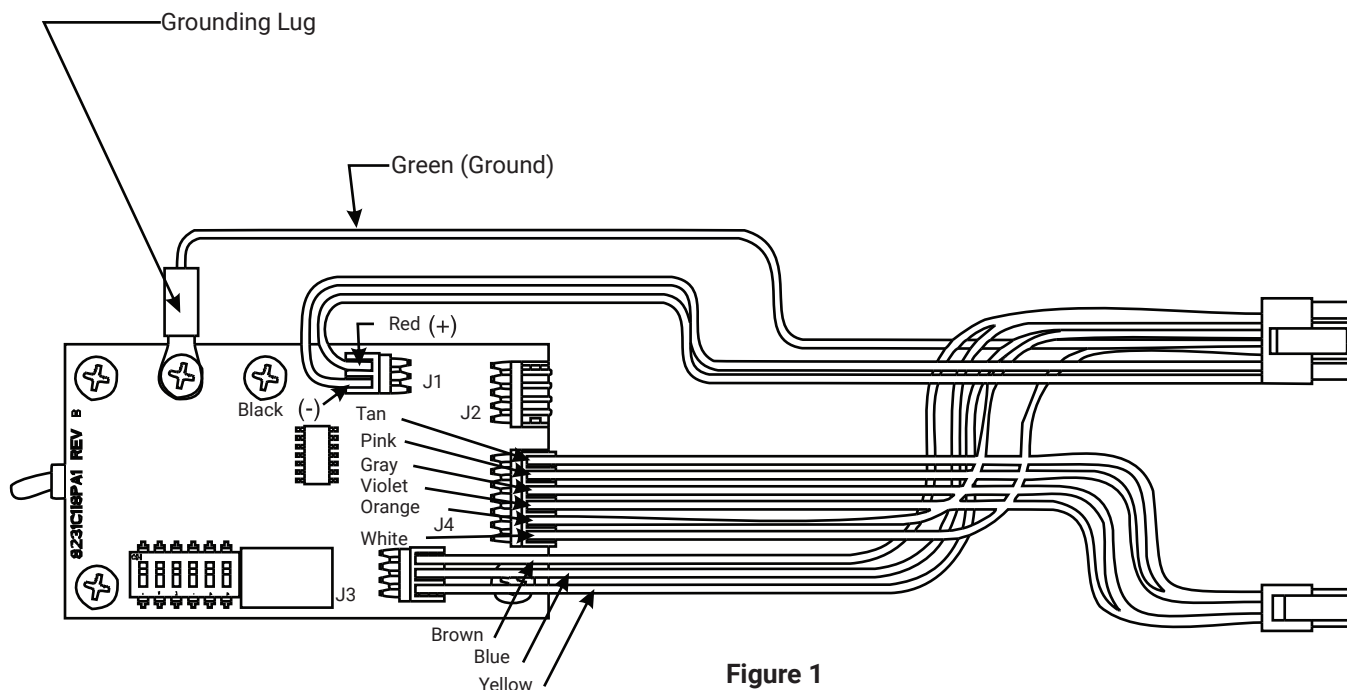


Figure 1

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Any retrofit or other field modification to a fire rated opening can potentially impact the fire rating of the opening, and ASSA ABLOY makes no representations or warranties concerning what such impact may be in any specific situation. When retrofitting any portion of an existing fire-rated opening, or specifying and installing a new fire-rated opening, please consult with a code specialist or local code official (Authority Having Jurisdiction) to ensure compliance with all applicable codes and ratings.

1-855-557-5078 Ext. 2 • www.accentra-assaabloy.com

80-8470-0095-000 04/24

SVR Option Black

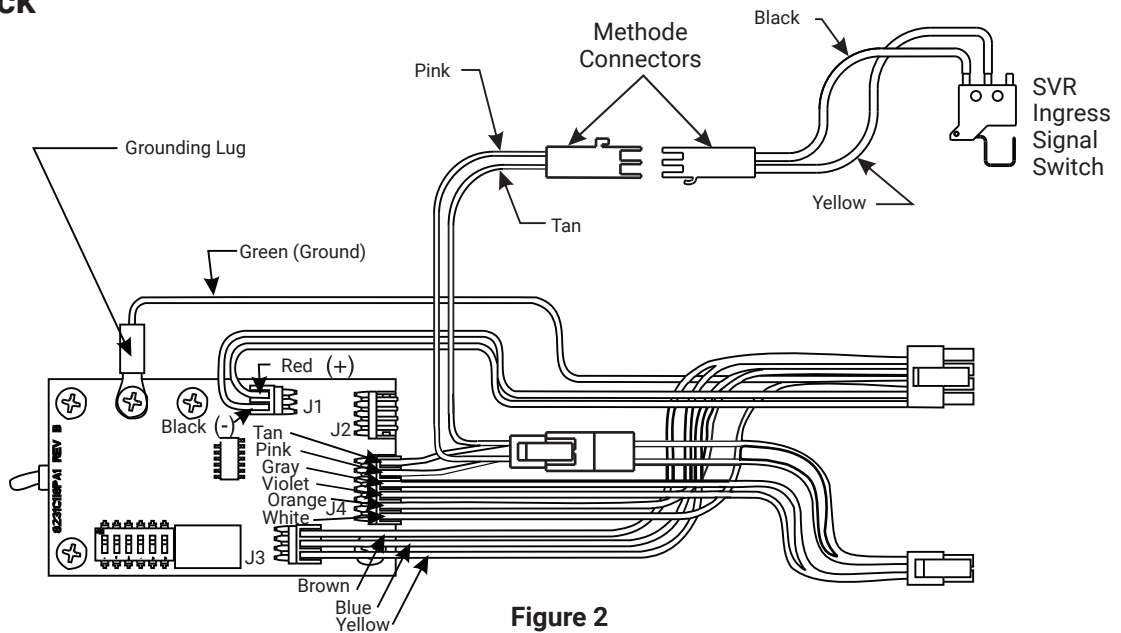


Figure 2

ITEM	COLOR	FUNCTION
1	BLACK	Ground (-)
2	RED	Power (+)
3	WHITE	REX
4	GREEN	Earth Ground
5	ORANGE	REX
6	BLUE	(C) Remote Relay
7	BROWN	(NO) Remote Relay
8	YELLOW	(NC) Remote Relay
9	VIOLET	Tamper
10	GRAY	Tamper
11	PINK	Reset
12	TAN	Reset

