



Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Dimensions are in inches (mm).
3. LHR door shown. (RHR opposite)
4. For door reinforcement see template 7400-0000.
5. Prepare mounting holes when installing trim.
6. Provide adequate internal support to prevent door deformation after trim is bolted to the device.
7. Dimensions given about a centerline are symmetrical.
8. Unspecified radius 1/8" (3.2) maximum.
9. Do not scale drawing.
10. An external door position switch (model number DPS1) is included. Use and installation location to be specified by others.

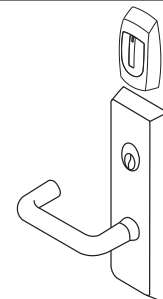

692F, 693F, 694F, 695F, & 696F x SYM Trim

Note: Lever design prefix does not affect door prep.

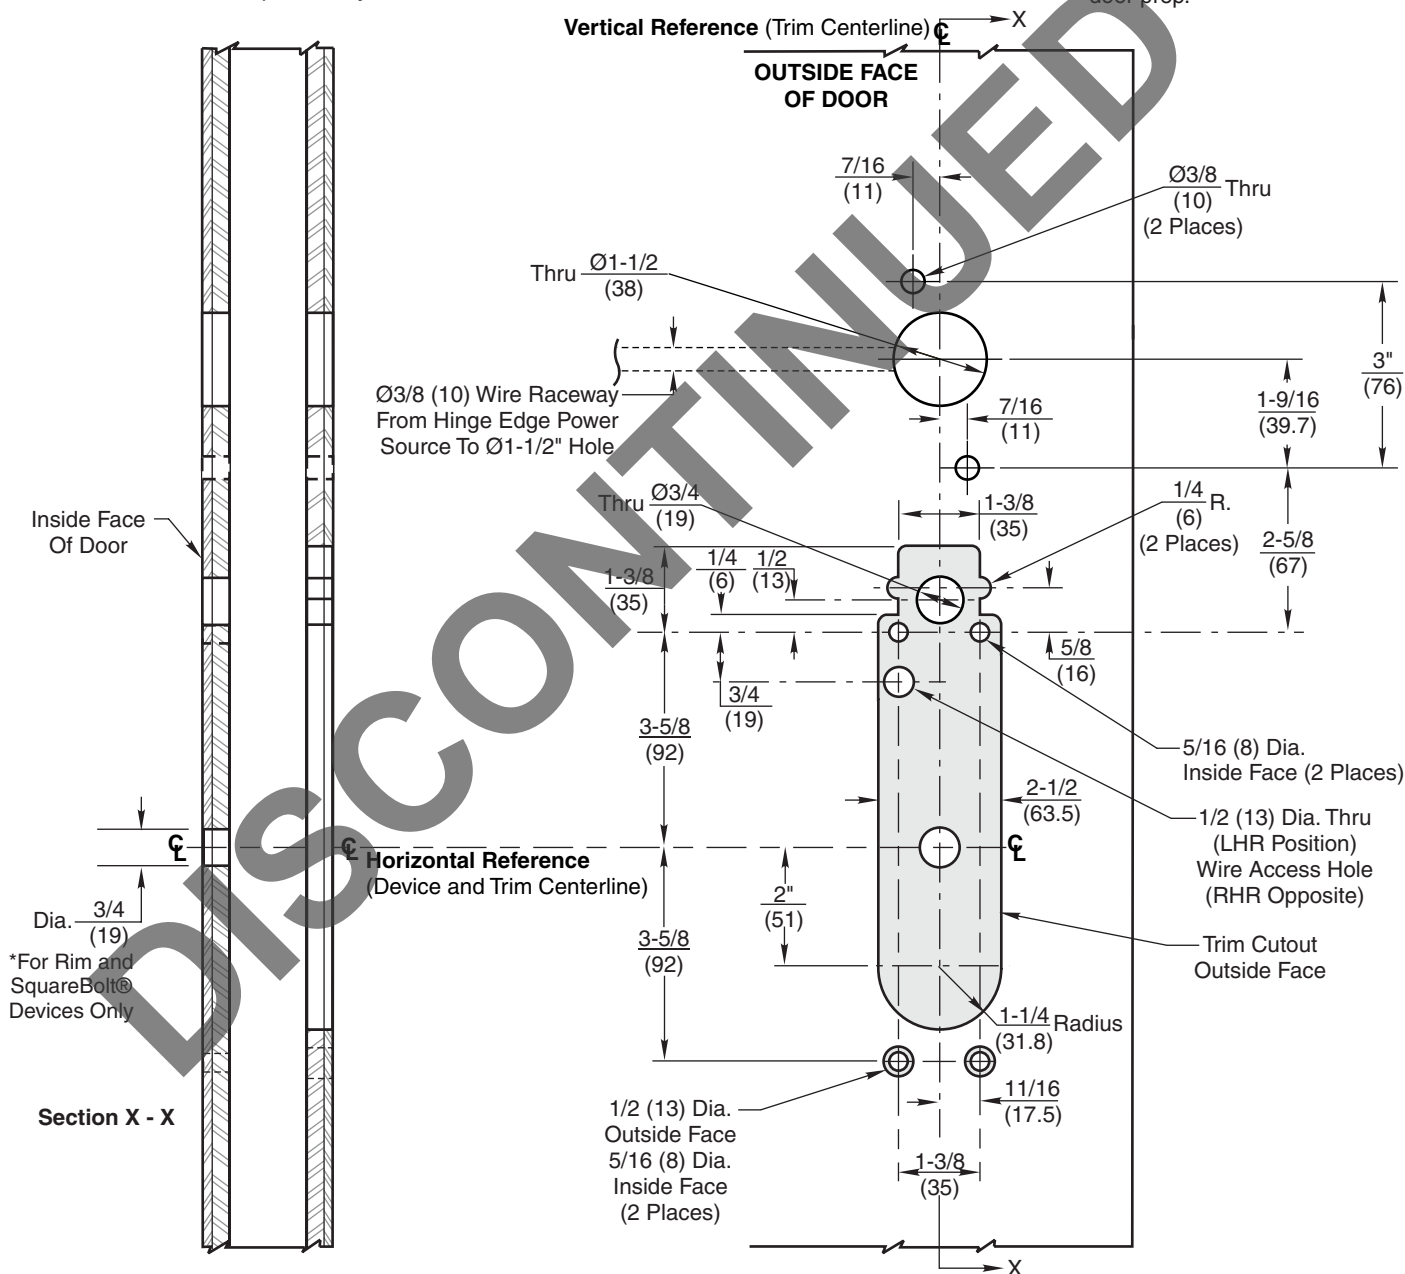

Symphony®
692F, 693F, 694F, 695F, & 696F Trim
For Use With 7100 Series Exit Devices
Metal Door Preparation



TEMPLATE NUMBER	DATE
7400-0692	03-13