
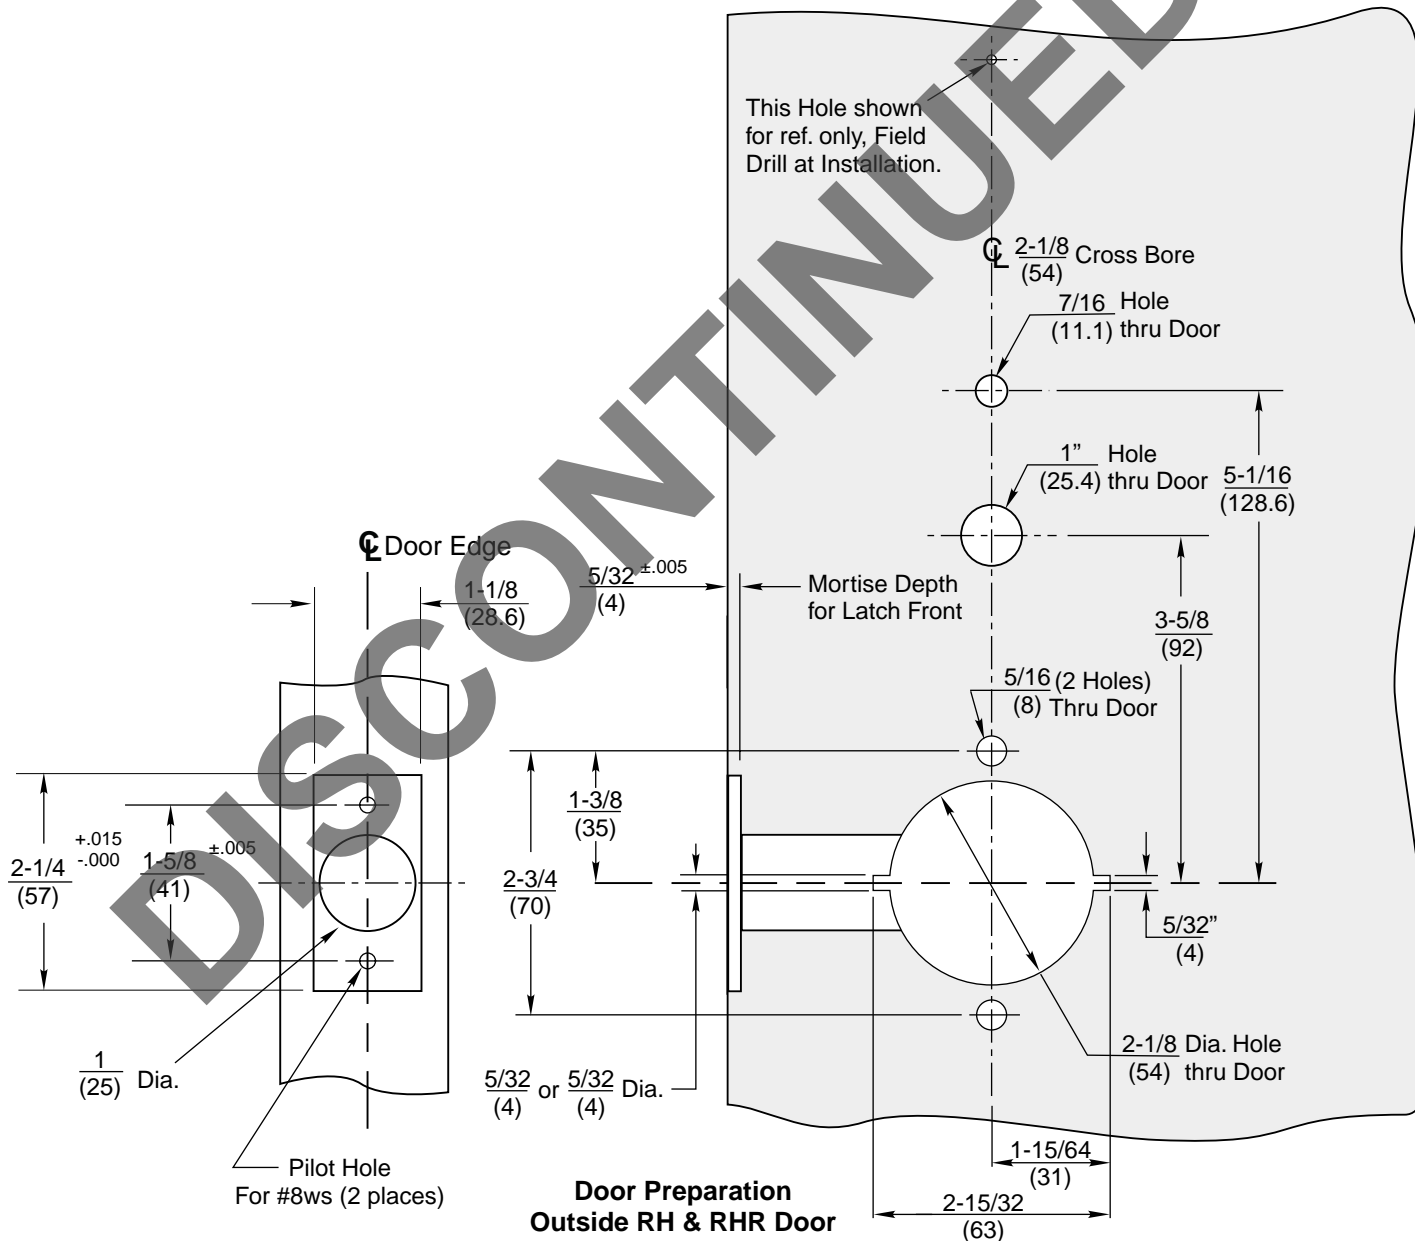


Notes:

1. Do not scale drawing
2. For strike preparation refer to:
495 Strike - Template No. 7102-0005
497 Strike - Template No. 7102-0003
3. Backset: 2-3/4" (70mm) standard
3-3/4 (95mm) to order
5" (127mm) to order
4. For H.M. door preparation refer to
Template No. 7150-8008
5. All dimensions given in inches (mm).

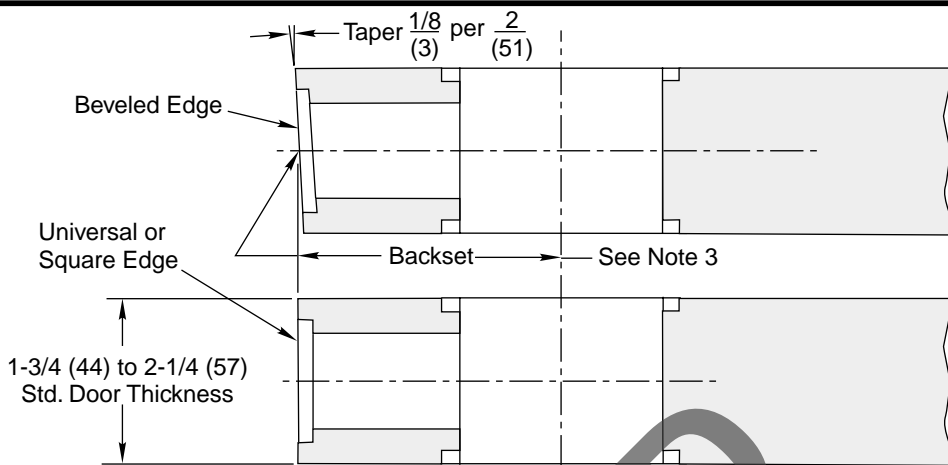

Yale eBOSS E5496LN & eBOSS Hardwire
Wood Door Preparation
Backset - 2-3/4(70mm), 3-3/4(95mm) and 5"(127mm)

Yale
 Yale Commercial Locks and Hardware
www.yalecommercial.com
 TEMPLATE NUMBER **7150-8009** DATE **08-05**