

Notes:

- This template is in addition to the device template.
 Locate centerlines using horizontal and vertical references on device template.
- 2. Do not scale drawing.
- 3. Dimensions are in inches (mm).
- 4. LHR door shown. Preparation is typical for both hands
- 5. Prepare mounting holes when installing trim.
- 6. Provide adequate internal support to prevent door deformation after trim is attached to device.
- 7. Dimensions given about the vertical centerline are symmetrical.

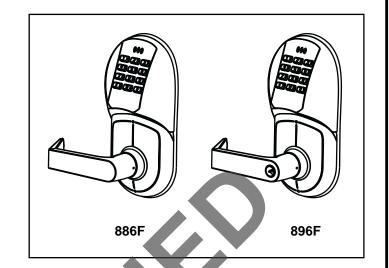

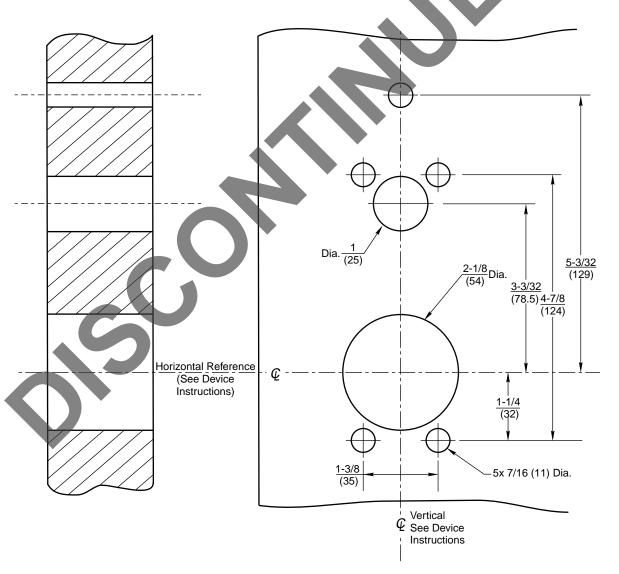

Yale® eBOSS® 886F and 896F Trim
With 7100(F) & 2100(F) Rim and
7150(F) & 2150(F) SquareBolt® Devices
For Wood or Composite Doors and H.M. Frame Application

Yale[®]

An ASSA ABLOY Group brand

www.valecommercial.com

TEMPLATE NUMBER

7400-1886 0⁻²

01-08