


INSIDE OF DOOR

LHR SHOWN
RHR OPPOSITE

OUTSIDE OF DOOR

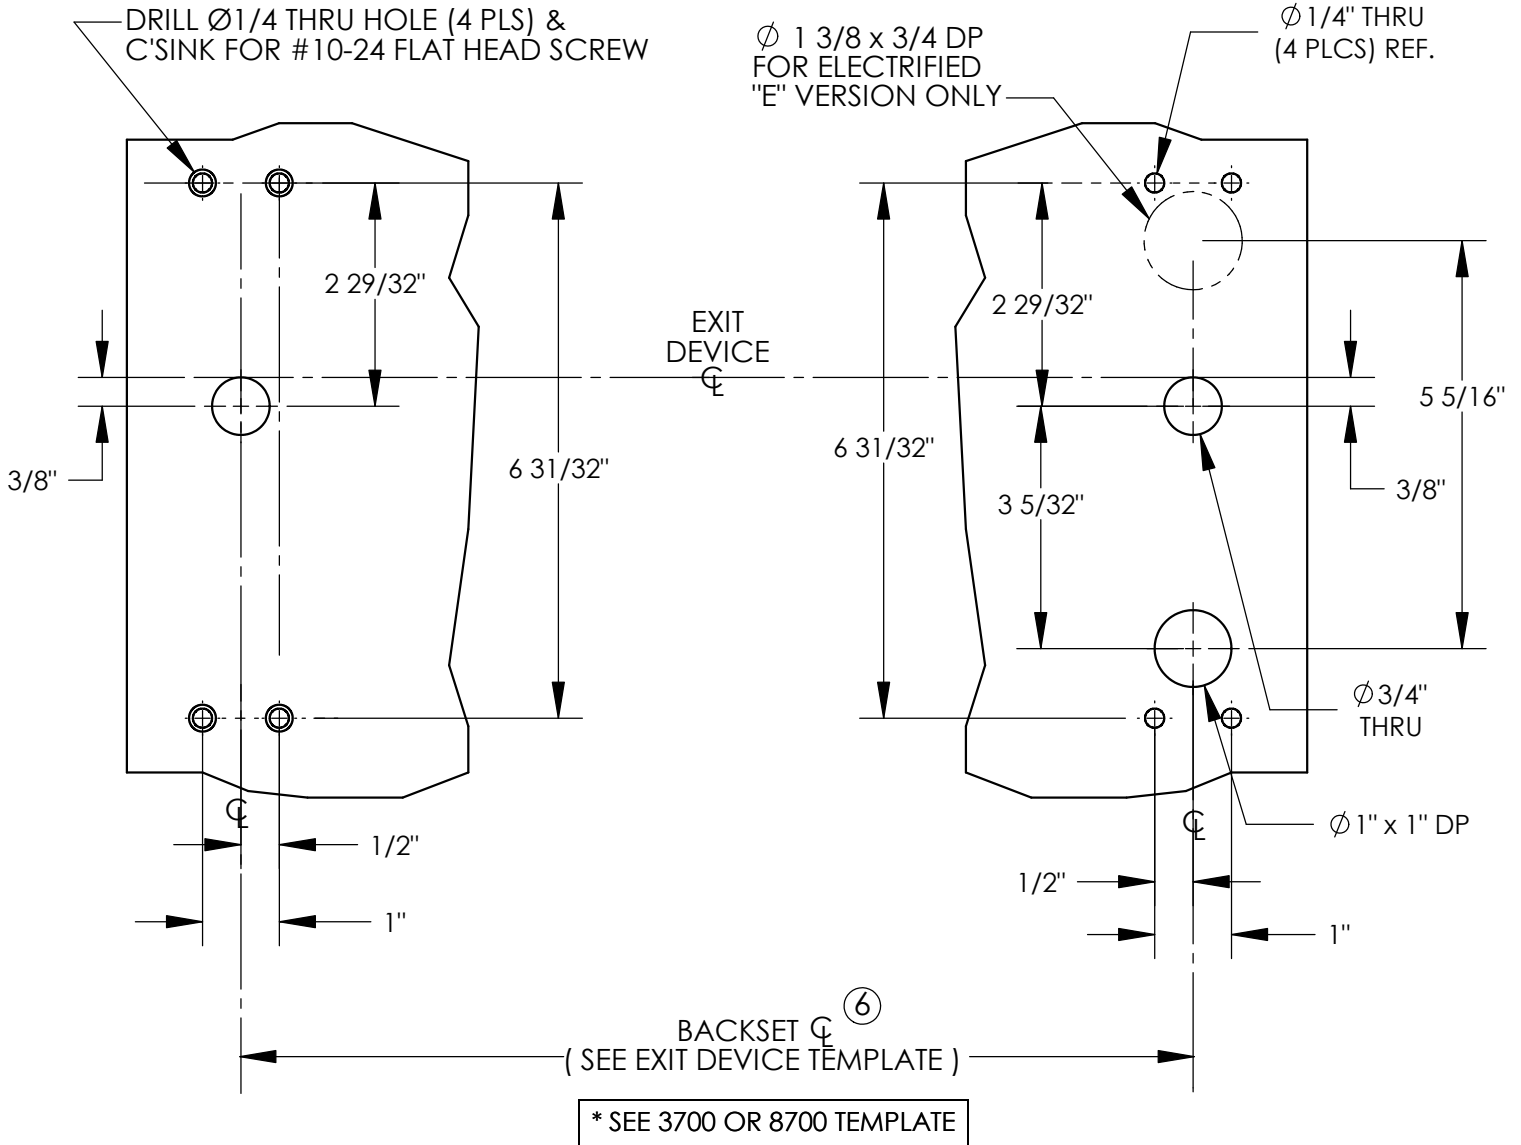

3081, 3082, 3083 (INCLUDING "E" VERSION) ENTRY TRIM
FOR 3700/8700 RIM METAL/WOOD DOOR PREPARATION

NOTE:
SEE MASTER SHEET 10001 FOR
SUGGESTED REINFORCEMENT

TEMPLATE NO.: 20047-6

DATE: 03/08/04



ADAMS RITE
MANUFACTURING CO.

260 Santa Fe Street, Pomona, CA 91767
Phone: (909) 632-2300 Fax: (909) 632-2369