

DOOR WIDTH	30"	36"	42"	48"
	(762mm)	(914mm)	(1067mm)	(1219mm)
DIM "A"	27 1/4"	33 1/4"	39 1/4"	45 1/4"
	(692mm)	(845mm)	(997mm)	(1149mm)

NOTE 2. DRILL ϕ 3/8 HOLE FOR WIRING ACCESS.


NOTE 1. DRILL ϕ 1/8" (3.17mm) PILOT HOLE FOR SHT. METAL SCREW (4 PL)

NOTE: THESE DIMENSIONS AND TEMPLATES ASSUME A DOOR THICKNESS OF 1 3/4". FOR DOORS OF OTHER THICKNESS, CONSULT FACTORY.



DUMMY PUSHBAR MOUNTING INSTRUCTIONS:

- 1. DETERMINE DESIRED PUSHBAR CENTERLINE HEIGHT.
- 2. USING THE PUSHBAR AS A TEMPLATE MARK & DRILL THE FOUR MOUNTING HOLES AS SHOWN.
- 3. POSITION BAR OVER MOUNTING HOLES AND INSTALL THE FOUR #10 ROUND HEAD SCREWS.
- 4. INSTALL END CAPS.

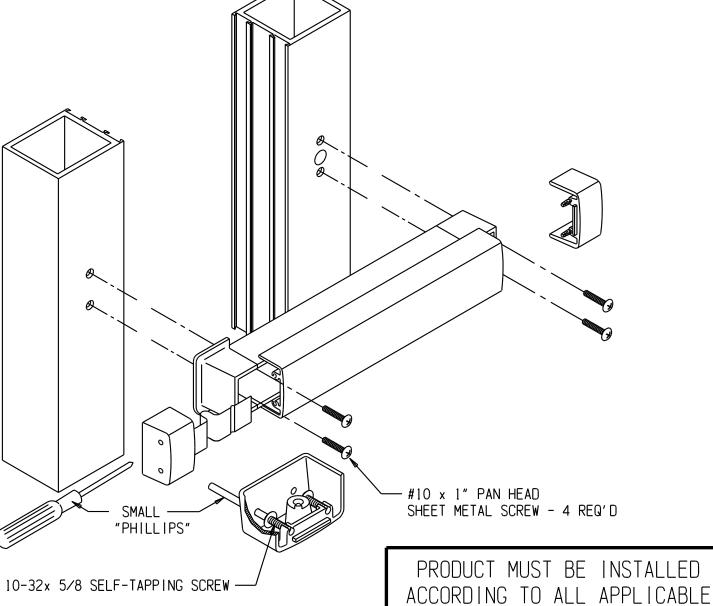



www.adamsrite.com Phone: 800-626-7590

800-872-3267

Fax: 866-582-4641 800-232-7329 80-0180-250

8099M DUMMY PUSH BAR FOR ALUMINUM / GLASS DOOR

Rev. **F**

Ecn 11955C

11/16


Date: 07-12-12

Page 1 of 2

Appvd: MP

BUILDING AND LIFE SAFETY CODES

Date: 07-19-12

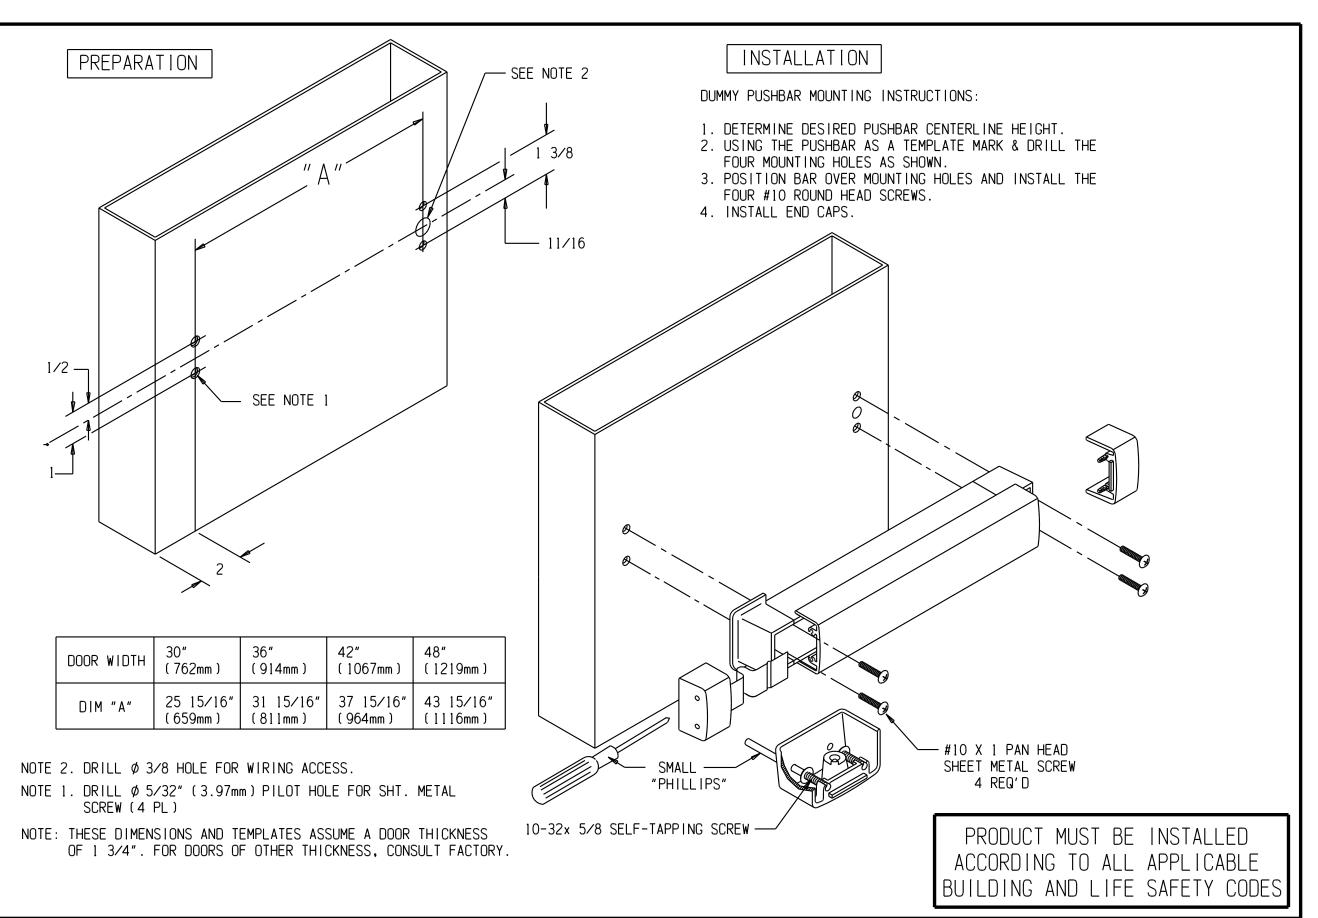



www.adamsrite.com

Phone: 800-626-7590 800-872-3267

Fax: 866-582-4641 800-232-7329 80-0180-250

8099M DUMMY PUSH BAR FOR ALUMINUM / GLASS DOOR

Rev. **F**

Ecn 11955C

Date: 07-12-12

Page 2 of 2

Appvd: MP

Date: 07-19-12