


P8700 TEMPLATE

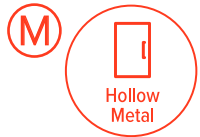

RHR ONLY
Drill two (2)
1/8" pilot holes
for mounting
screws



LHR ONLY
Drill two (2)
1/8" pilot holes
for mounting
screws




RHR ONLY
Cut template and
align to strike
mounting surface



**BAR HEIGHT
CENTER LINE**



LHR ONLY
Cut template and
align to strike
mounting surface

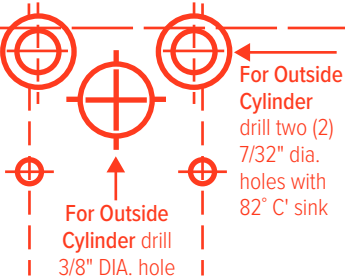

APPLY TEMPLATE TO INSIDE OF DOOR AT LATCH END

adamsrite.com
80-0180-389_4

**Adams
Rite**

ASSA ABLOY

P8700 TEMPLATE



RHR ONLY
Drill two (2)
1/8" pilot holes
for mounting
screws



LHR ONLY
Drill two (2)
1/8" pilot holes
for mounting
screws




RHR ONLY
Cut template and
align to strike
mounting surface



**BAR HEIGHT
CENTERLINE**



LHR ONLY
Cut template and
align to strike
mounting surface

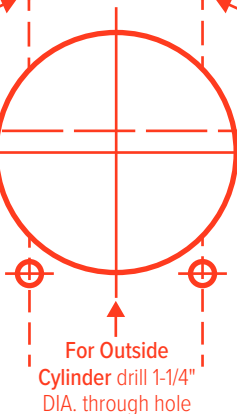

APPLY TEMPLATE TO INSIDE OF DOOR AT LATCH END

P8700 TEMPLATE



DOOR WIDTH	"A"
30"	25-11/16"
36"	31-11/16"
42"	37-11/16"
48"	43-11/16"

"A" = Distance
between latch
and hinge
mounting holes

**MOUNTING
CENTERLINE**




**BAR HEIGHT
CENTERLINE**

Drill two (2) 1/8" pilot holes
for mounting
screws




APPLY TEMPLATE TO INSIDE OF DOOR AT HINGE END

P8700 TEMPLATE

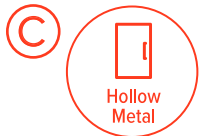

USE TEMPLATE ONLY IF CYLINDER IS USED

For Outside
Cylinder drill 1-1/4"
DIA. through hole

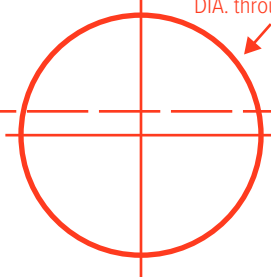

**BAR HEIGHT
CENTERLINE**

RHR ONLY
Cut template and
align to strike
mounting surface



LHR ONLY
Cut template and
align to strike
mounting surface



APPLY TEMPLATE TO OUTSIDE OF DOOR AT CYLINDER