

P8800 TEMPLATE

(M)

RHR ONLY

Drill two (2) 5/32" pilot holes for mounting screws

LHR ONLY

Drill two (2) 5/32" pilot holes for mounting screws


RHR ONLY

Cut template and align to strike mounting surface

BAR HEIGHT

CENTERLINE

LHR ONLY
Cut template and align to strike mounting surface

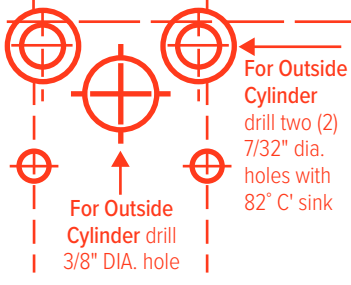

adamsrite.com
80-0180-391_3



APPLY TEMPLATE TO INSIDE OF DOOR AT LATCH END

P8800 TEMPLATE

(H)

DOOR WIDTH	"A"
30"	26-15/16"
36"	32-15/16"
42"	38-15/16"
48"	44-15/16"

"A" = Distance Between Latch and Hinge End Mounting Holes

MOUNTING CENTERLINE

BAR HEIGHT

CENTERLINE

Drill two (2) 1/8" pilot holes for mounting screws



APPLY TEMPLATE TO INSIDE OF DOOR AT HINGE END

P8800 TEMPLATE

(C)

USE TEMPLATE ONLY IF CYLINDER IS USED

For Outside Cylinder drill 1-1/4" DIA. through hole


BAR HEIGHT

CENTERLINE

RHR ONLY
Cut template and align to strike mounting surface



LHR ONLY
Cut template and align to strike mounting surface

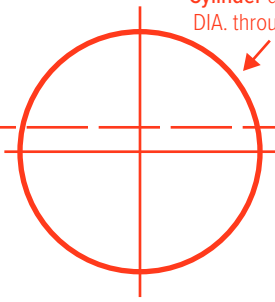

APPLY TEMPLATE TO OUTSIDE OF DOOR AT CYLINDER