





# IMPORTANT

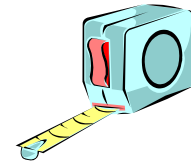

Templates must be printed without size modifications and verified for dimensional accuracy.

- Before printing, select the printing options necessary to ensure that copies are produced without size adjustments.
- After printing, measure the dimensions indicated on the template to ensure correct scale.

# INSTALLATION TEMPLATE FOR #103 & #104 LEKTROLOK

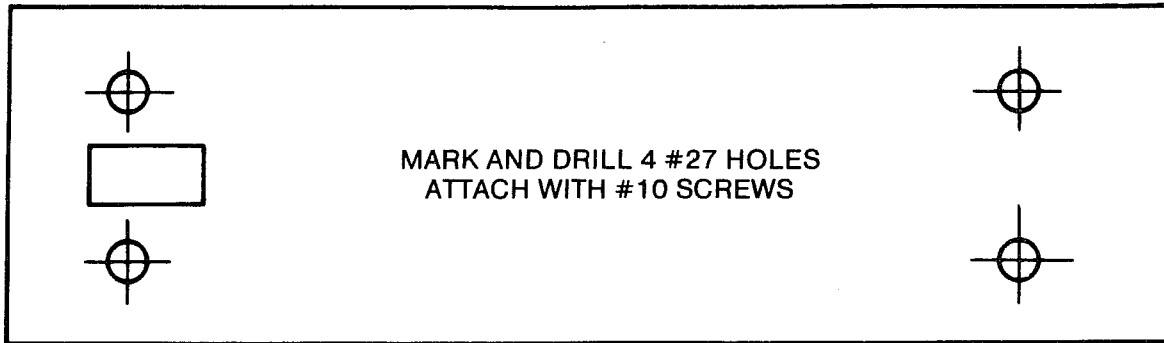


RIGHT HAND

FOLD 90° ON DOTTED LINE

HEADER  
DOOR

## FLUSH AND MORTISE KEEPER INSTALLATION

MAGNET

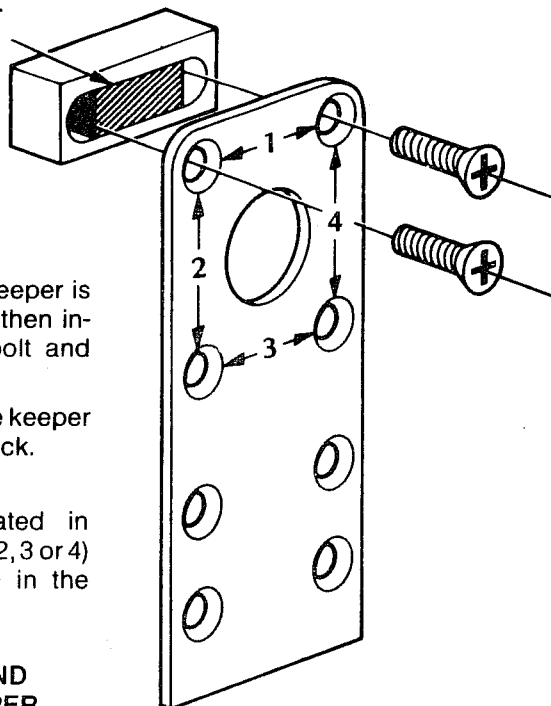

When mortise or flush keeper is used attach keeper first then install lock so that the bolt and keeper are aligned.


Install magnet on mortise keeper using small retaining block.

### NOTE

Magnet must be located in proper position (either 1, 2, 3 or 4) next to the reed switch in the lock.

USE #30 DRILL AND  
ATTACH THIS KEEPER  
WITH 4 #8 SCREWS


MARK AND DRILL  
2 #27 HOLES

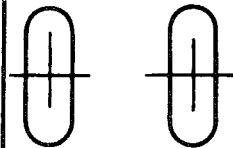

MOUNT WITH  
#10 SCREWS

ANGLE  
KEEPER

MARK AND DRILL  
2 #27 HOLES

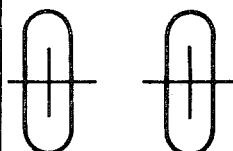


MOUNT WITH  
#10 SCREWS

ANGLE  
KEEPER

FOLD 90° ON DOTTED LINE

DOOR  
HEADER

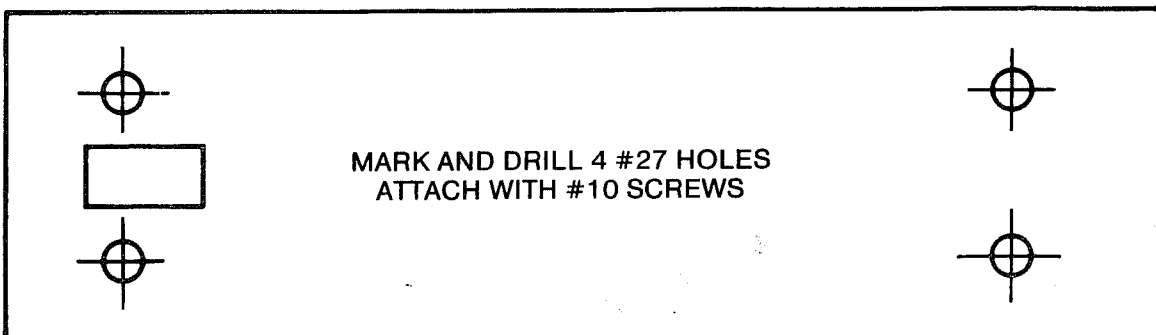

LEFT HAND