



ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701
 For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440
 Fax: 631-789-3383 • info@alarmlock.com

Note: Technical Service is for security professionals only

ALARM LOCK Tech Support

TECH TIP




Date: Wednesday, June 6, 2012

Subject: How to convert a DL or PDL Cylindrical Lockset (with a standard lever cylinder) to a small format (BEST Type) Interchangeable Core Cylinder

Models: DL2700, DL2800, DL/PDL3000, DL3200, DL/PDL4100, DL/PDL6100

Start by removing the exterior lever (15); insert the key and turn ¼ turn, then using the poker tool (17); depress the lever retainer while pulling the lever away from the lock housing (12). Next spin to unscrew the lock body assembly (11) until it is separated from the outside housing assembly (12).

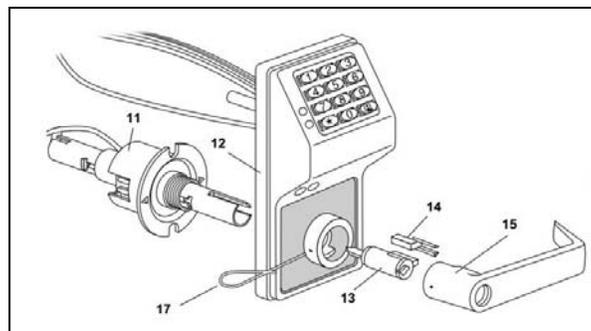

Now install the following 3 Alarm Lock replacement parts designed for small format interchangeable cores (BEST and other similar types, such as ARROW, FALCON, etc.).

- S6046 LOCK BODY (replacing 11 in image above)
- HW616C-26D STRAIGHT LEVER or HW788-26D CURVED "Regal" LEVER (replacing 15 in the image above)
- S6070-S TAILPIECE (Not Shown)

For other manufacturer I.C. Cylinders, use the corresponding part number in the chart below:

BRAND	(11) LOCK BODY	(15) STRAIGHT LEVER	(15) CURVED "Regal" LEVER	TAILPIECE
Corbin	S6045-C/R	HW735B-26D	HW757-26D	S6070-C
Medeco	S6045-M/Y	HW752B-26D	HW753-26D	S6070-M
Sargent	S6045-C/R	HW751C-26D	HW756-26D	S6070-R
Schlage	S6045-S	Not Available	HW758D-26D	S6070-S
Yale	S6045-M/Y	HW752B-26D	HW753-26D	S6070-Y

Refer to the DL Series Installation Instructions (WI949C) if you require additional lock installation information.