

# ET-PDL

Trilogy® Panic Exit Device Trim




ETDL SERIES

ETPDL SERIES

# Sargent

Models 8888 & 12-8888  
Rim Exit Device


# INSTRUCTIONS & TEMPLATE

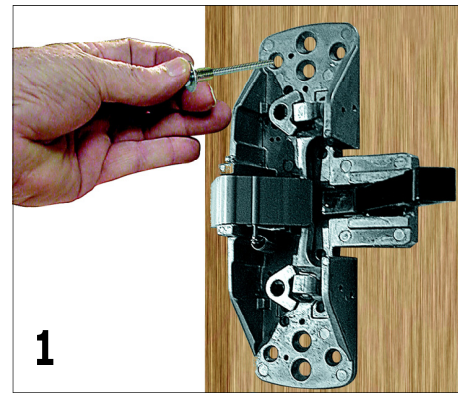


1. Existing Installation: Remove Exit device from door.




3. Position Exterior assembly on door.

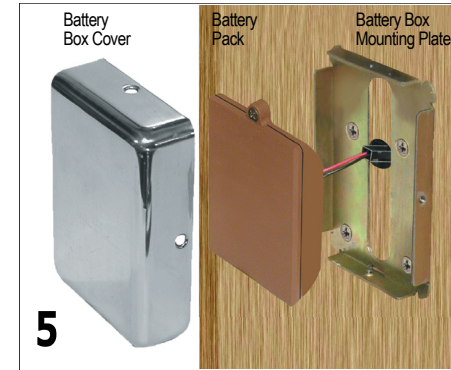

5. Connect Battery Pack and place inside of Battery Box Mounting Plate. Position the Battery Box Cover and fasten with three #6-32 x 5/16" screws.

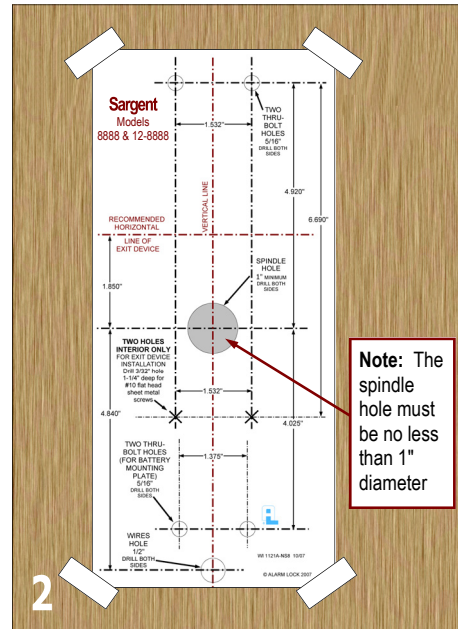

2. Existing Installation: Position Alarm Lock template on horizontal & vertical lines of existing spindle hole.  
New Installation: Locate and mark horizontal and vertical lines indicated in Exit Device Instructions/Template. Line up Alarm Lock template with horizontal and vertical lines and tape on door.  
Existing and New Installations: Mark all hole centers on each side of door. Drill all holes from both sides of door to avoid splintering.

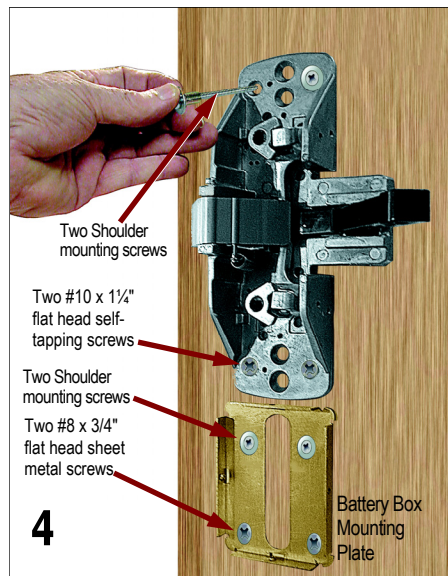


4. Replace Exit Device, insert and fasten with 2 new Shoulder mounting screws at the top of the Exit Device into mounting posts. Fasten two #10 x 1-1/4" flat head sheet metal screws in lower holes (do not over-tighten). Pull wires from door through Battery Box Mounting Plate. Do not pinch or cut wires. Position Battery Mounting Plate below Exit Device and fasten with two Shoulder screws on top, into mounting posts and two #8 x 3/4" flat head sheet metal screws on the bottom.



6. Replace and fasten Exit device cover.

**Check lock for proper operation before closing door.**


**Sargent**  
Models  
8888 & 12-8888

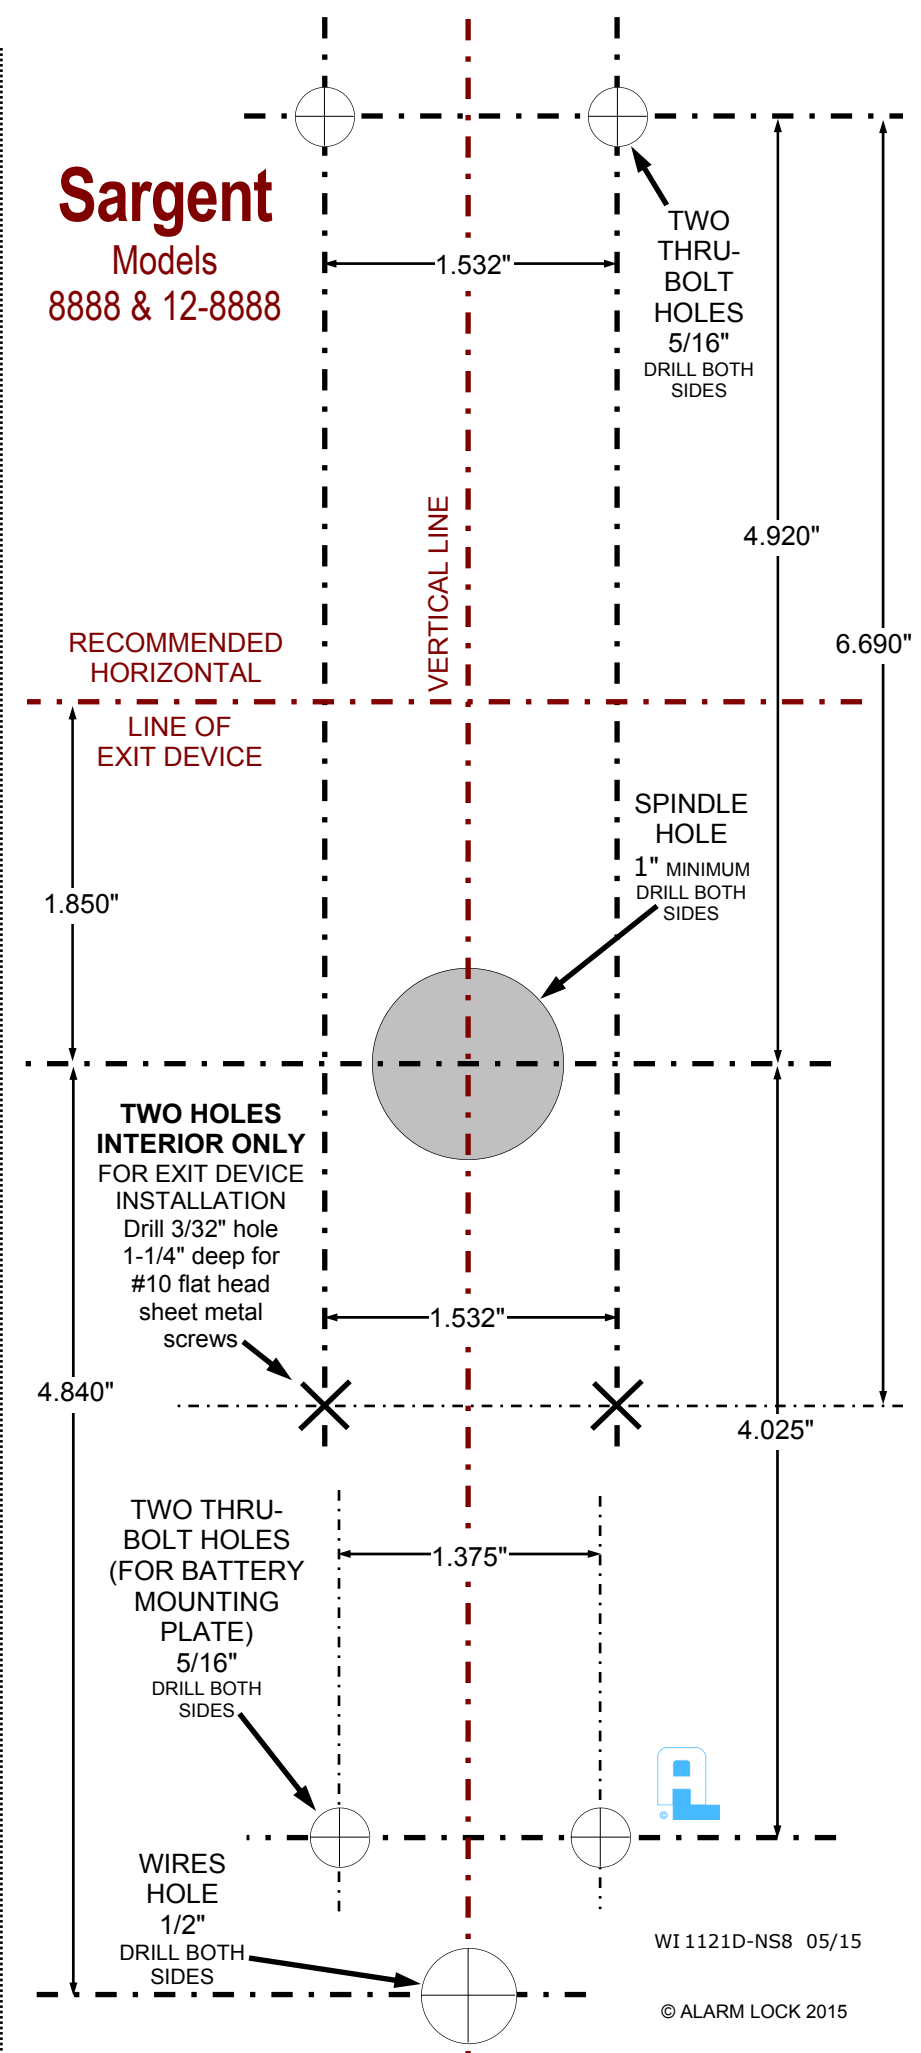


## To Change Cylinder

**IMPORTANT:**  
When replacing cylinder be sure to use the proper Cylinder Adapter and Tailpiece.


Alarm Lock Systems, Inc.  
A division of the NAPCO Security Group  
345 Bayview Avenue, Amityville, NY 11701  
Tel: (631) 789-4871 Fax: (631) 789-3383  
[www.alarmlock.com](http://www.alarmlock.com)  
Publicly traded on NASDAQ Symbol: NSSC

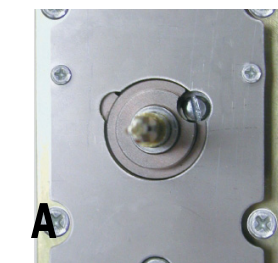

A. Remove Cover plate. Rotate the spindle either direction to expose and remove cylinder screws.

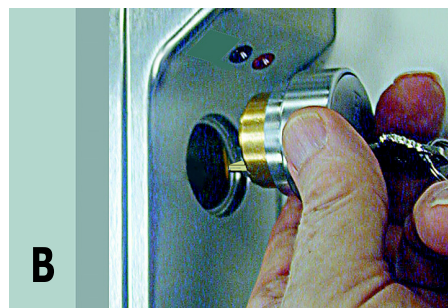

B. Remove old cylinder and insert new cylinder.

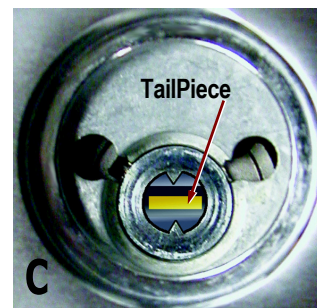

C. Note: The tailpiece must be in the horizontal position as shown in the image above.

WI 1121D-NS8 05/15

© ALARM LOCK 2015