




PD15REXKIT-ED

INSTALLATION INSTRUCTIONS

The PD15REXKIT-ED is a field installable request to exit switch for AHT 8000/9000, PD15/16, Jackson 1285/1295, & Kawneer 1686 series exit devices.

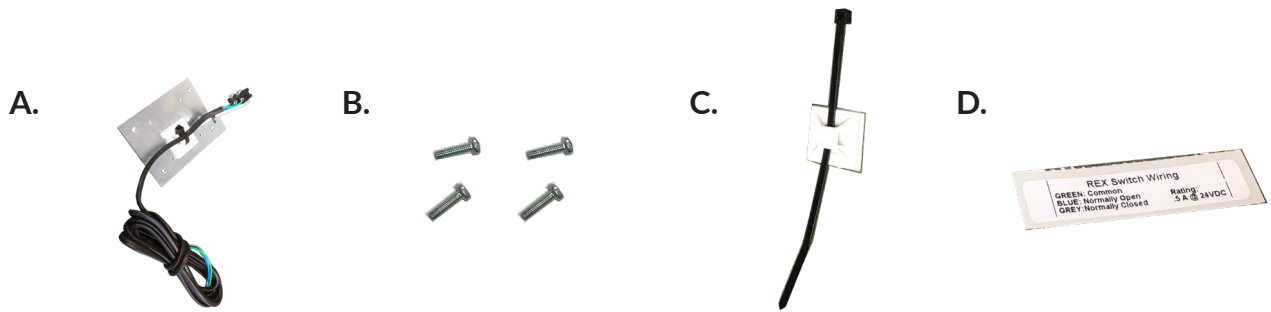

KIT INCLUDES

- A. REX switch
- B. 4 - Phillips screws
- C. 2- Sticky pad w/ zip tie
- D. REX sticker

TOOLS REQUIRED

- Phillips screw driver


SPECIFICATIONS

- Rating: .5A @24 VAC
- Configuration: Green - Common (C)
Blue - Normally Open (NO)
Gray - Normally Closed (NC)


| <u>PD15 REX MATRIX</u> | | Easy Order# | Mechanical unmodified | CAT Modified Solenoid | CAT Modified Motor | AHT/Jack/Kaw Solenoid | AHT/Jackson Motor |
|------------------------|-------|-------------|-----------------------|-----------------------|--------------------|-----------------------|-------------------|
| PD15REXKIT-ED | 79148 | ✓ | ✓ | - * | ✓ | - * | |

Mechanical = PD15/16, AHT 8000/9000, Kawneer 1686, Jackson 1285/1295 * If device has MM4RM - See PD15REXKIT-M-ED


- Remove rear mounting bracket and slide REX bracket into existing groove in housing towards push pad.

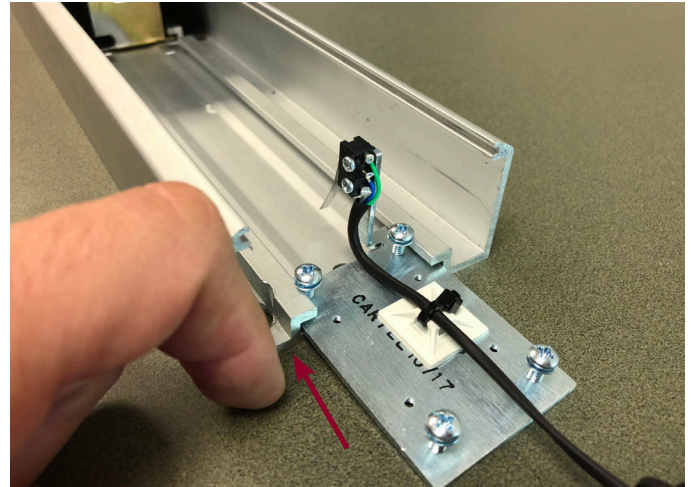

- Slide forward until the right corner of the REX bracket lines up with the end of the inner channel.

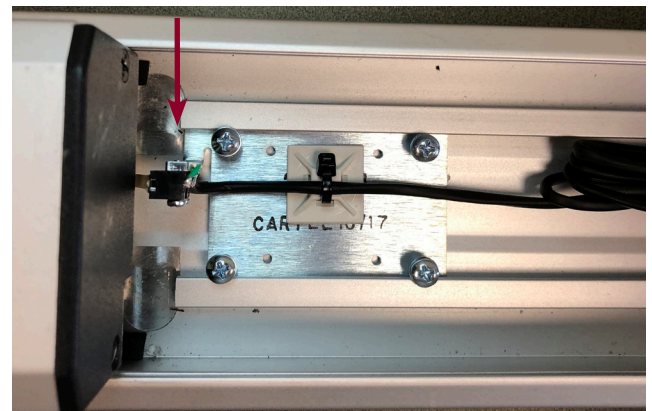

- Secure REX bracket by tightening all (4) screws.

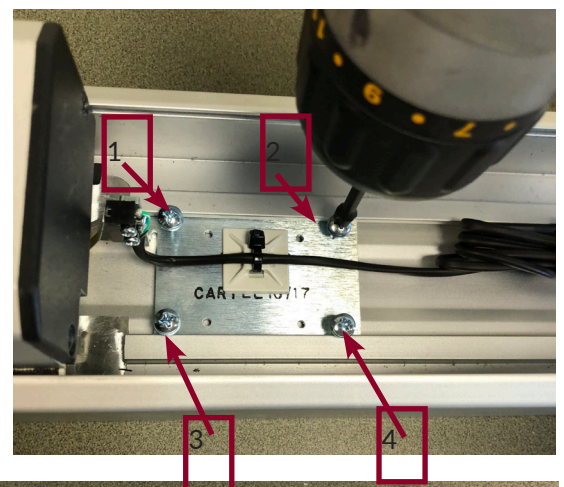

- Add sticky pad and zip tie to secure REX wires and add wire configuration sticker.

