

PD28-CVR - PANIC & PD28F-CVR - FIRE LABELED STEEL DOOR - CVR EXIT DEVICE MODELS


PD28 SERIES EXIT DEVICES USING SNB OR SURFACE MOUNT FASTENERS


TEMPLATE: CAT-9702
REV. 0 04-27-23

DEVICE
MACHINE SCREWS: USE #7 OR 13/64" DRILL AND 1/4-20 TAP
WOOD SCREWS: USE 5/32" DRILL
SEX NUTS: USE 3/8" DRILL PULL SIDE USE 9/32" DRILL PUSH SIDE

NOTES:

1. VERIFY PRINTED TO SCALE
2. SEX NUTS MAY BE REQUIRED FOR UNREINFORCED DOORS OR COMPOSITE FIRE DOORS. CONSULT DOOR MANUFACTURERS RECOMMENDATIONS
3. SEE TRIM TEMPLATE (IF APPLICABLE) FOR RELATED MACHINING DETAILS
4. DIMENSION "X" SIZED FOR DOOR. REFER TO DEVICE INSTRUCTIONS WHEN CUTTING DOWN FOR NARROWER OPENING
5. CHECK CAT WEBSITE FOR MOST RECENT REVISION WWW.COMMANDACCESS.COM
6. MINIMUM STILE WIDTH: 4 1/8"

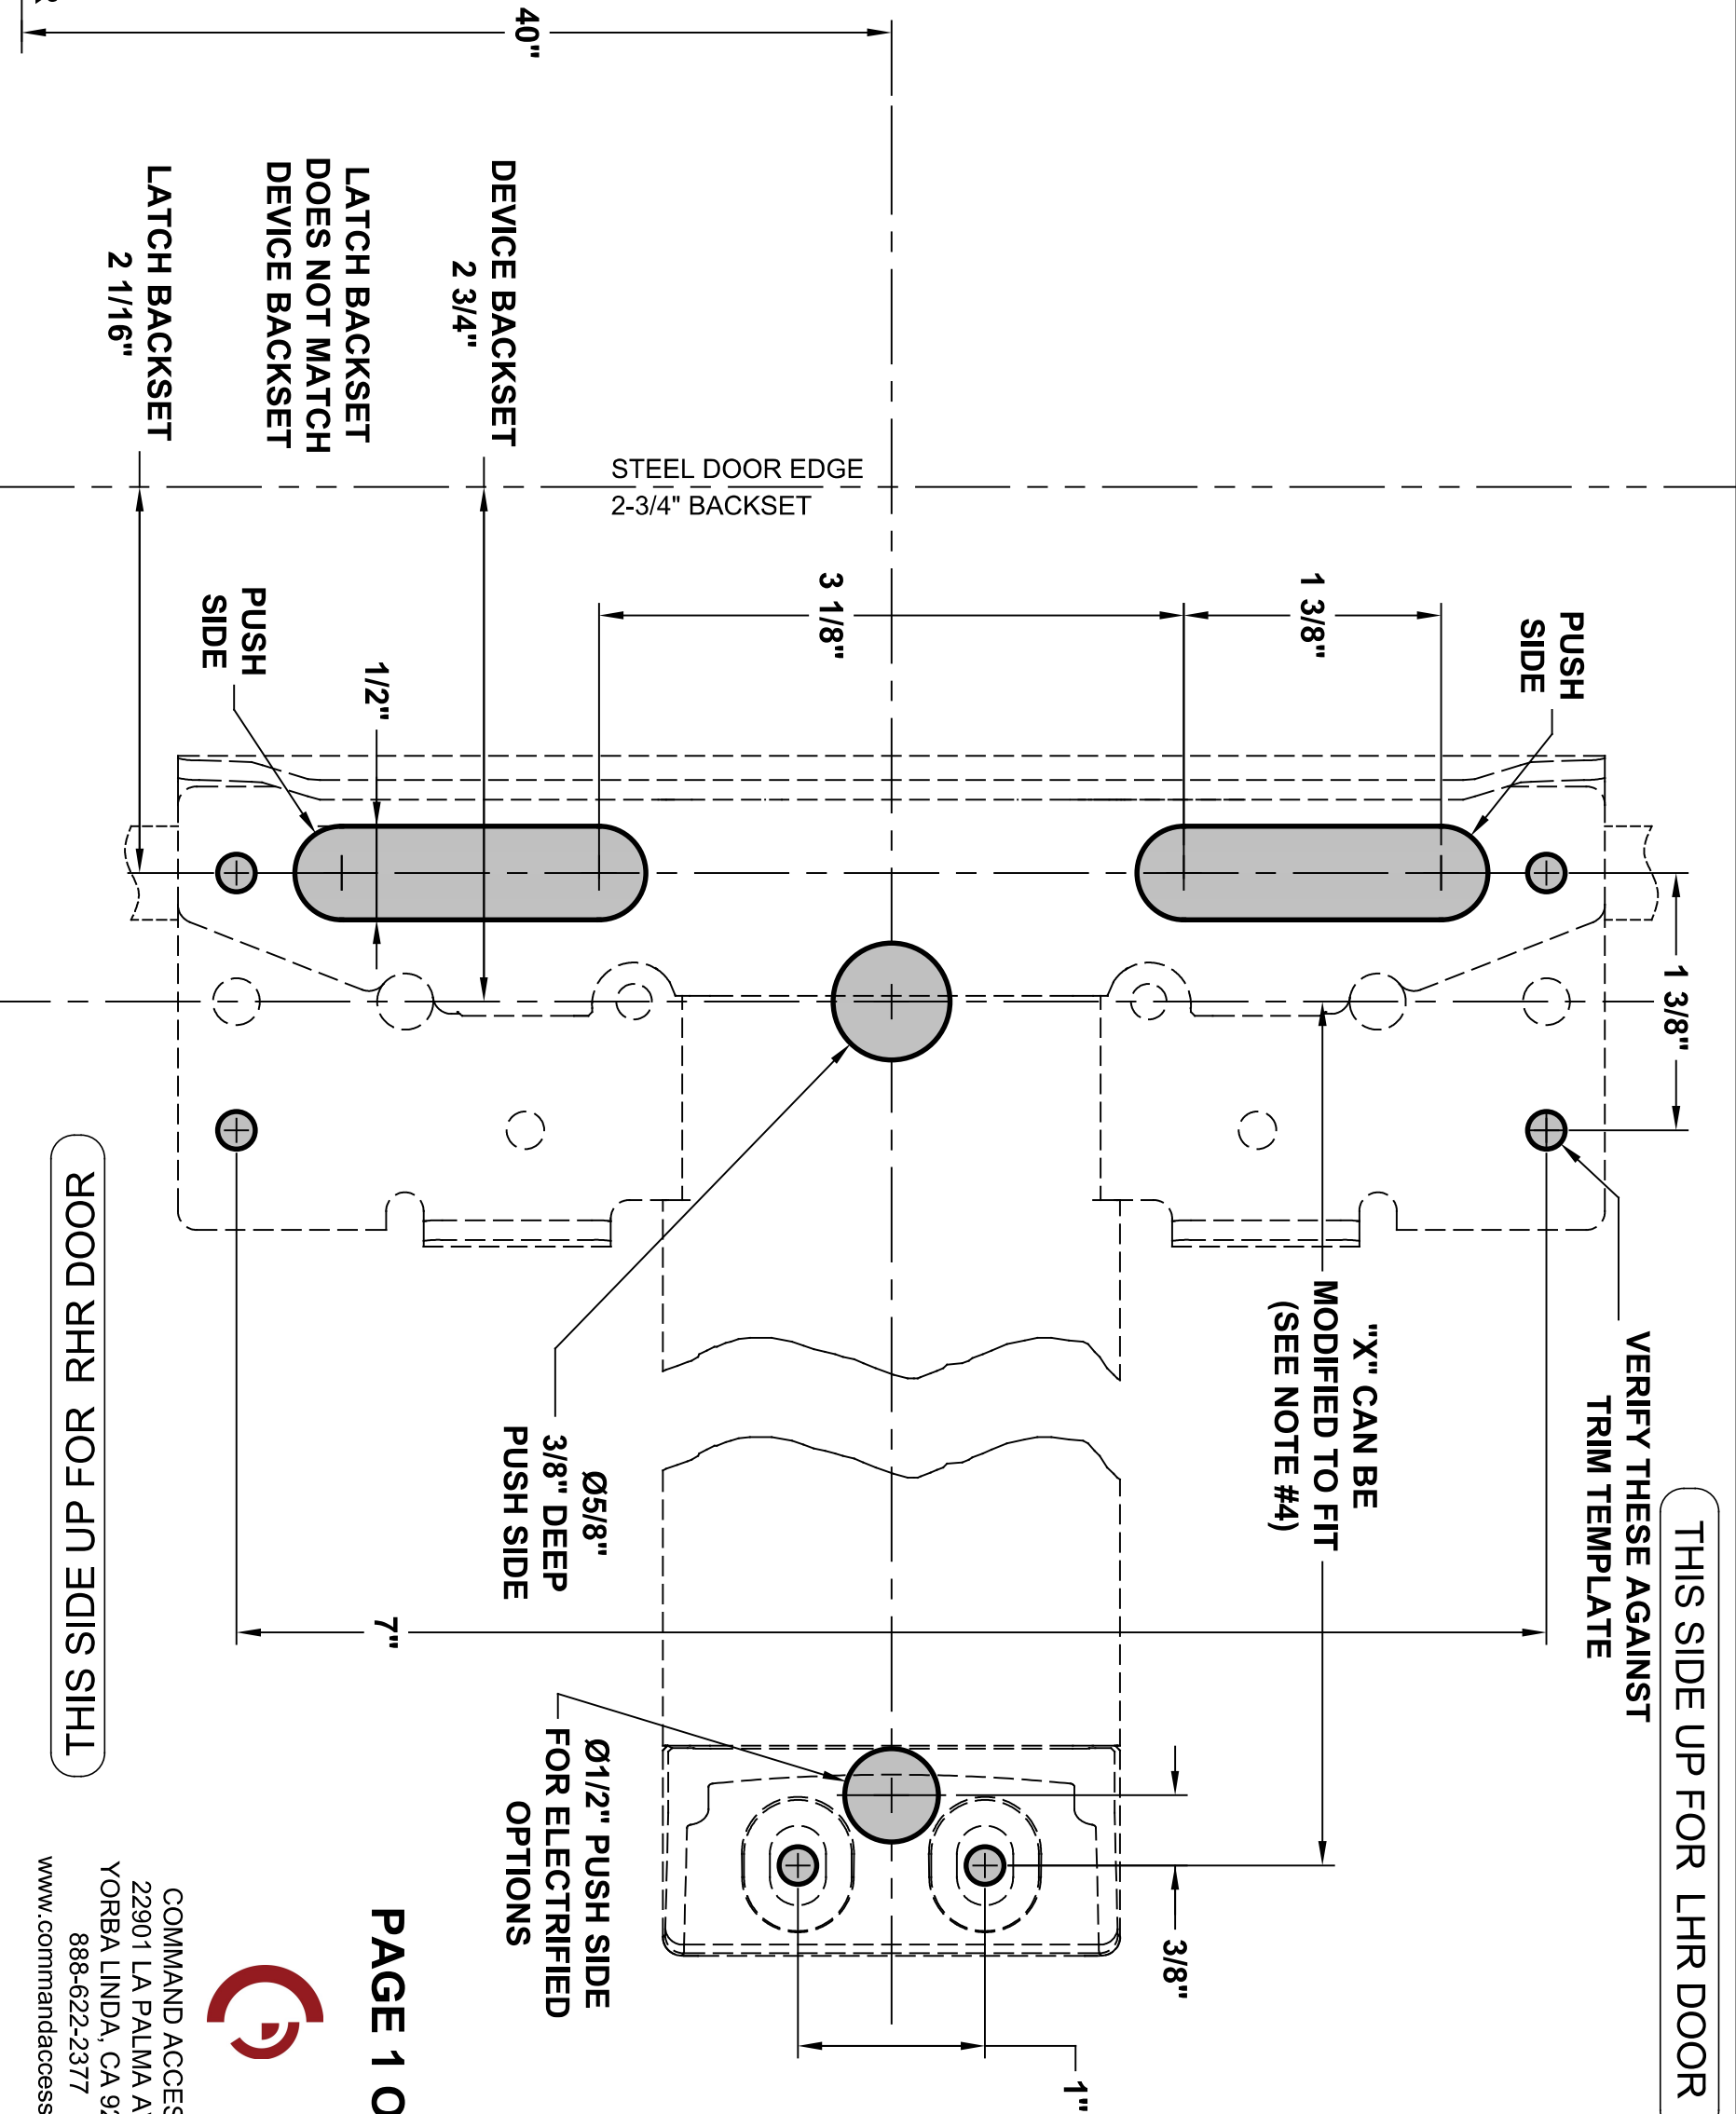

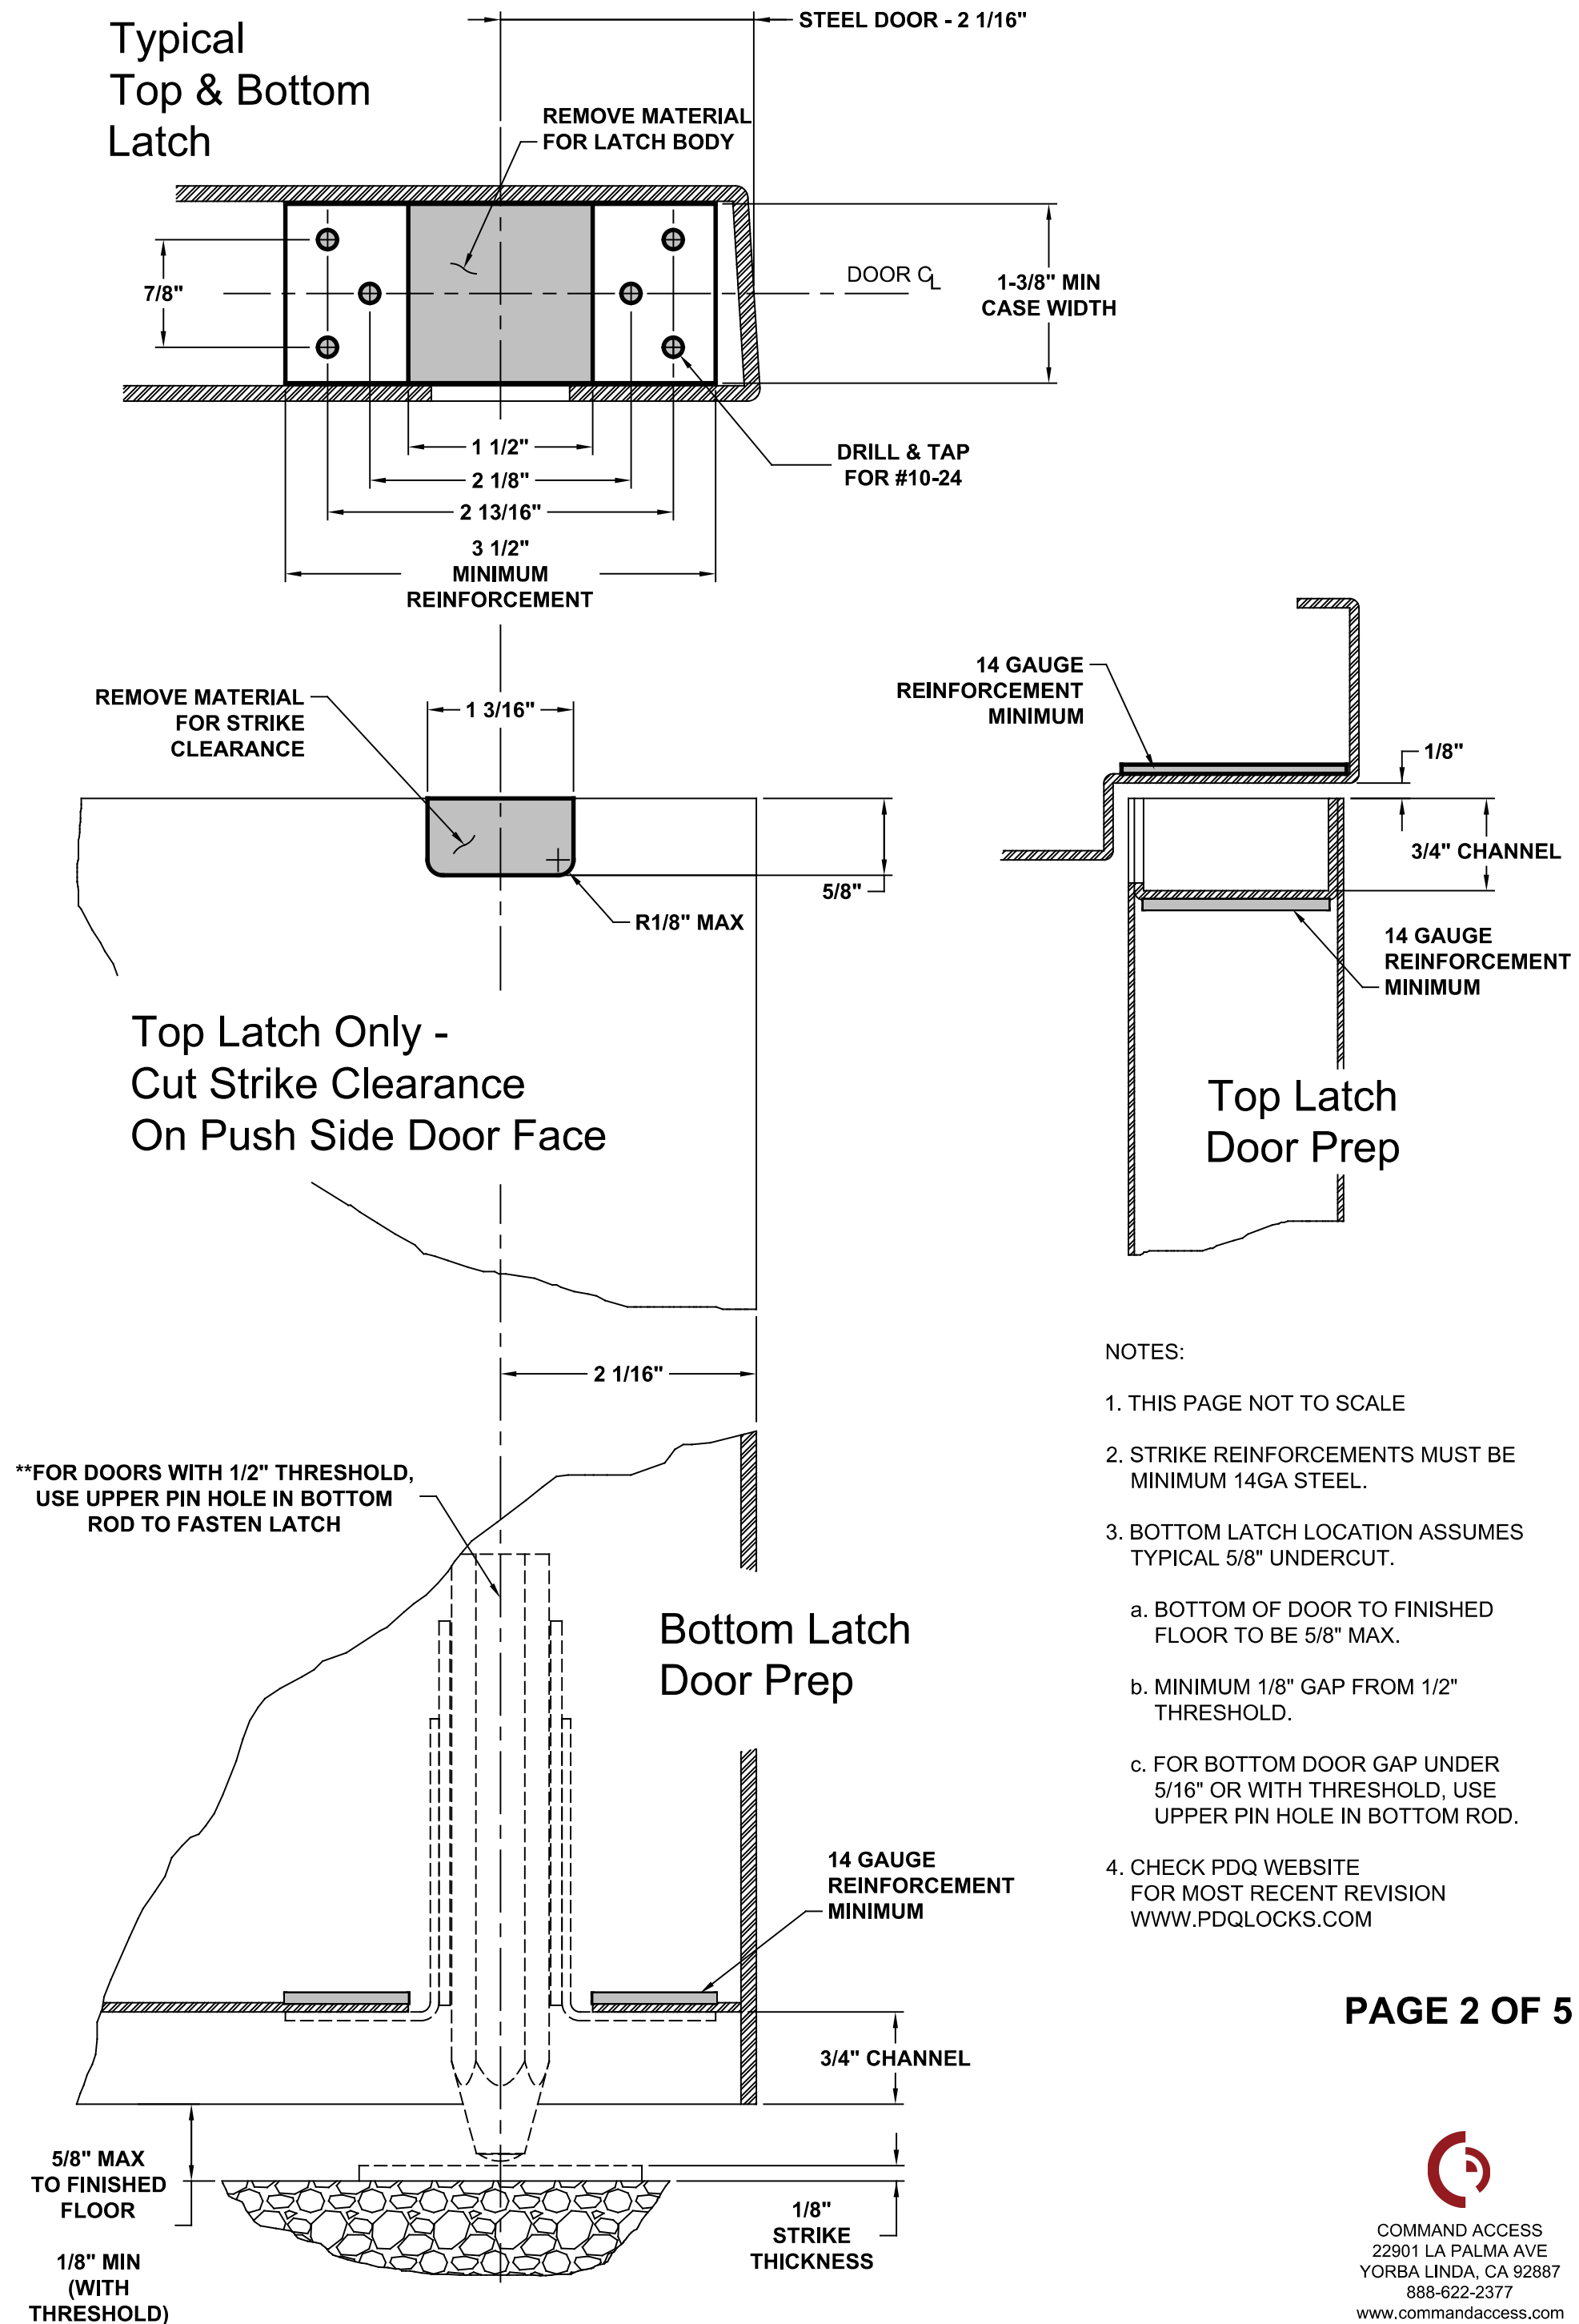


PD28-CV - PANIC & PD28F-CVR - FIRE LABELED
ALUMINUM DOOR - CVR EXIT DEVICE MODELS
PD28 SERIES EXIT DEVICES USING SNB OR SURFACE MOUNT FASTENERS

TEMPLATE: CAT-9702
REV. 0 04-27-23


DEVICE
MACHINE SCREWS: USE #7 OR 13/64" DRILL AND 1/4-20 TAP
WOOD SCREWS: USE 5/32" DRILL
SEX NUTS: USE 3/8" DRILL PULL SIDE USE 9/32" DRILL PUSH SIDE

- NOTES:
1. VERIFY PRINTED TO SCALE
 2. SEX NUTS MAY BE REQUIRED FOR UNREINFORCED DOORS OR COMPOSITE FIRE DOORS. CONSULT DOOR MANUFACTURER'S RECOMMENDATIONS
 3. SEE TRIM TEMPLATE (IF APPLICABLE) FOR RELATED MACHINING DETAILS
 4. DIMENSION "X" SIZED FOR DOOR. REFER TO DEVICE INSTRUCTIONS WHEN CUTTING DOWN FOR NARROWER OPENING
 5. CHECK CAT WEBSITE FOR MOST RECENT REVISION WWW.COMMANDACCESS.COM
 6. MINIMUM STILE WIDTH: 3-1/2"

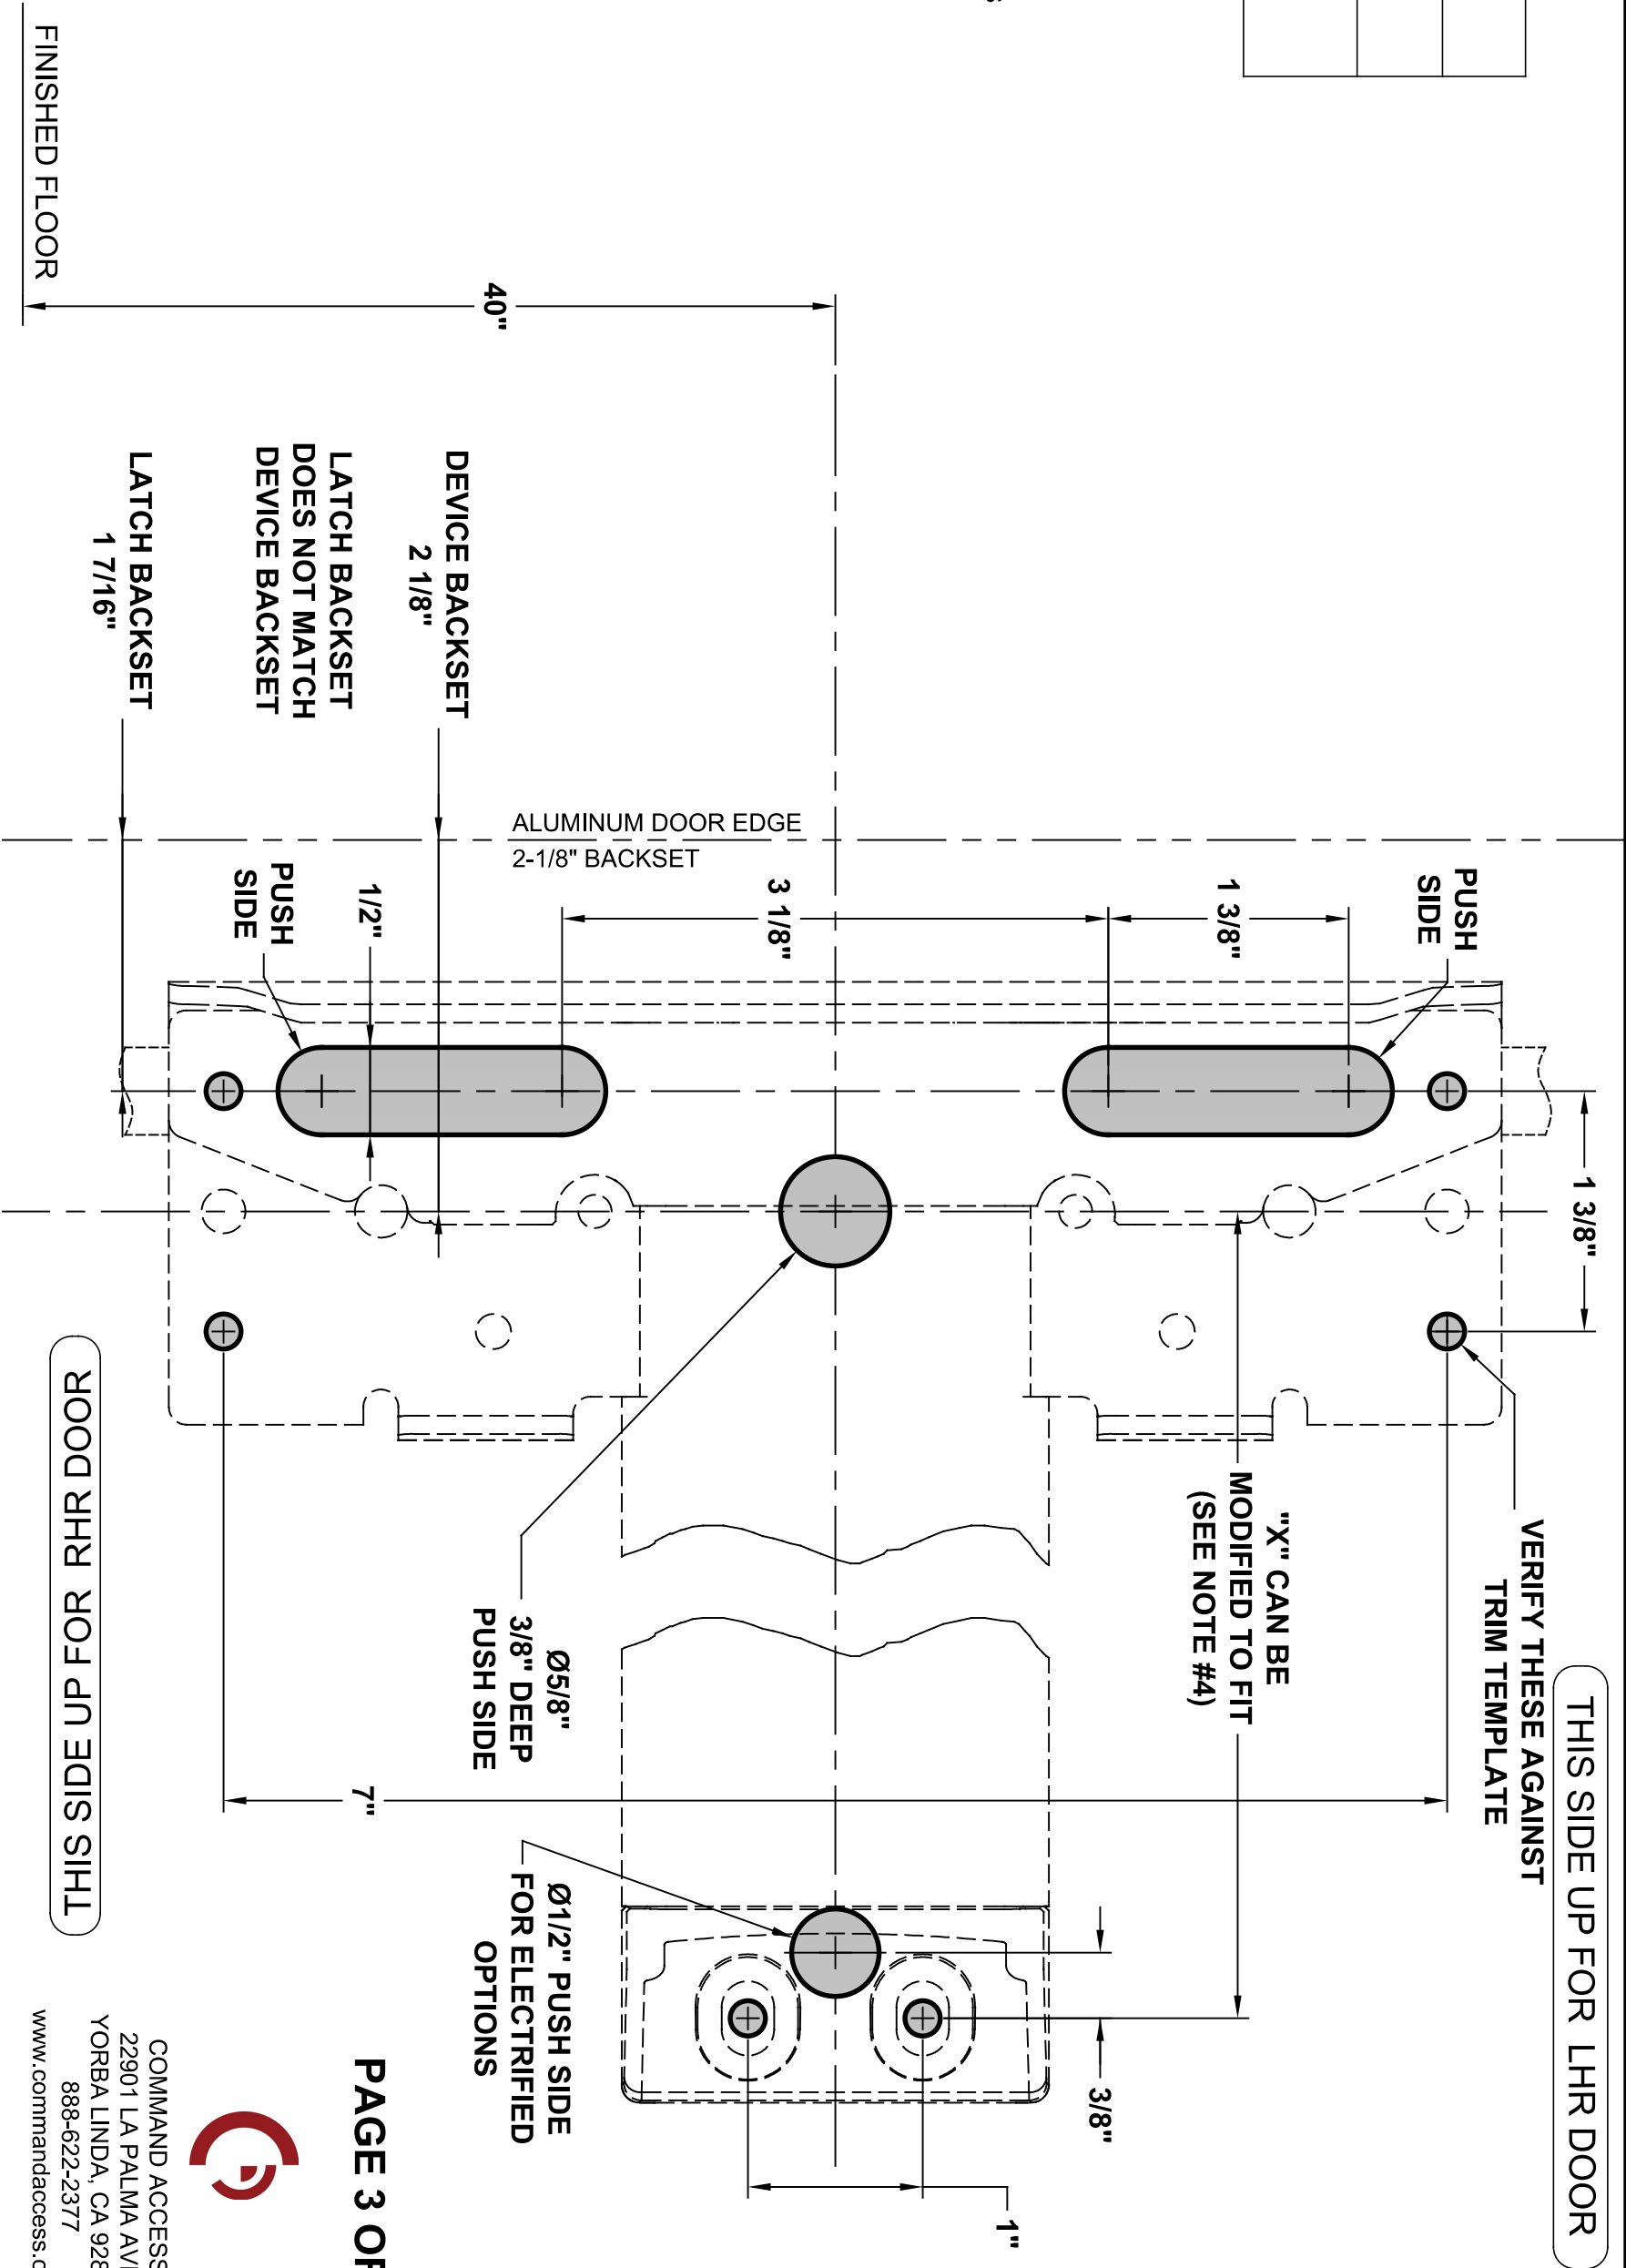

CVR LATCH - ALUMINUM DOOR
FOR PD28 SERIES EXIT DEVICES

TEMPLATE: CAT-9702
REV. 0 04-27-23

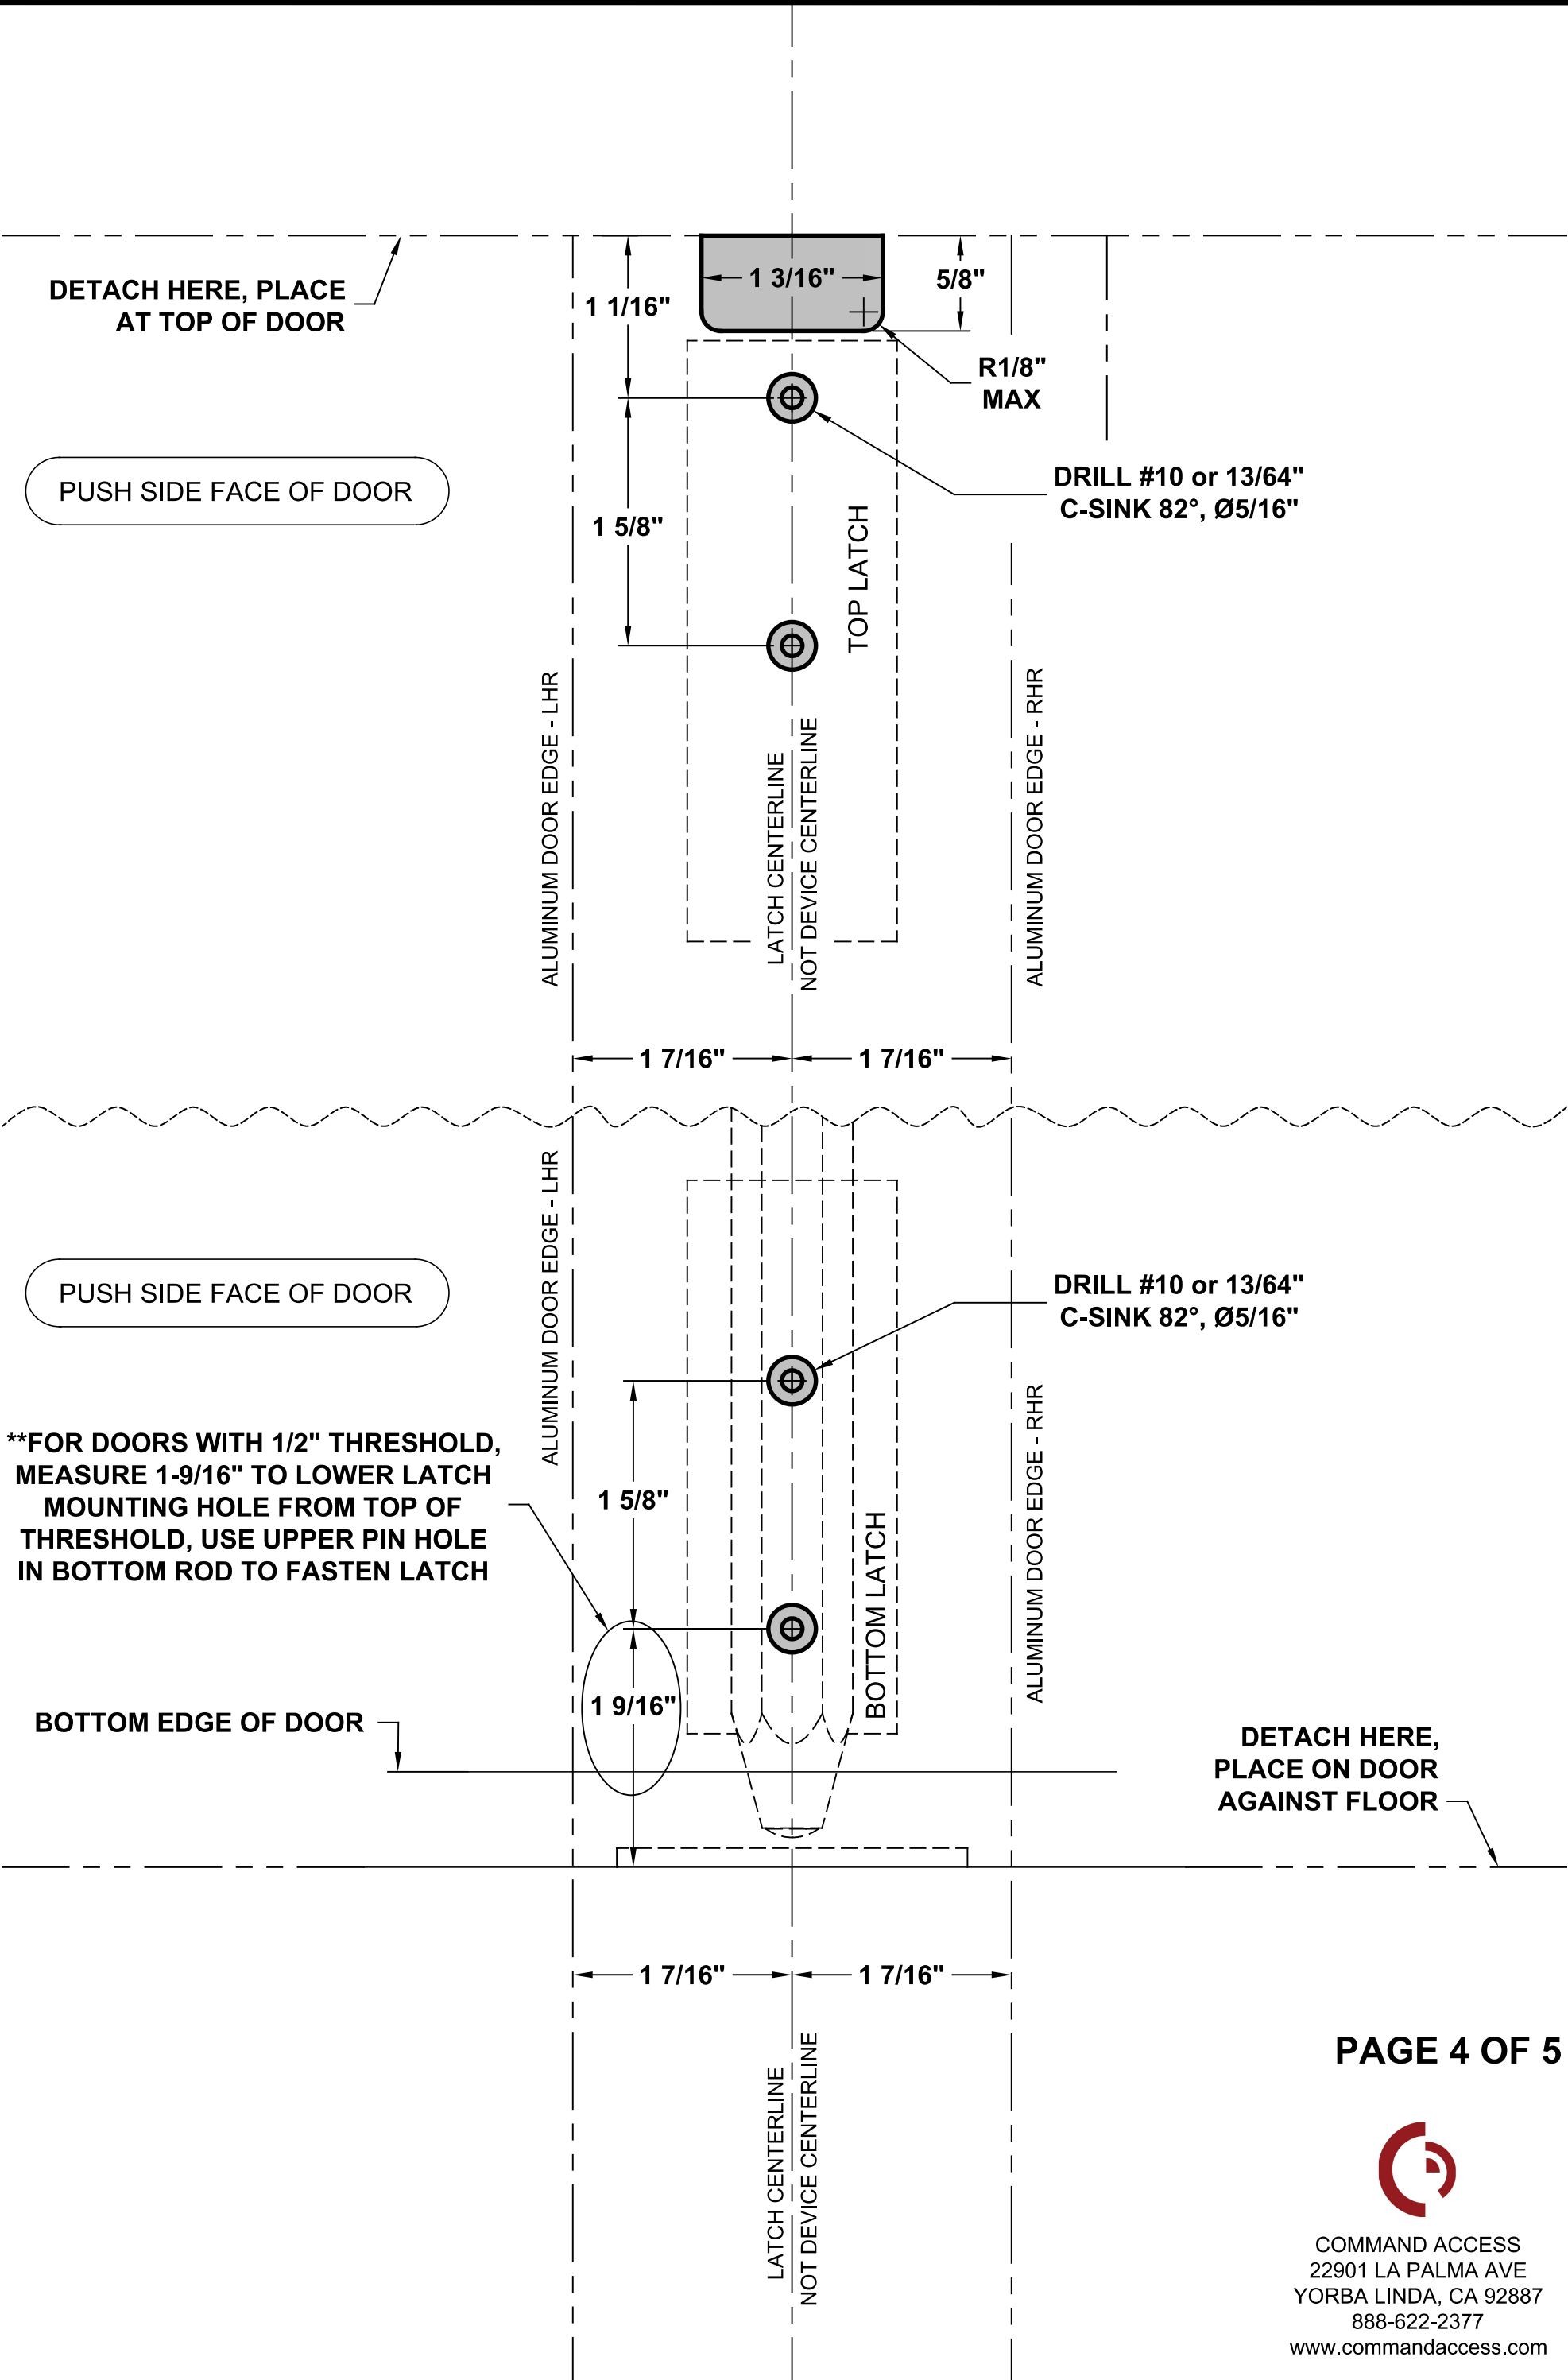


TOP STRIKE

MACHINE SCREWS:
USE #25 OR 5/32" DRILL & #10-24 TAP

Top Strike
Frame Prep


CUT TEMPLATE,
PLACE ON FRAME
AGAINST DOOR STOP

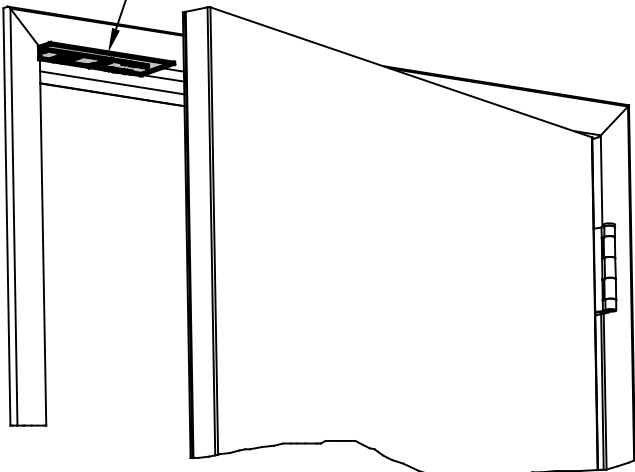

LATCH CENTERLINE

7/16"

DETACH HERE, PLACE
ABOVE DOOR &
AGAINST STOP

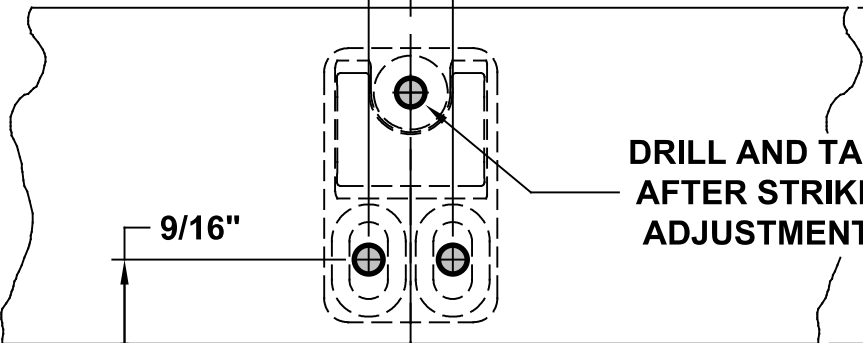

PULL SIDE DOOR EDGE

DRILL AND TAP
AFTER STRIKE
ADJUSTMENT

9/16"

PUSH SIDE DOOR EDGE

DETACH HERE &
PLACE ON FLOOR

PULL SIDE DOOR EDGE

Ø1"
3/4" DEEP

7/8"


PUSH SIDE DOOR EDGE

Ø1/4
1" DEEP FOR
INCLUDED ANCHOR

LATCH CENTERLINE

1 3/4"

Bottom Strike
Floor Prep

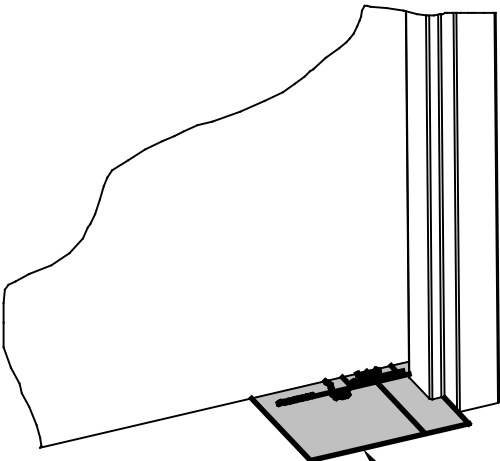

CUT TEMPLATE
PLACE ON FLOOR
ALIGNED WITH DOOR

