
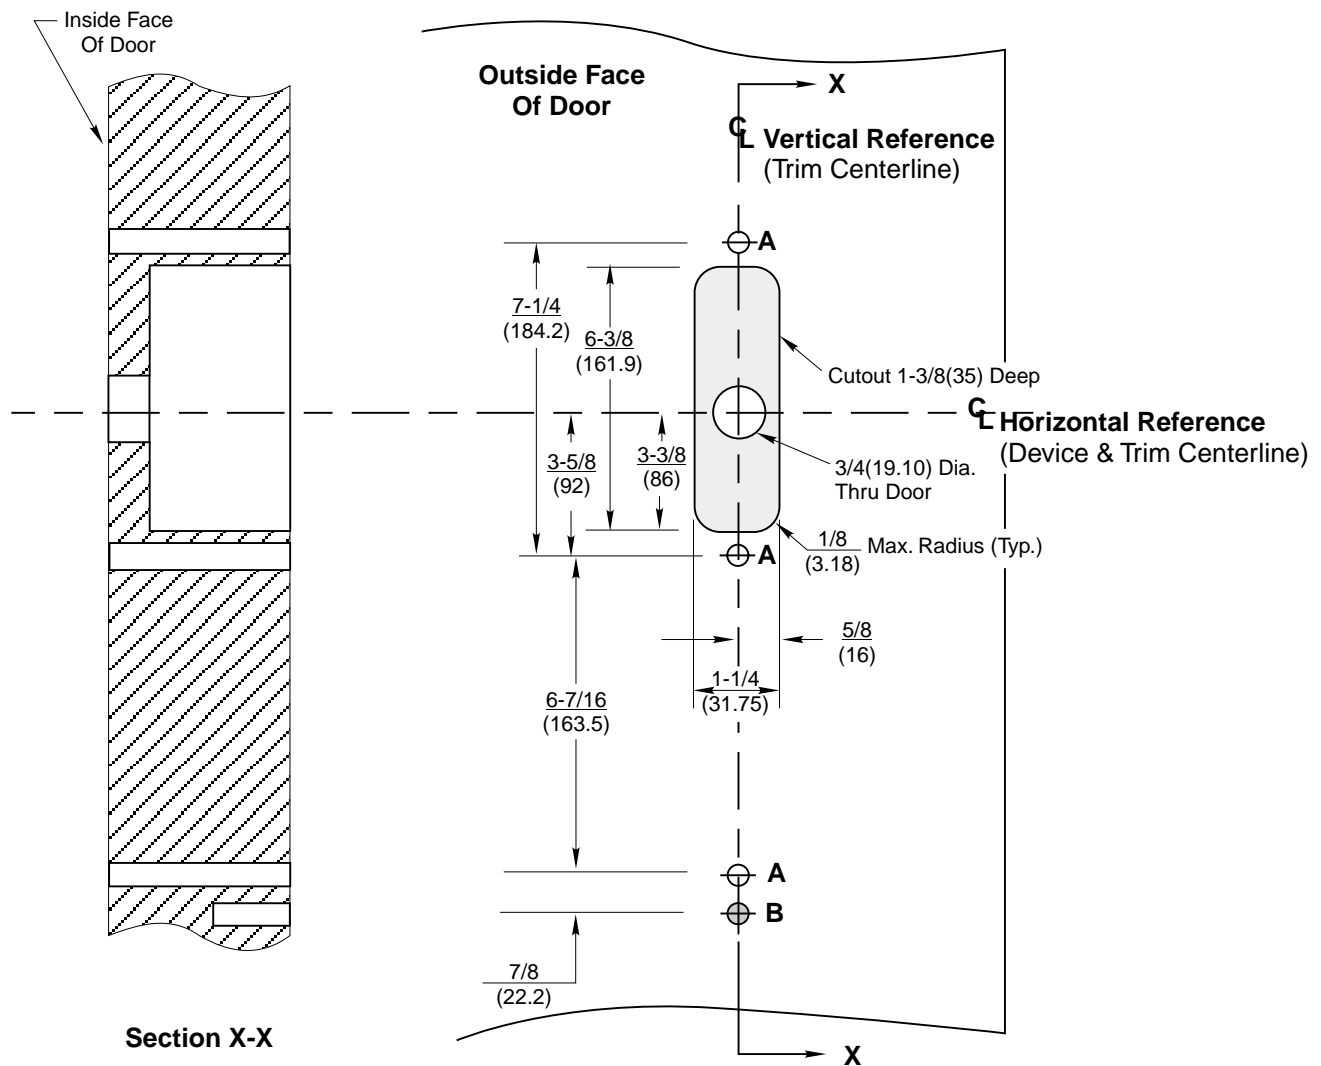


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.
6. Provide adequate structural support to maintain door integrity during operation.

Hole	Specification
A	1/2(12.50) Dia. Thru Door
B	3/8(9.50) Dia. X 3/4(19) Deep

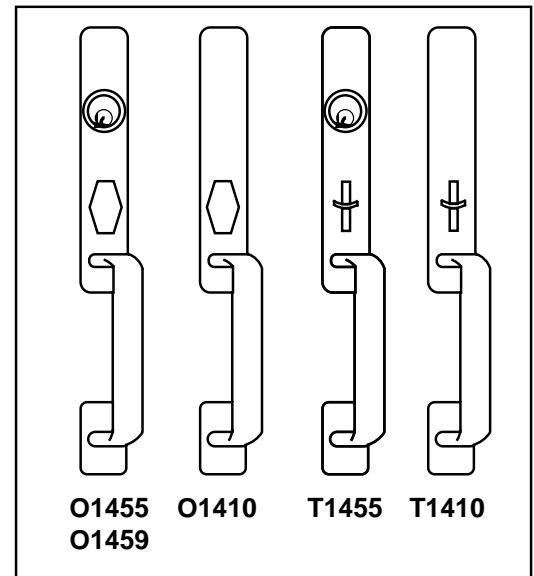

1410, 1455 & 1459 Series Narrow Escutcheon Trim
 With ED4200, ED4400 or ED4800 Series
 Rim and Vertical Rod Exit Devices
Wood or Composite Door Preparation

Corbin
Russwin[®]
 www.corbinrusswin.com

SUPERSEDES	T30851	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30851-1	DATE 9-99