


**Notes:**


1. This template is an addition to the device template.  
Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Dimensions given about a centerline are symmetrical.

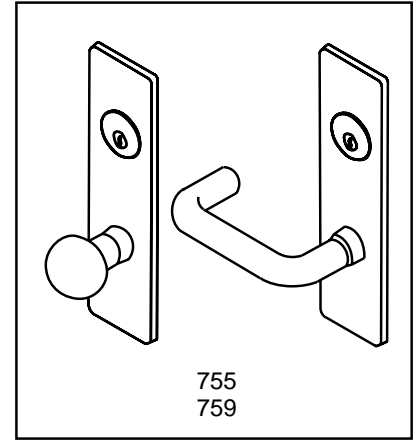

③

755  
759

**Note: Lever and knob prefix does not affect door prep.**

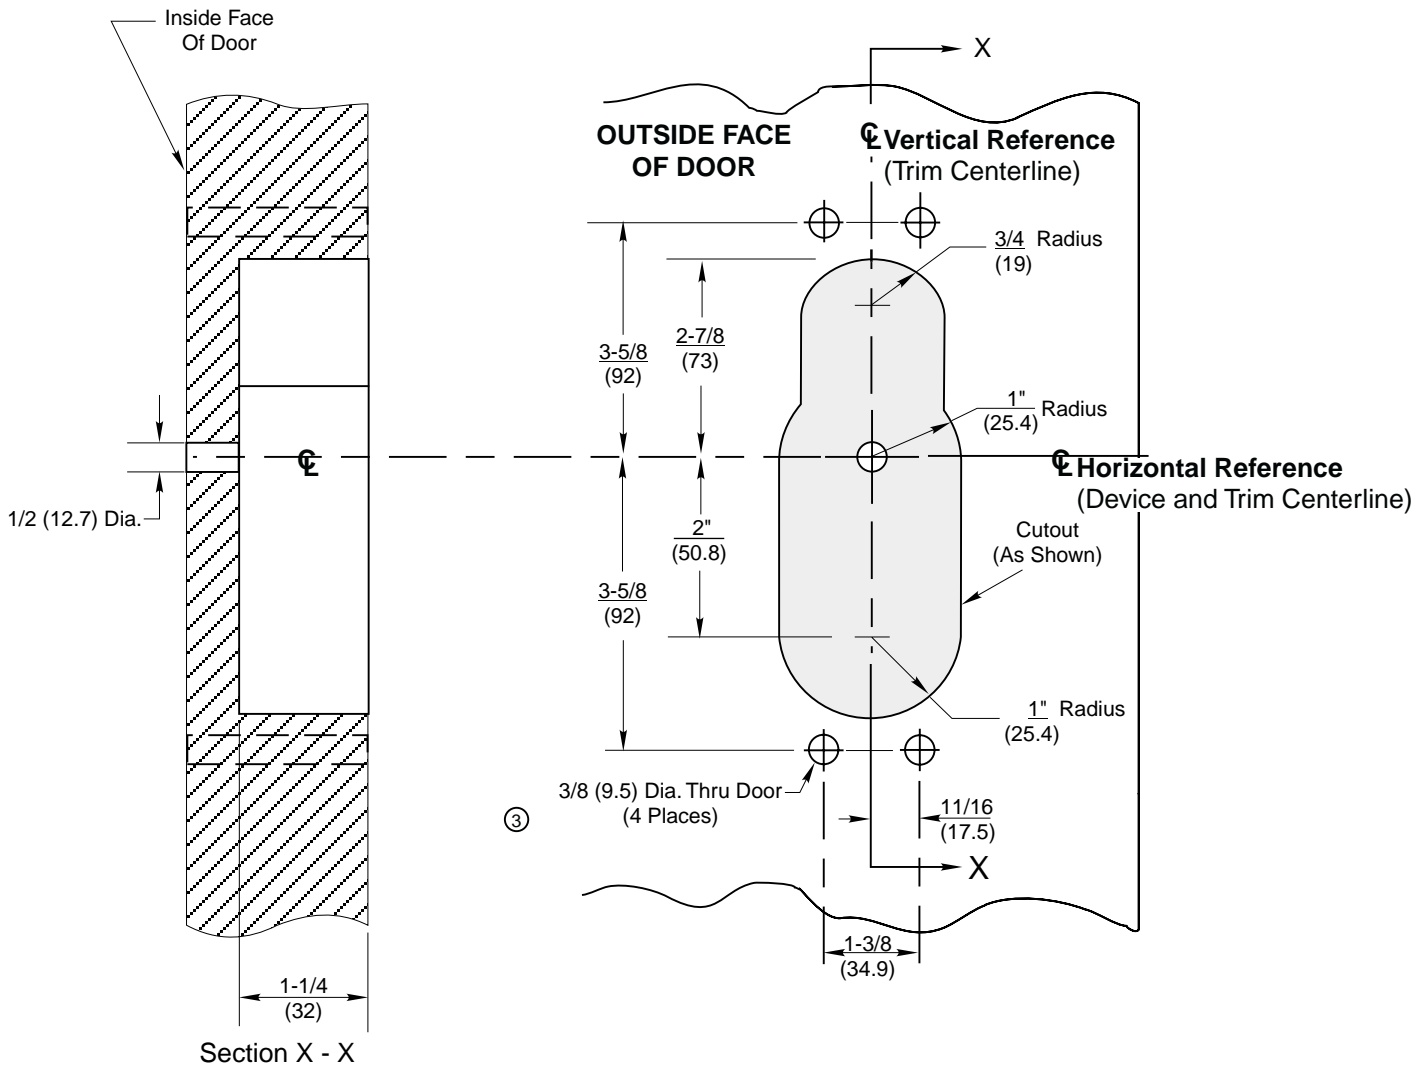

**755 & 759 Series Trim**  
With ED5200, ED5400 or ED5800 Series  
Rim, SecureBolt, and Vertical Rod Exit Devices  
**Wood or Composite Door Preparation**



www.corbinrusswin.com

SUPERSEDES T30855-2 DO NOT SCALE DRAWING

TEMPLATE NUMBER **T30855-3** DATE **10-01**