



**Notes:**

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Shaded area represents mortise cavity from device template.
6. Prepare mounting holes when installing trim.
7. Provide adequate structural support to maintain door integrity during operation.

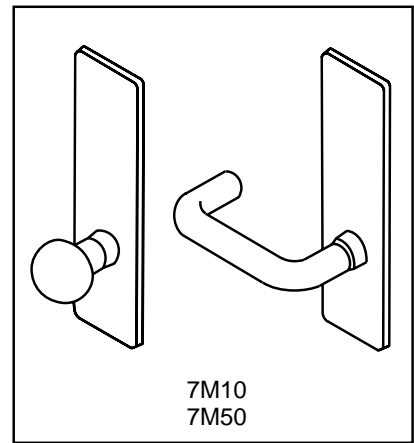

**Note: Lever and knob prefix does not affect door prep.**

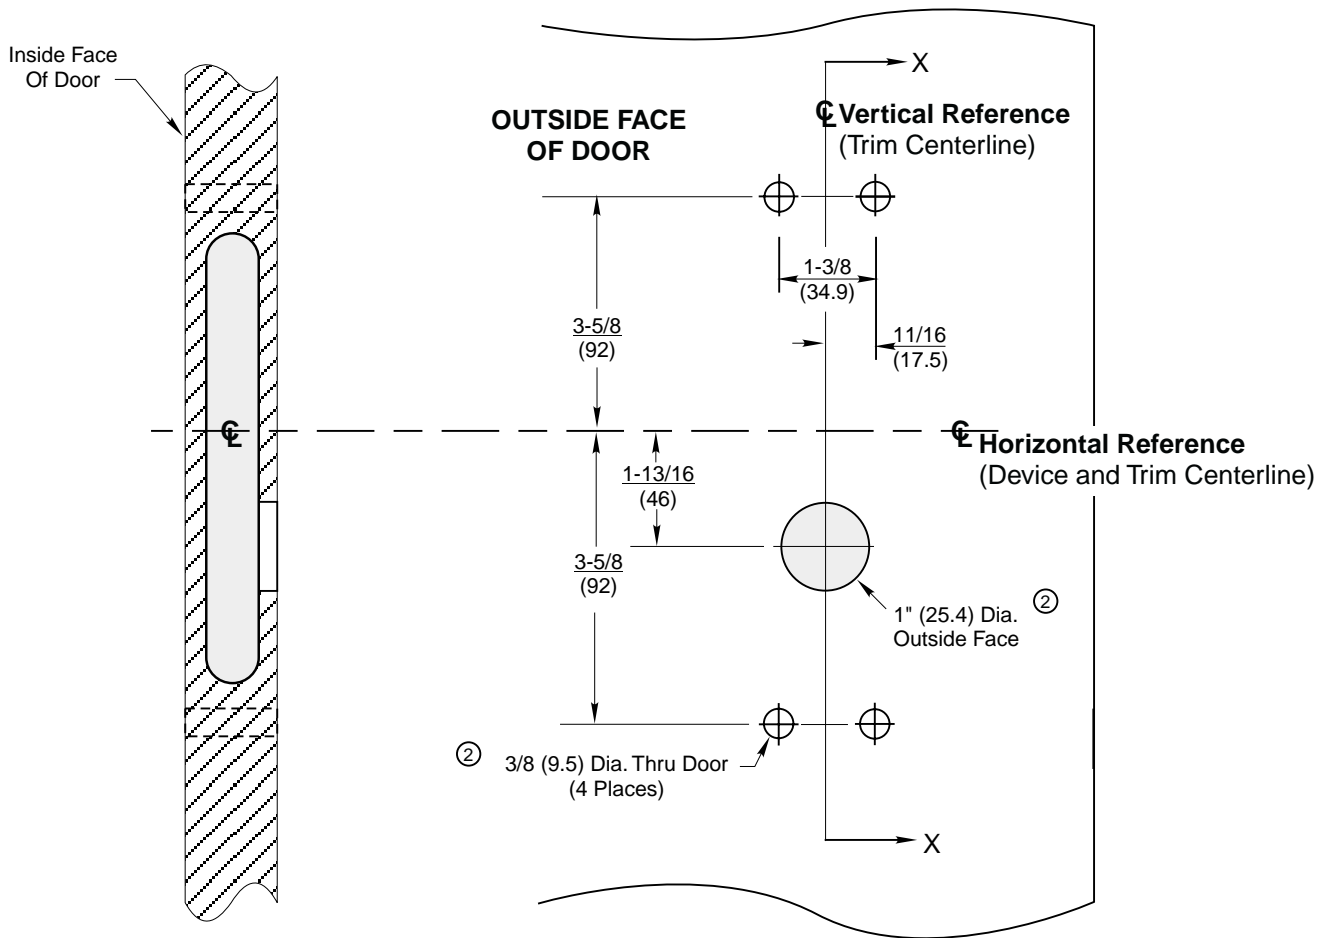

Section X - X

**7M10 & 7M50 Series Trim**  
 With ED5600 Series Mortise Exit Devices  
**Wood or Composite Door Preparation**



SUPERSEDES T30866-1 DO NOT SCALE DRAWING  
 TEMPLATE NUMBER **T30866-2** DATE **10-01**