



**Notes:**


1. This template is an addition to the device template.  
Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Shaded area represents mortise lock cavity from device template.
6. Prepare mounting holes when installing trim.
7. Provide adequate structural support to maintain door integrity during operation.

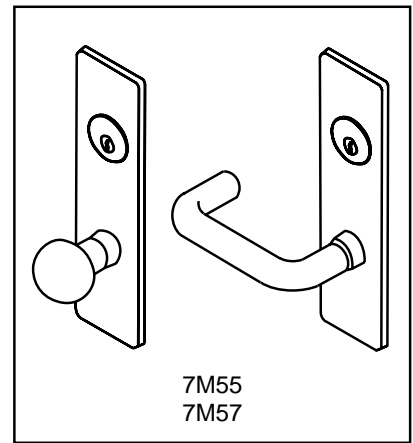

**Note: Lever and knob prefix does not affect door prep.**

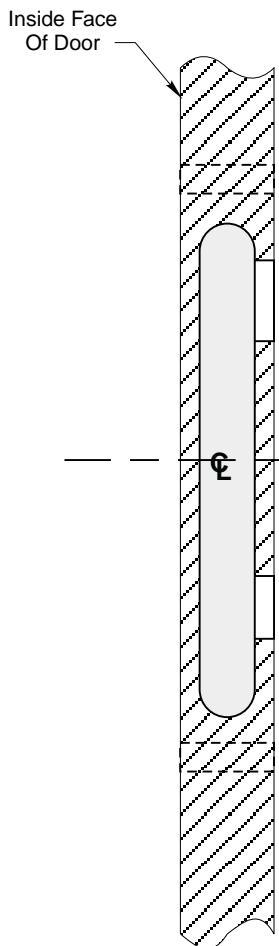

Section X - X

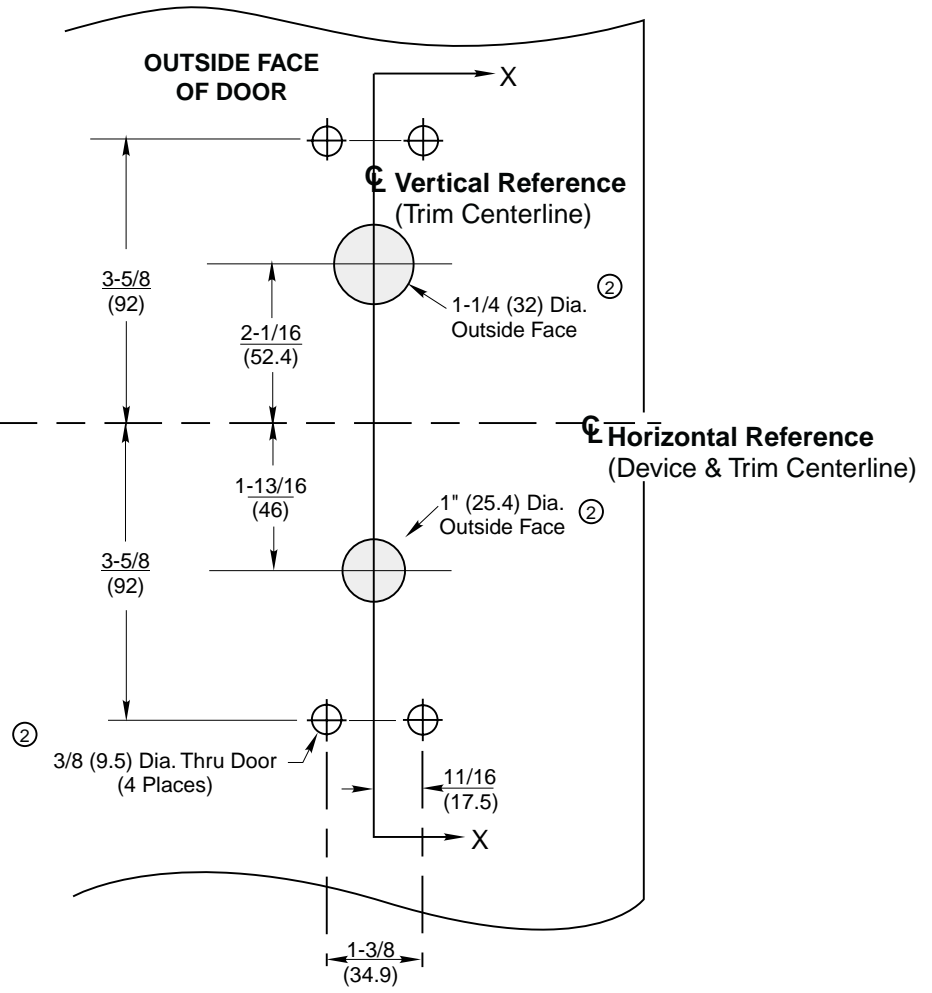

**7M55 & 7M57 Series Trim**  
With ED5600 Series Mortise Exit Devices  
**Wood or Composite Door Preparation**

**Corbin Russwin**<sup>®</sup>  
www.corbinrusswin.com

SUPERSEDES T30865-1 | DO NOT SCALE DRAWING

TEMPLATE NUMBER **T30865-2** | DATE **10-01**