

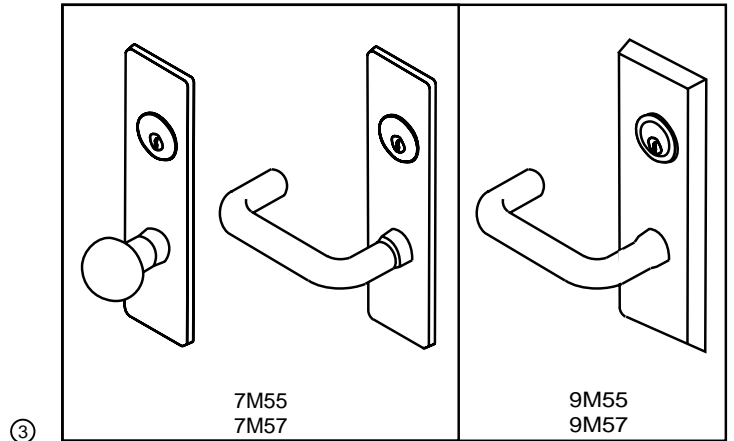


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template T30800.
6. Prepare mounting holes when installing trim.
7. Provide adequate internal support to prevent door deformation after trim is bolted to the device.

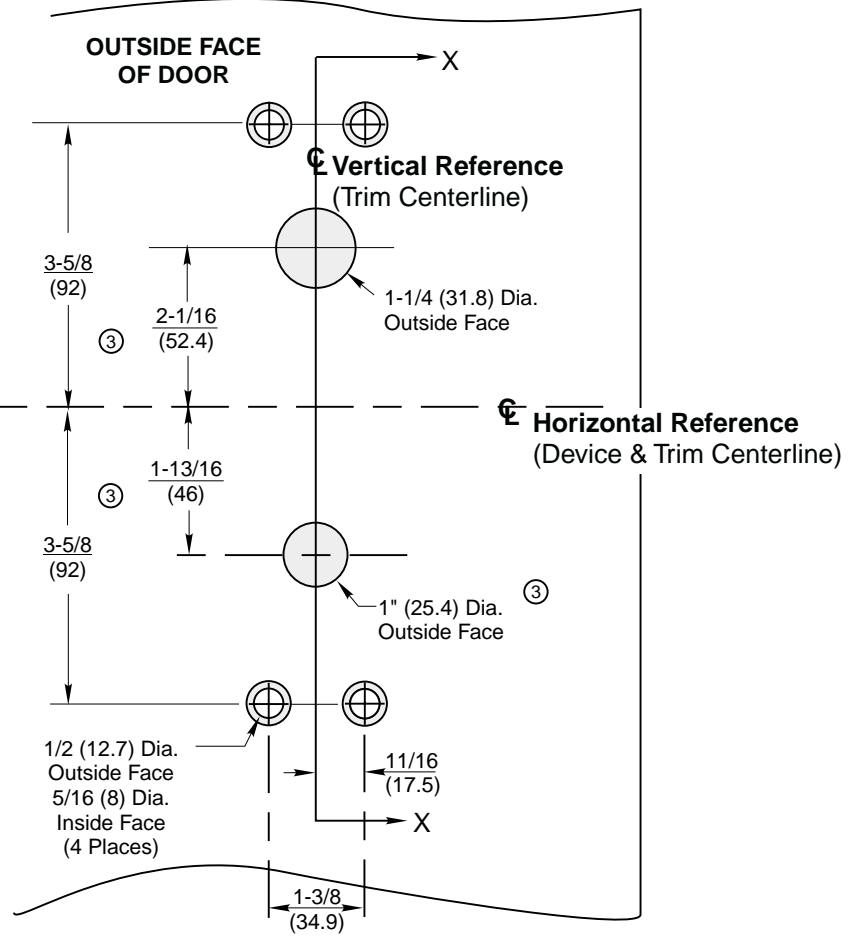

Note: Lever and knob prefix does not affect door prep.

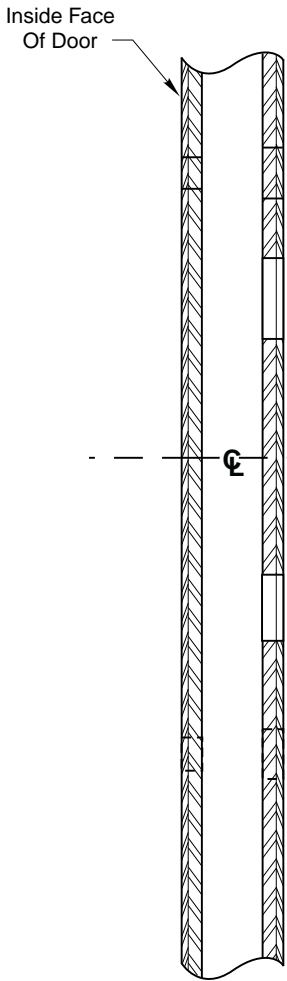

Section X - X

**7M55, 7M57, 9M55 & 9M57 Series Trim
With ED5600 Series Mortise Exit Devices
Metal Door Preparation**



SUPERSEDES	T30829-2	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30829-3	DATE 10-01