



Notes:

1. This template is an addition to the device template.
Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Shaded area represents mortise lock cavity from device template.
6. Prepare mounting holes when installing trim.
7. Provide adequate structural support to maintain door integrity during operation.

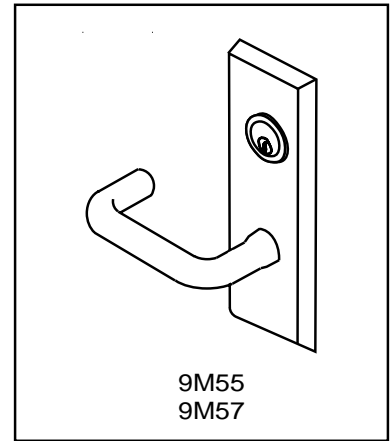

9M55
9M57

Note: Lever and knob prefix does not affect door prep.

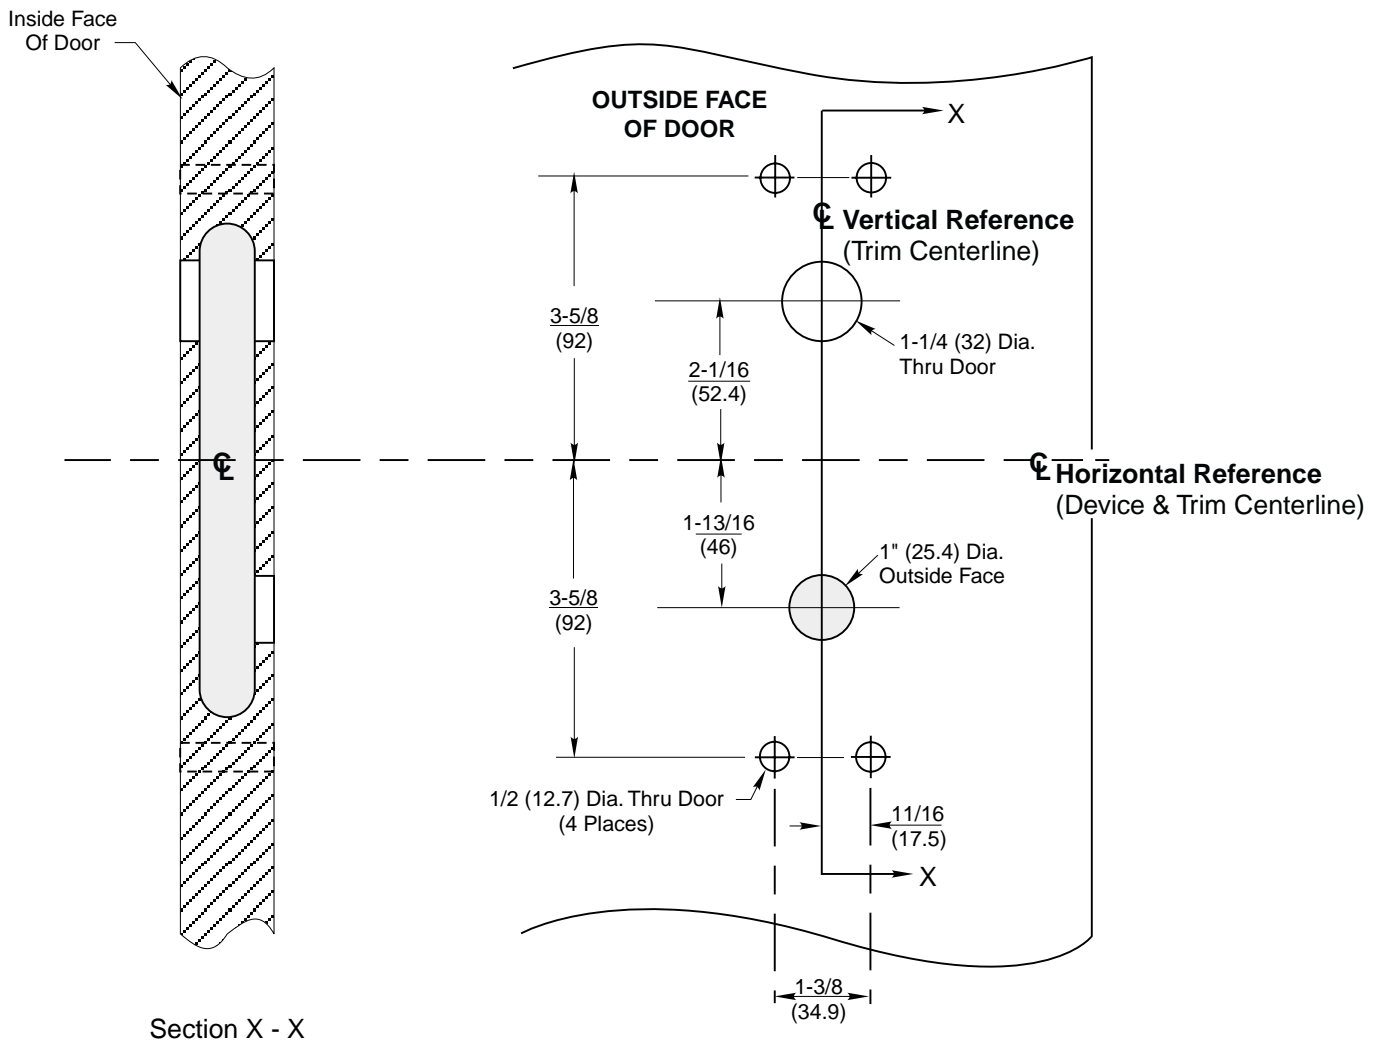

9M55 & 9M57 Series Trim
For Use With IK (INTELLIKEY) Exit Devices
ED5600 Series Mortise Exit Devices
Wood or Composite Door Preparation

Corbin
Russwin
www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING
TEMPLATE NUMBER	DATE
T30965	11-01