


Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Dimensions given in inches and (mm).
3. For Rose by Lever Half Dummy Trim applications, refer to template T30563. ③

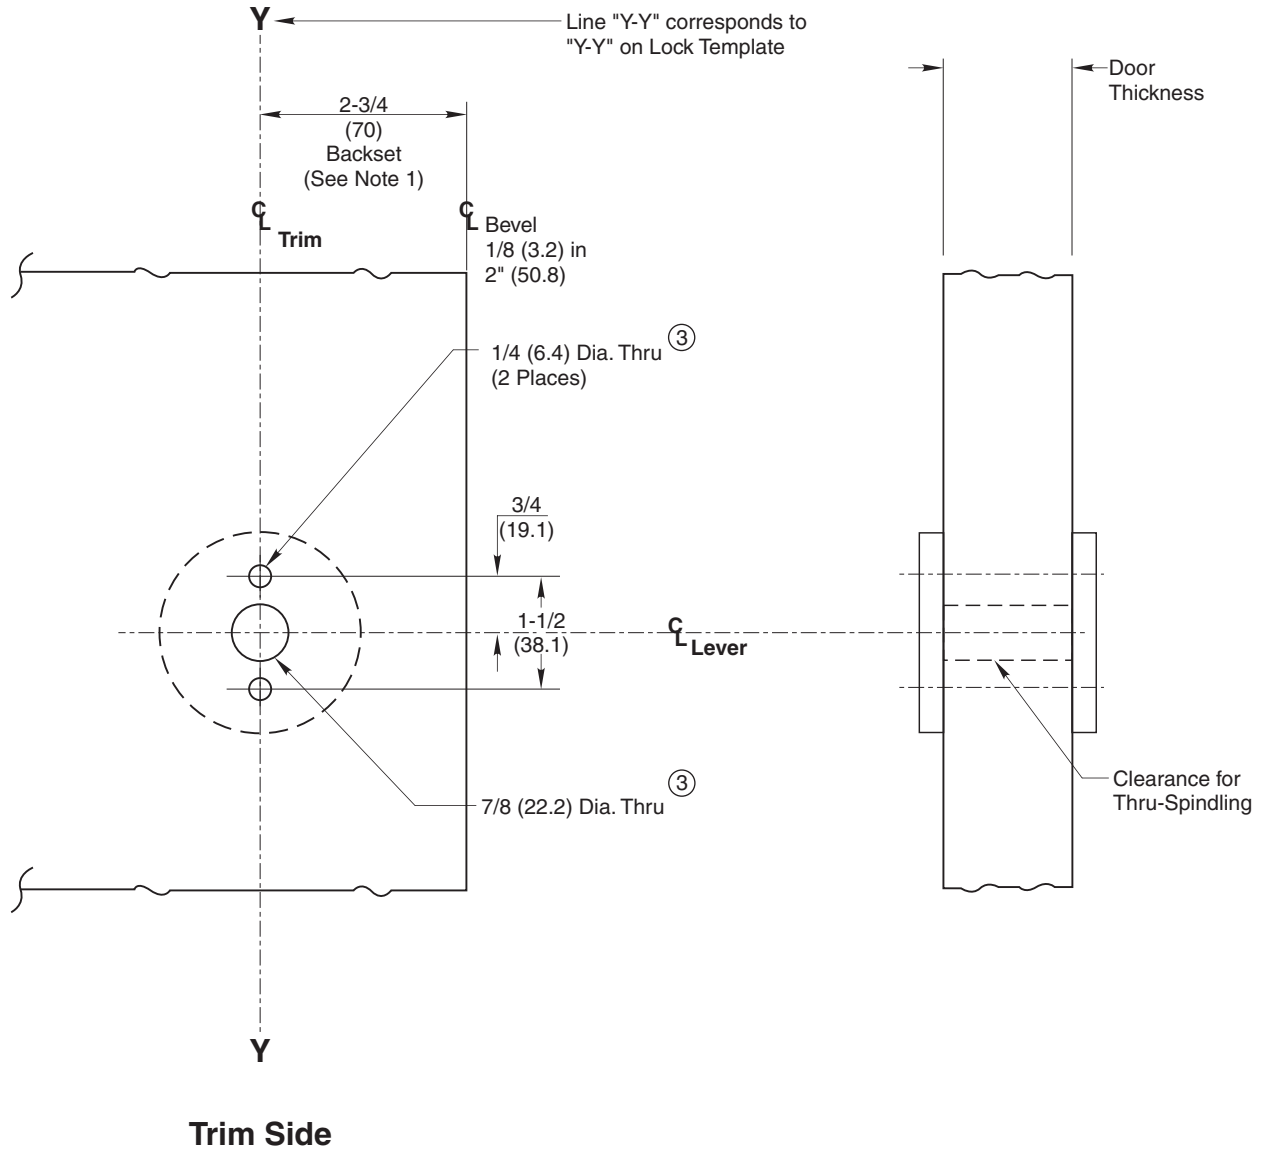

RESPONSIBILITY
 Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

ASA	DSA	LSA	LWF	PSB	RSF
ASB	DSB	LSB	NSA	PSF	RWA
ASF	DSF	LSF	NSB	RSA	RWB
CSA	ESA	LWA	NSF	RSB	RWF
CSB	ESB	LWB	PSA	ZSG	FSG
CSF	ESF	MSG	TSG		

**Mortise Lock Rose
Full Dummy Trim**



ASSA ABLOY
 www.corbinruswin.com

SUPERSEDES	T30564-2	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30564-3	DATE 07-14