



Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Dimensions are in inches (mm).
3. LHR door shown. (RHR opposite)
4. For door reinforcement see template T30800.
5. Prepare mounting holes when installing trim.
6. Provide adequate internal support to prevent door deformation after trim is bolted to the device.
7. Dimensions given about a centerline are symmetrical.
8. Unspecified radius 1/8 maximum.

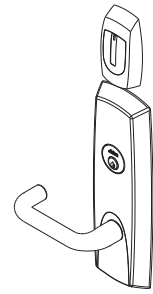

9M600 TCRNE Series

Note: Lever design prefix does not affect door prep.

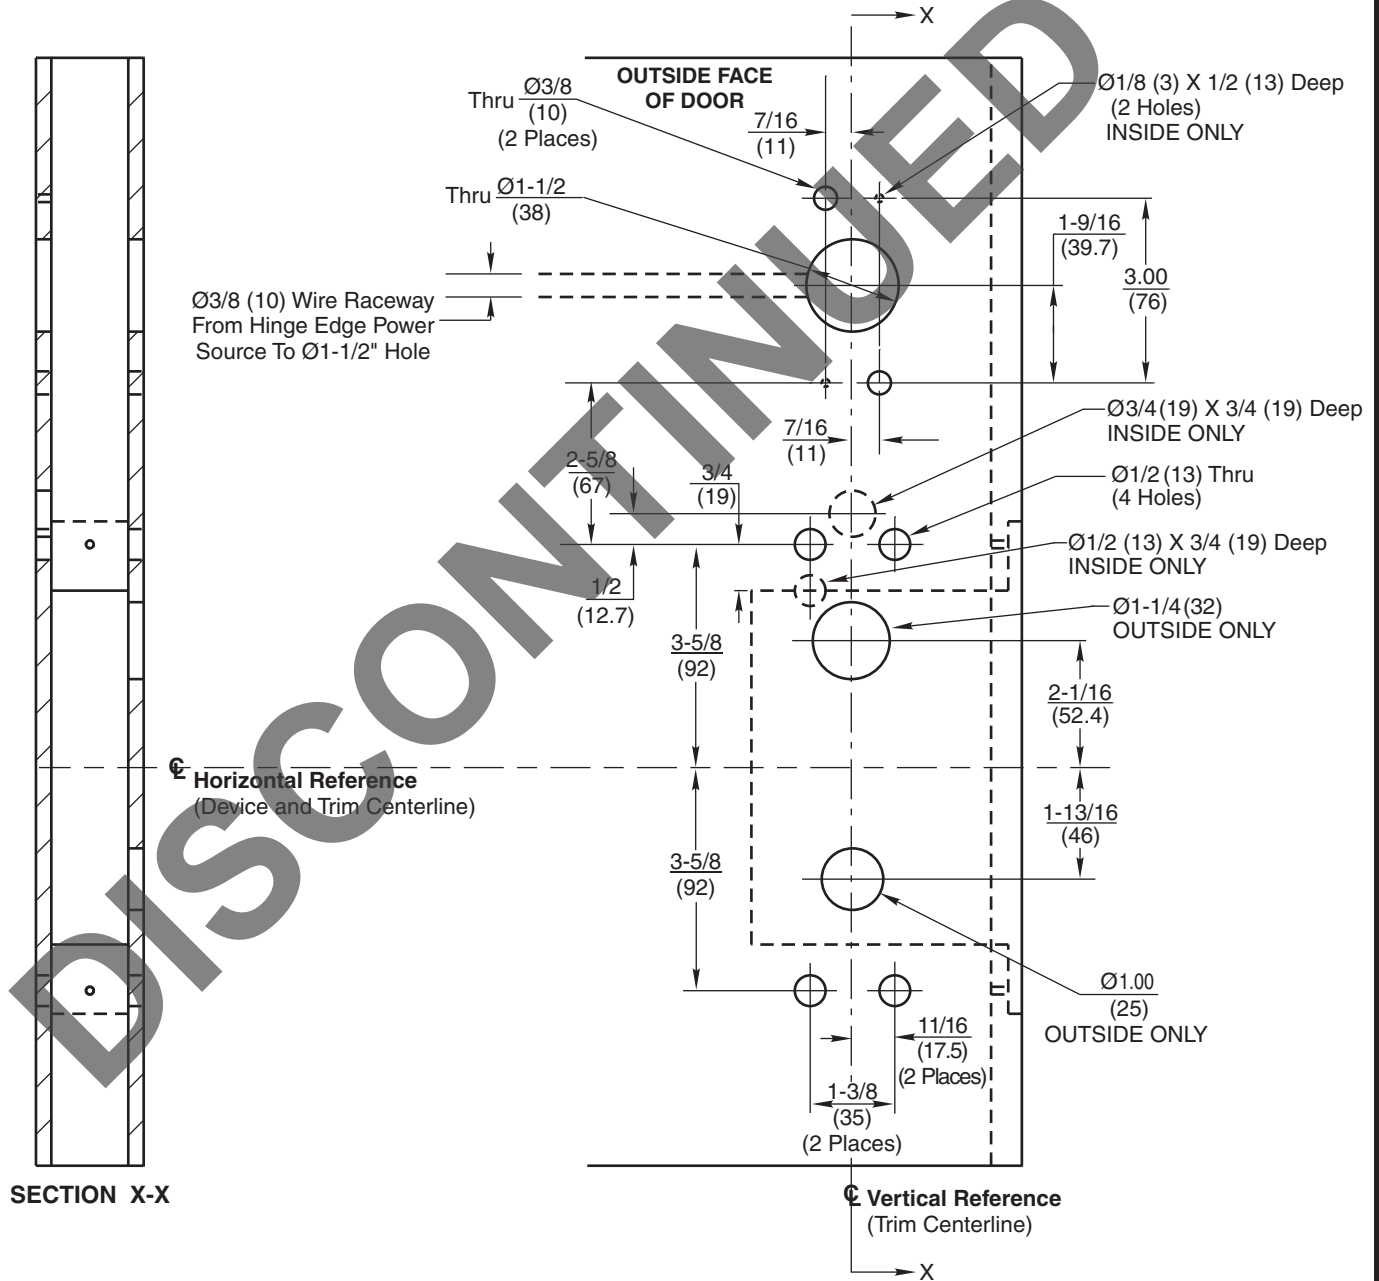

**Access 600® TCRNE
9M600 Series Trim
for ED5600N Series Exit Devices
Metal Door Preparation**




ASSA ABLOY

www.corbinruswin.com

SUPERSEDES	DO NOT SCALE DRAWING		
TEMPLATE NUMBER	SHEET	DATE	
T31165	1 of 2	10-09	

LHR Door

RHR Door

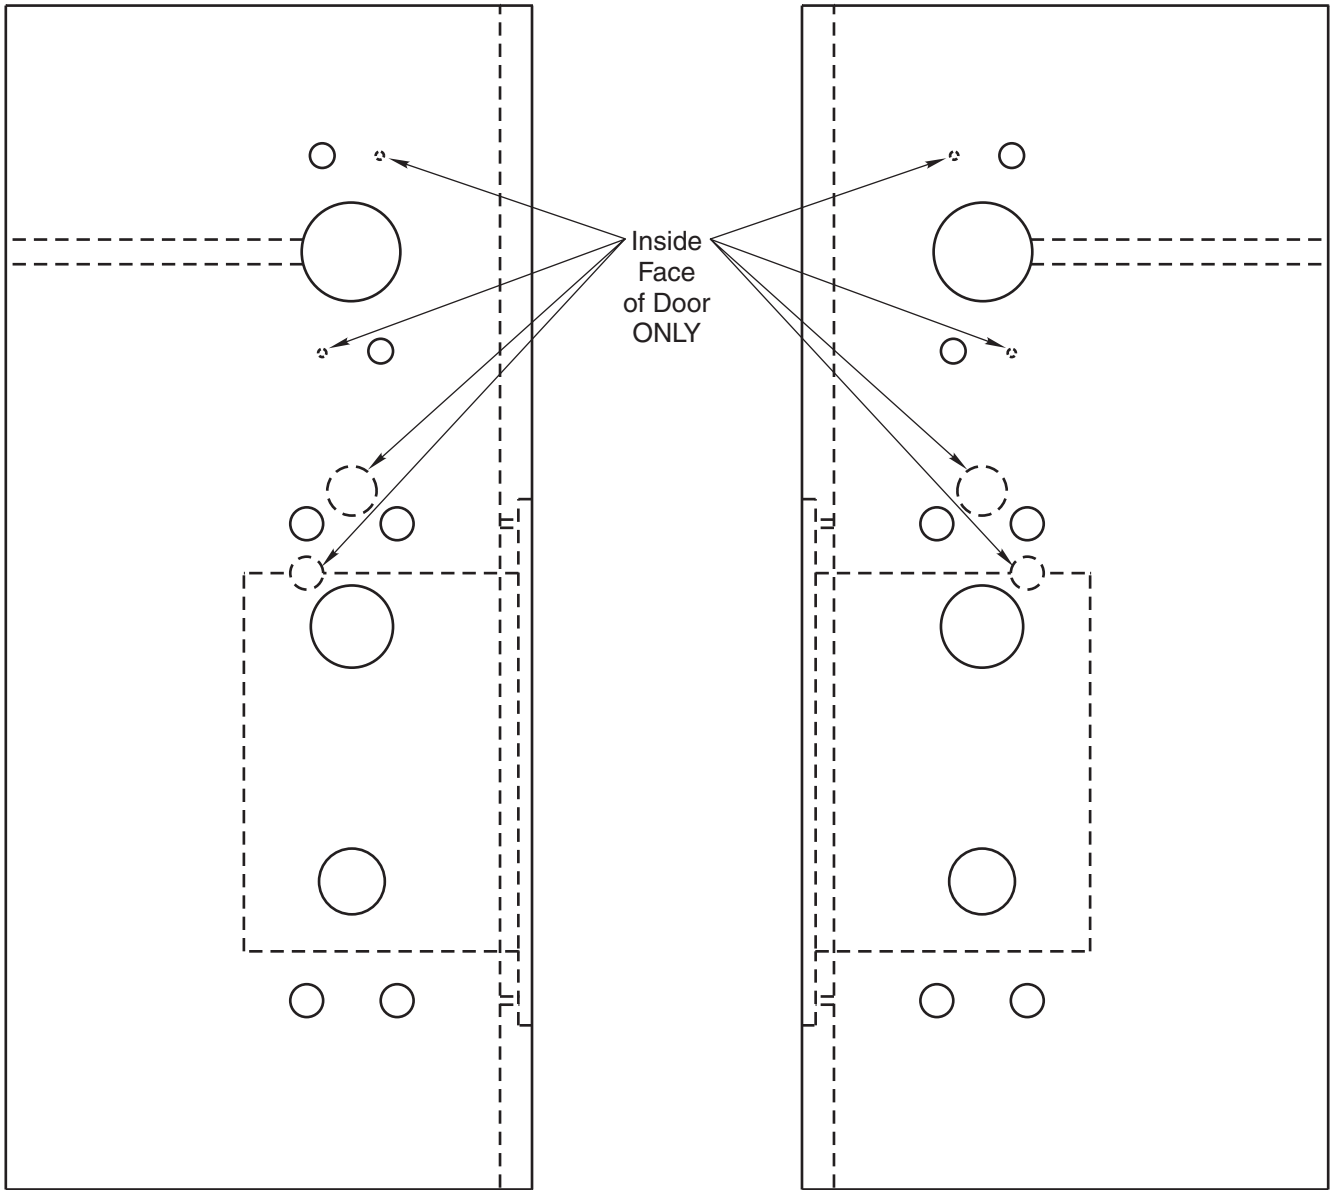

**Access 600® TCRNE
9M600 Series Trim
for ED5600N Series Exit Devices
Metal Door Preparation**



ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	T31165	SHEET 2 of 2 DATE 10-09