



LH/LHR DOORS

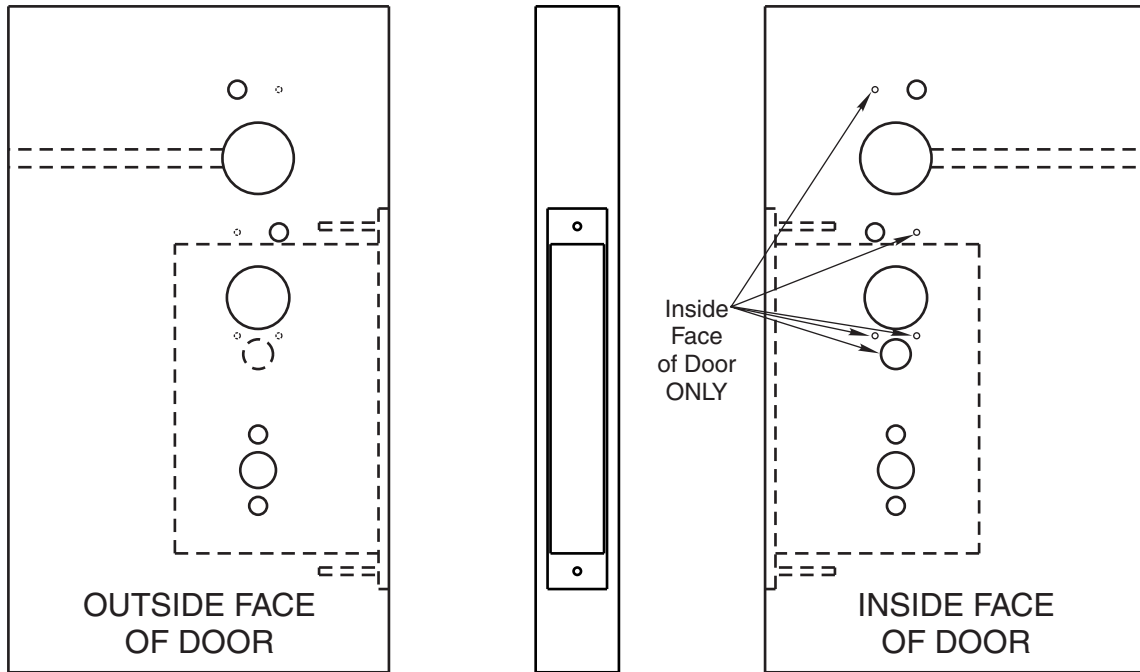

RH/RHR DOORS

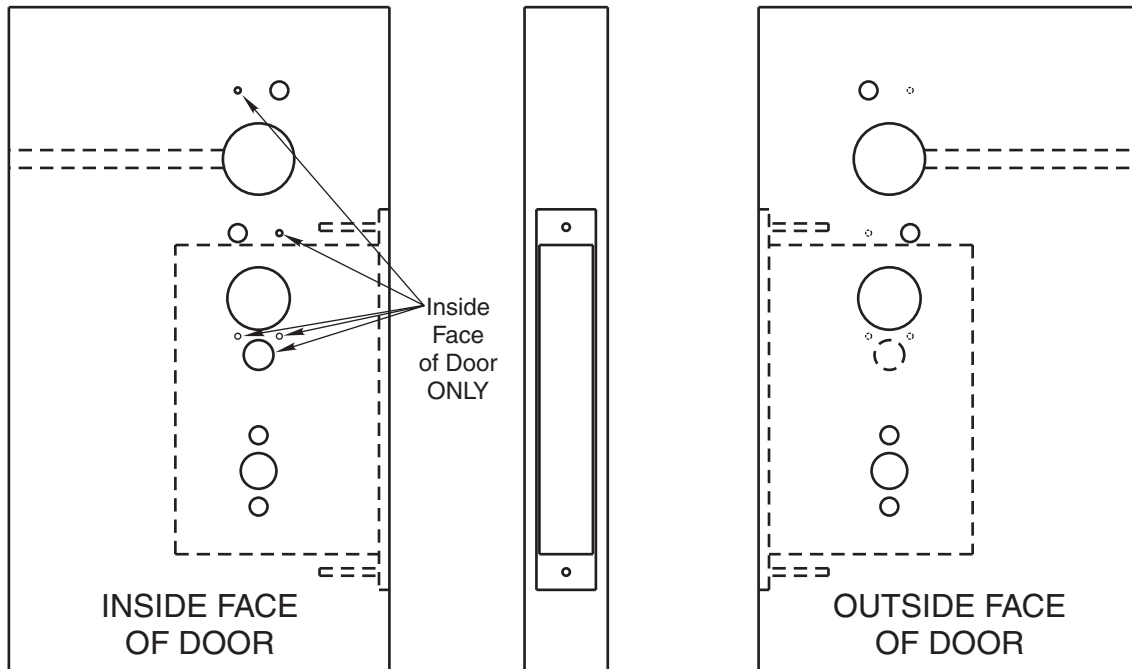

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

Access 600® TCRNE1 ML20600 Series Mortise Lock

**Corbin
Russwin**®

ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES T31070-1 DO NOT SCALE DRAWING

TEMPLATE NUMBER T31070-2 SHEET 2 of 2 DATE 10/14