
Installation Instructions



Anti Vandal Pull Trim

Used with PED5200 & PED5600 Exit Devices

For proper trim installation, prepare door with instructions and template(s) supplied with the exit device, and template MEFT22 (included with anti-vandal trim).

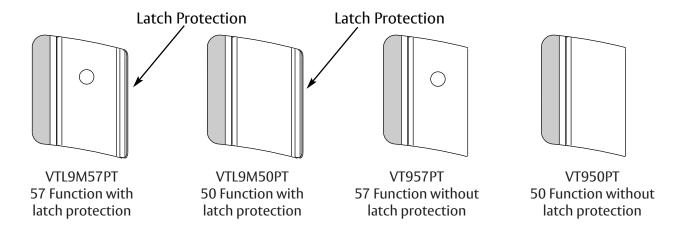



This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www. P65warnings.ca.gov.




♠ WARNING


Attention Installer: Improper installation may result in damage to the product and void the factory warrantv.



50 Function

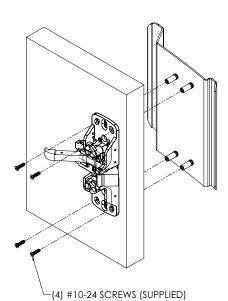

57 Function

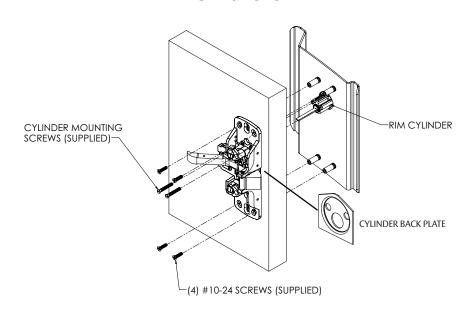

Mount trim with four #10-24 thru-bolts (supplied).