
Notes:

- Backset is measured from centerline of bevel which is centerpoint of door thickness.
- 2. Template applies to Knob by Rose designs.
- 3. Dimensions given in inches and (mm).

TEMPLATE CROSS REFERENCE	
Description	Template
ML2000, ML2200 Series Mortise Lock	T30600
ML2000, ML2200 Series Mortise Lock (MR)	T30605

Trim	Rose Design
BRC	_
BWC	2-7/8" Dia.
GRC	(73)
GWC	` ,
BRD	
BWD	3-1/2" Dia.
GRD	(88.9)
GWD	,
BRE	
BWE	3" Square
GRE	(76.2)
GWE	` ,

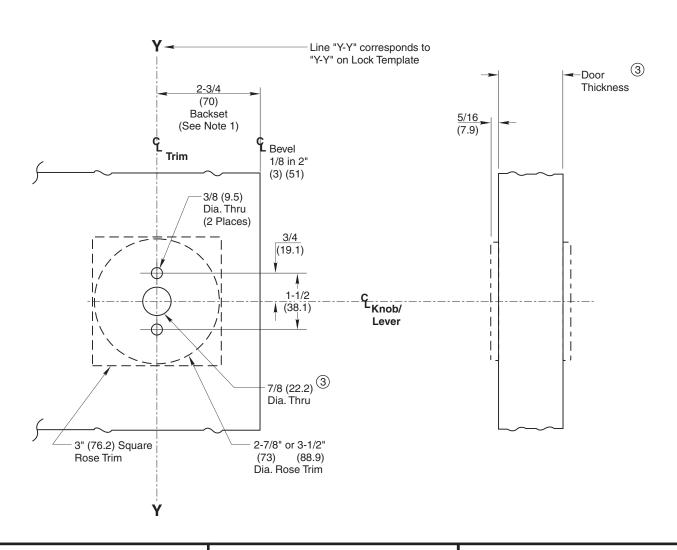

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

BRC BWD GRE BRD BWE GWC BRE GRC GWD BWC GRD GWE

Mortise Lock Rose Trim

Corbin Russwin

ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES T30545-2 DO NOT SCALE DRAWING

EWIFLATE NOWIBER

T30545-3

~~ 07-14