


TEMPLATE CROSS REFERENCE

Description	Template
ML2000, ML2200 Series Mortise Lock	T30600
ML2000, ML2200 Series Mortise Lock (MR)	T30605

Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Refer to appropriate mortise lock template for cylinder and turnpiece preps when required.
3. Dimensions given in inches and (mm).

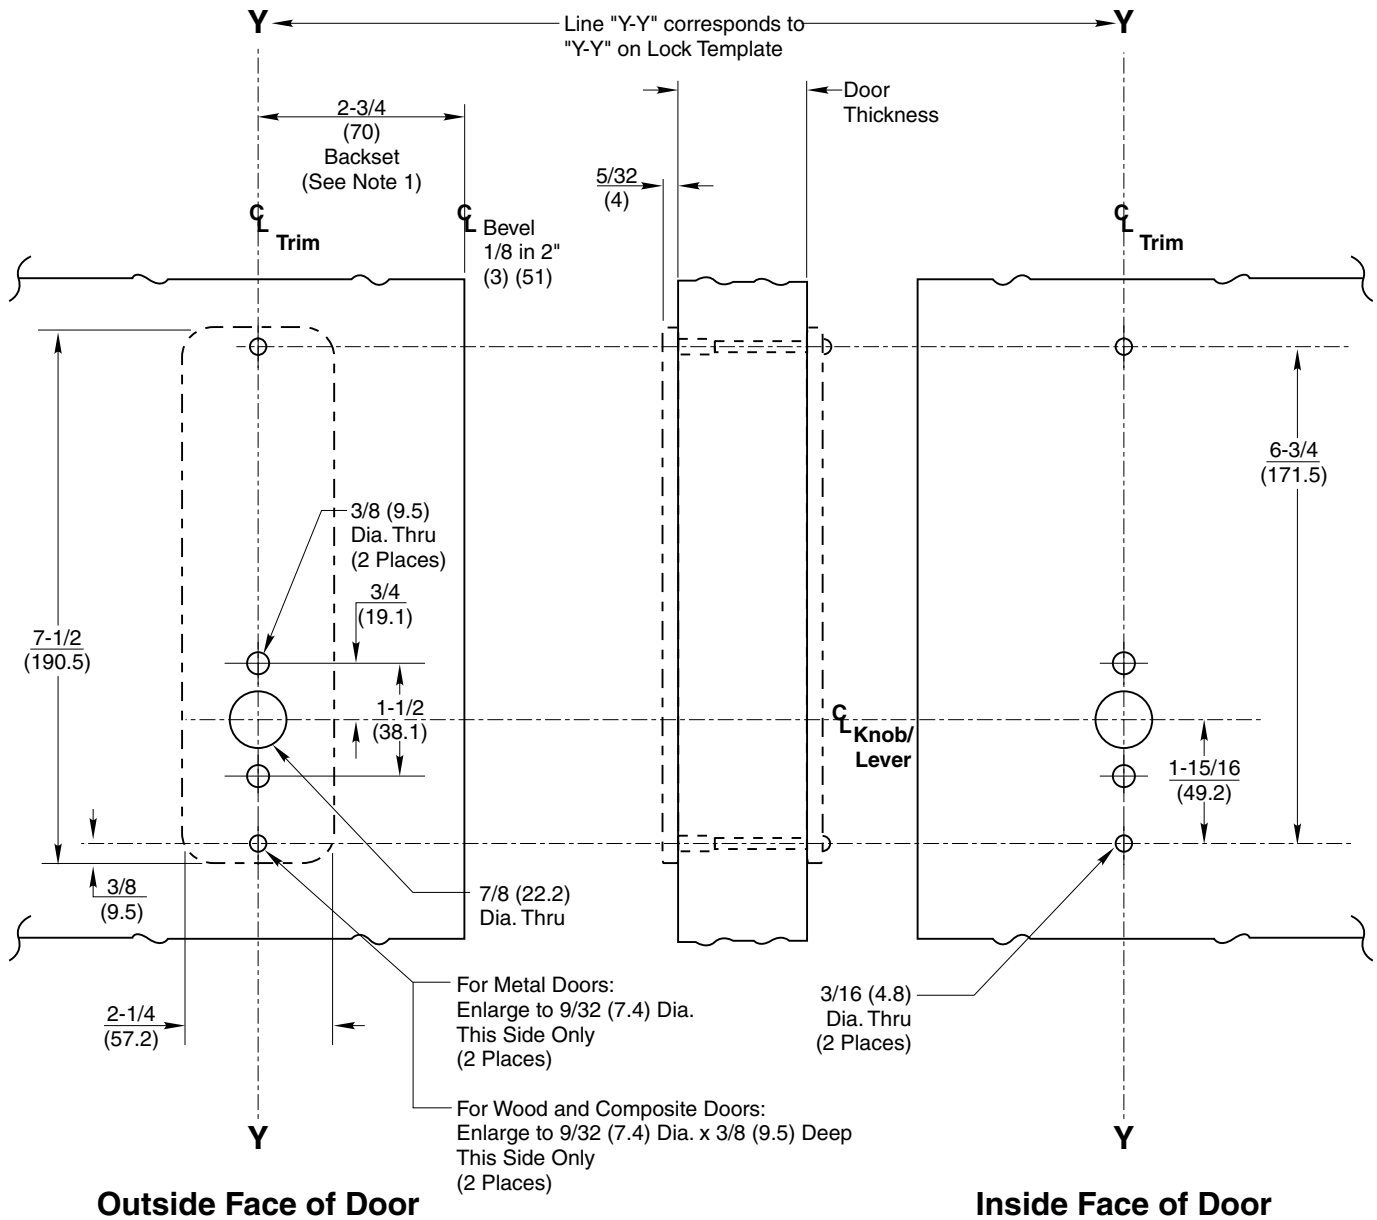

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

ASM ESM LWM RSM
 CSM GZM NSM RWM
 DSM LSM PSM YZM

Mortise Lock Escutcheon Trim

⑥

**Corbin
 Russwin**
ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES	T30453-5	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30453-6	DATE 11-18