


**TEMPLATE CROSS REFERENCE**

Description	Template
ML2000, ML2200 Series Mortise Lock (HT)	T30607

**Notes:**

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Refer to appropriate mortise lock template for cylinder and turnpiece preps when required.
3. Dimensions given in inches and (mm).

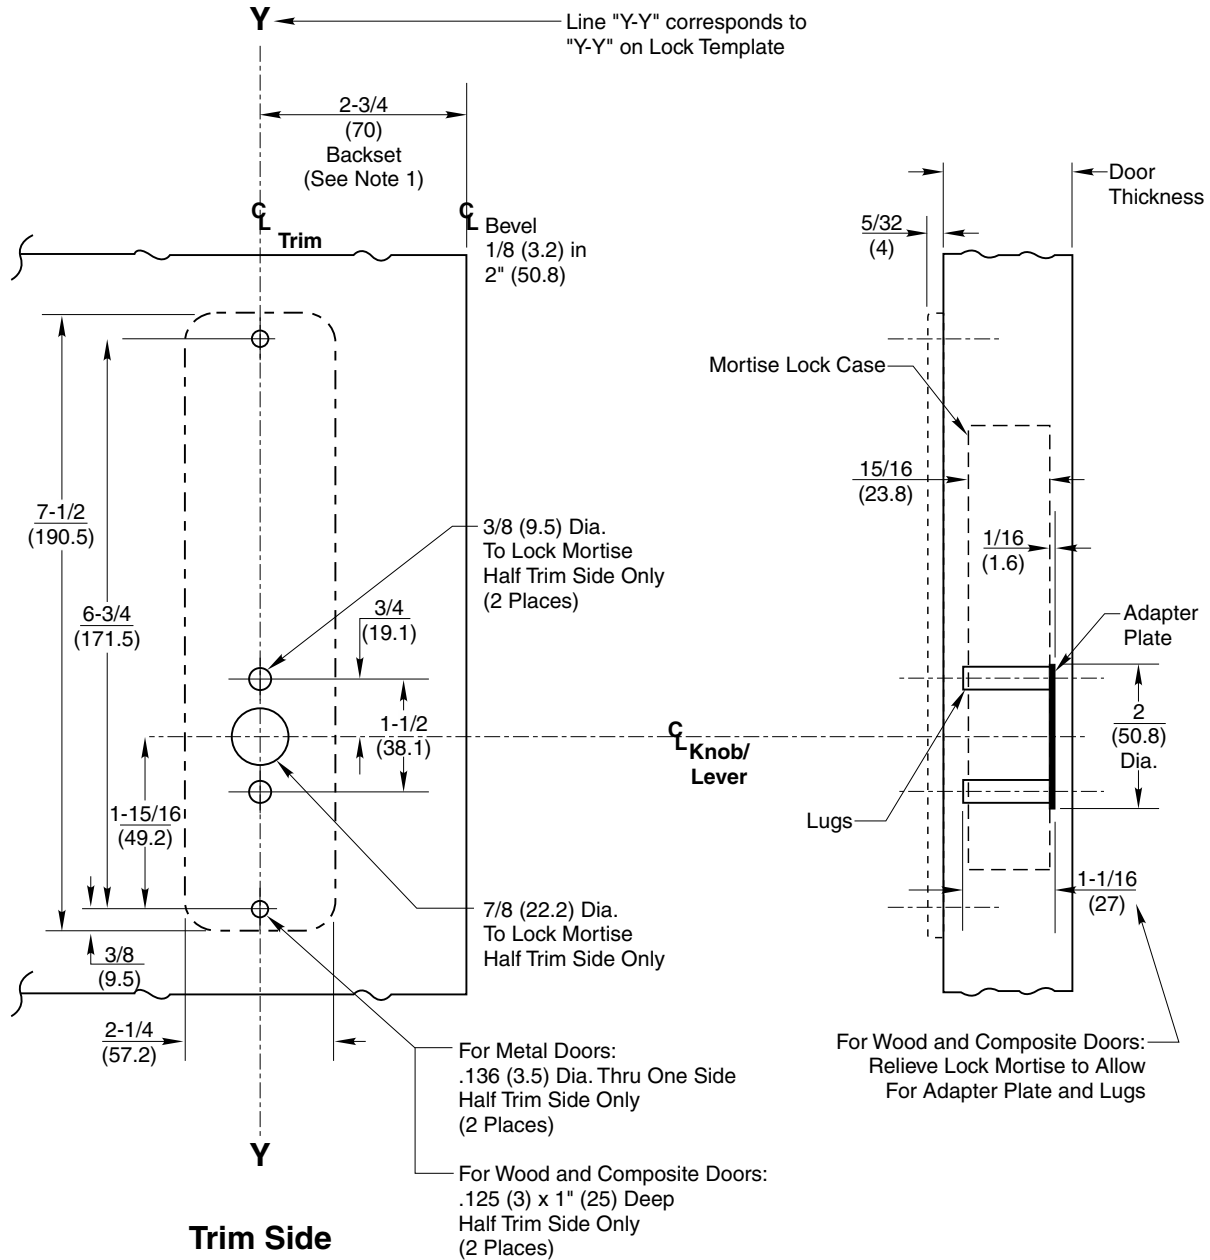

**RESPONSIBILITY**

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

- |     |     |     |
|-----|-----|-----|
| ASM | GZM | PSM |
| CSM | LSM | RSM |
| DSM | LWM | RWM |
| ESM | NSM | YZM |

**Mortise Lock Escutcheon  
Half Working Trim**



**ASSA ABLOY**

www.corbinrusswin.com

SUPERSEDES	T30552-4	DO NOT SCALE DRAWING
TEMPLATE NUMBER	<b>T30552-5</b>	DATE <b>11-18</b>