


Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Dimensions given in inches and (mm).
3. Full dummy trim same as shown except applied to both sides.

Half Dummy Trim Shown

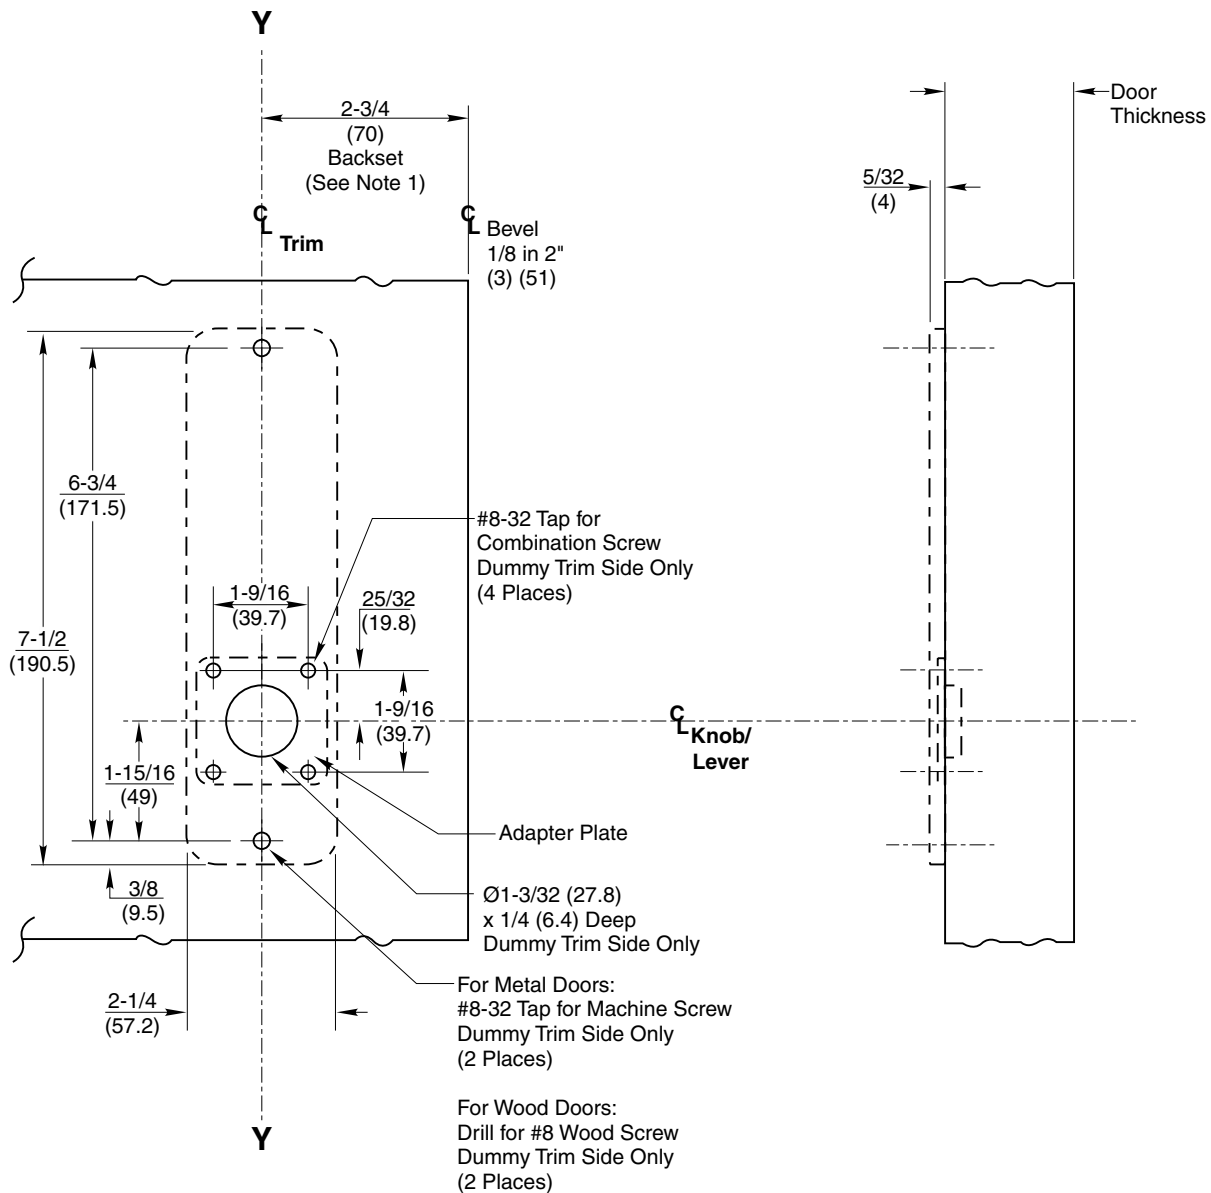

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

ASM GZM PSM
CSM LSM RSM
DSM LWM RWM
ESM NSM YZM

②

**Mortise Lock Escutcheon
Half and Full Dummy Trim**

**Corbin
Russwin**
ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES	T30558-1	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30558-2	DATE 11-18