


**TEMPLATE CROSS REFERENCE**

Description	Template
ML2000, ML2200 Series Mortise Lock	T30600
ML2000, ML2200 Series Mortise Lock (MR)	T30605

**Notes:**

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Refer to appropriate mortise lock template for cylinder and turnpiece preps when required.
3. Dimensions given in inches and (mm).

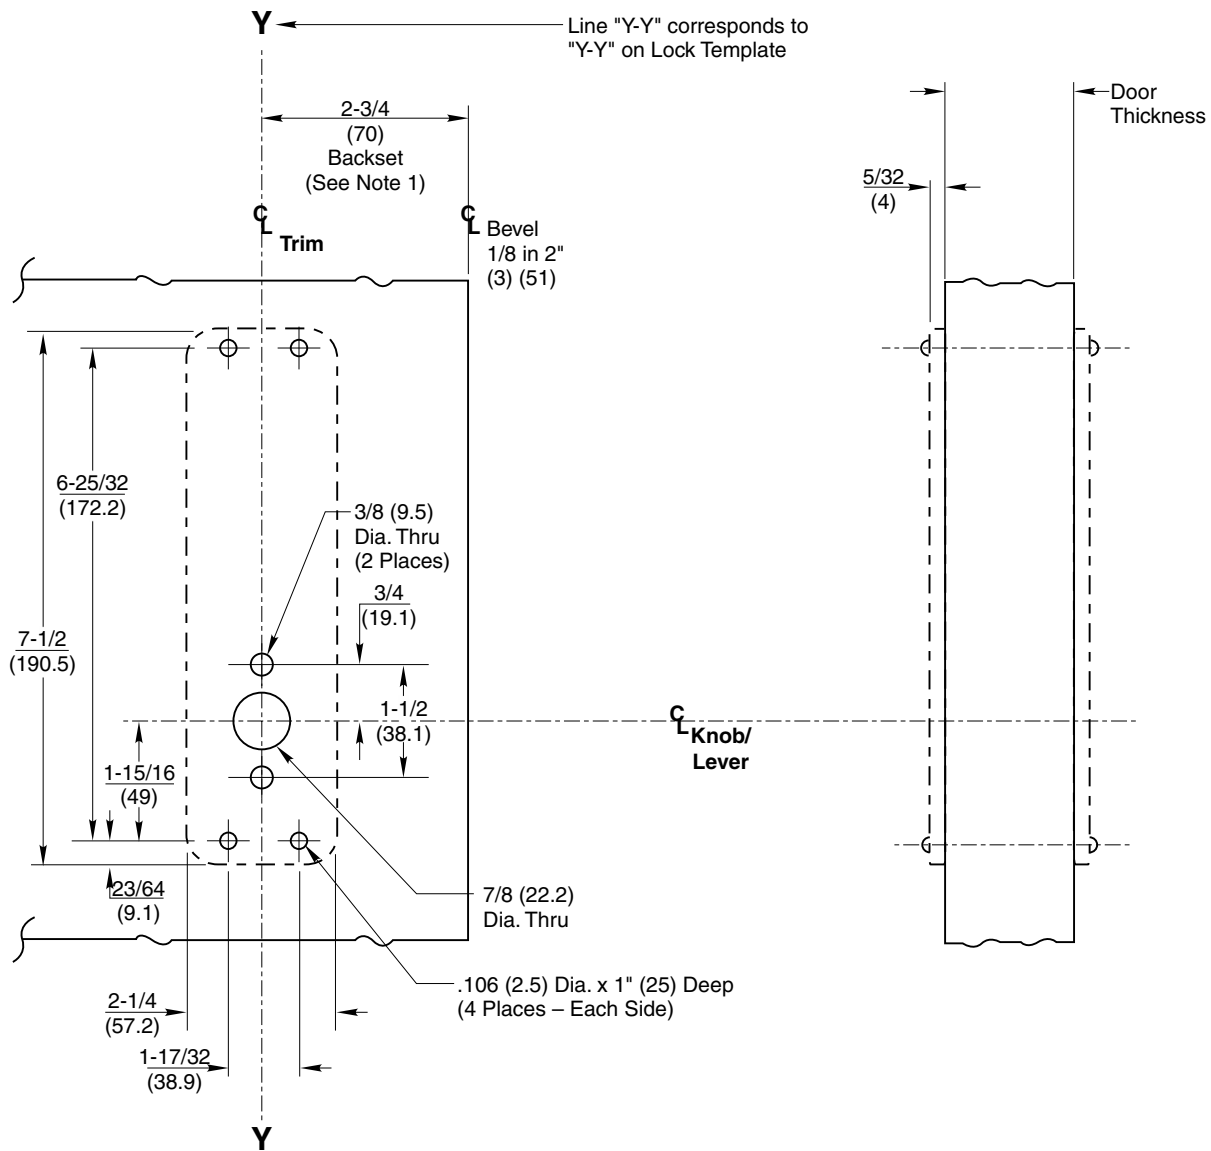

**RESPONSIBILITY**

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

ASN ESN LWN RSN  
 CSN GZN NSN RWN  
 DSN LSN PSN YZN

⑥

**Mortise Lock Escutcheon Trim**

**Corbin Russwin**  
**ASSA ABLOY**

www.corbinrusswin.com

SUPERSEDES	T30455-5	DO NOT SCALE DRAWING
TEMPLATE NUMBER	<b>T30455-6</b>	DATE <b>11-18</b>