


**TEMPLATE CROSS REFERENCE**

Description	Template
ML2000, ML2200 Series Mortise Lock	T30600

**Notes:**

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Refer to appropriate mortise lock template for cylinder and turnpiece preps when required.
3. Dimensions given in inches and (mm).

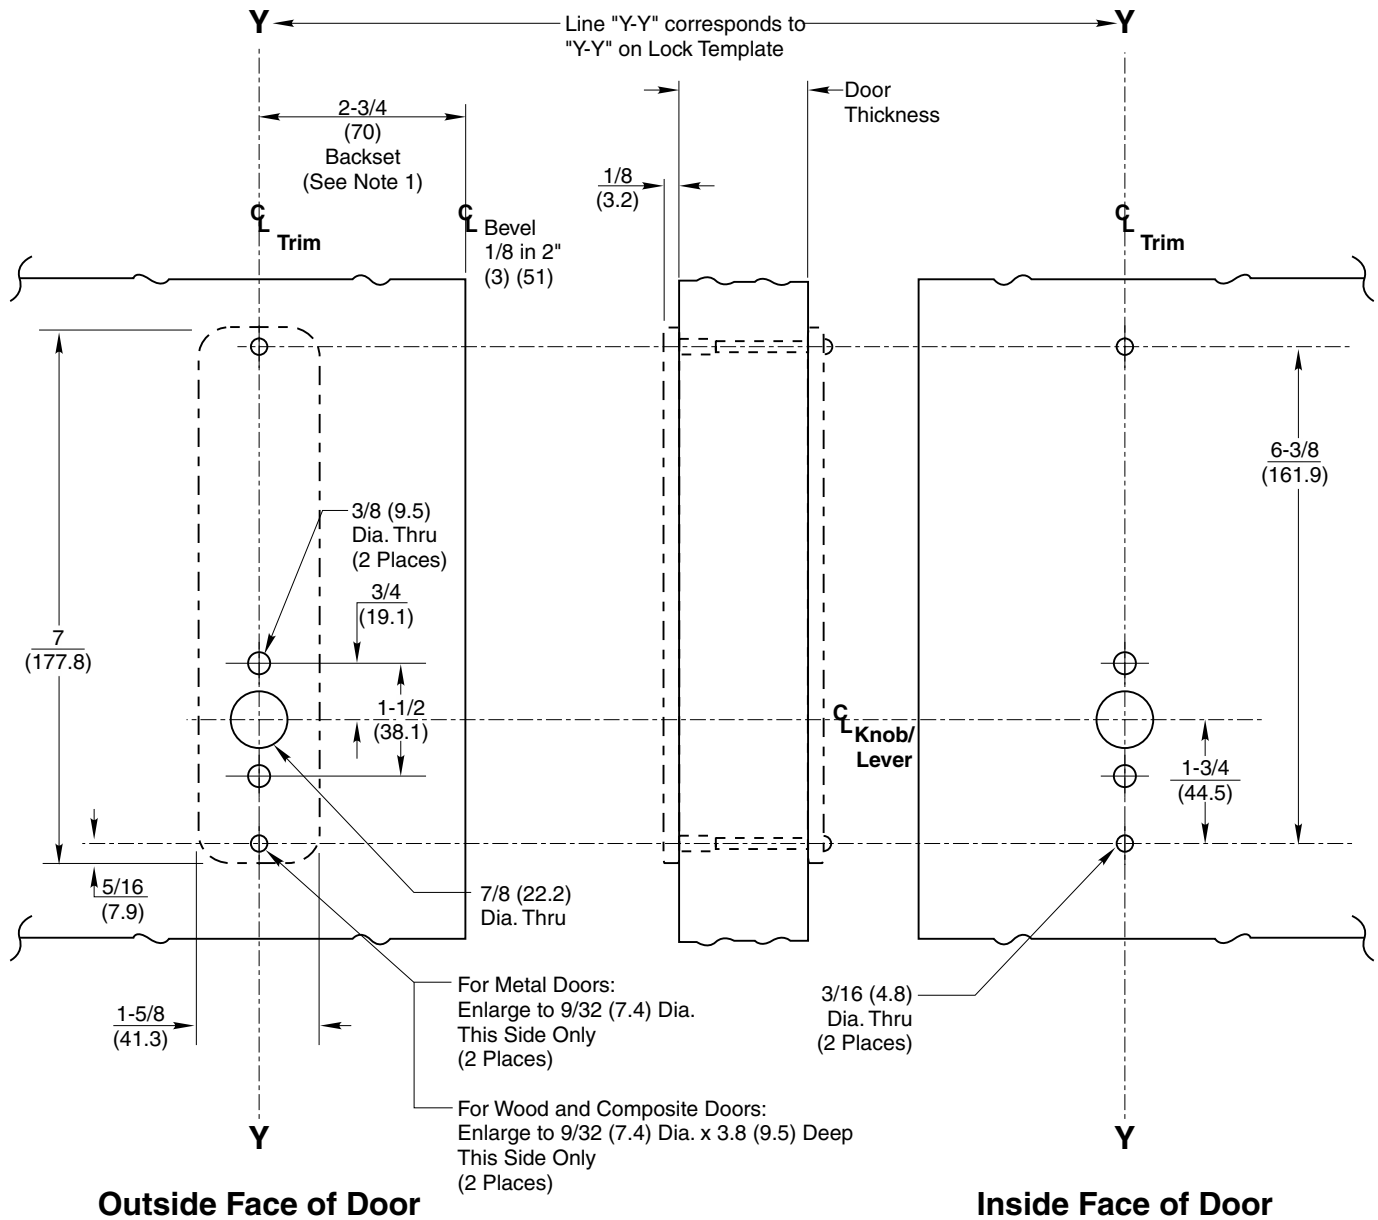

**RESPONSIBILITY**

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

ASP    ESP    LWP    RSP  
 CSP    GZP    NSP    RWP  
 DSP    LSP    PSP    YZP

**Mortise Lock Escutcheon Trim**

⑤

**Corbin  
 Russwin**  
**ASSA ABLOY**

www.corbinrusswin.com

SUPERSEDES T30454-4	DO NOT SCALE DRAWING
TEMPLATE NUMBER T30454-5	DATE 11-18