


TEMPLATE CROSS REFERENCE

Description	Template
ML2000, ML2200 Series Mortise Lock	T30600

Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Refer to appropriate mortise lock template for cylinder and turnpiece preps when required.
3. Dimensions given in inches and (mm).

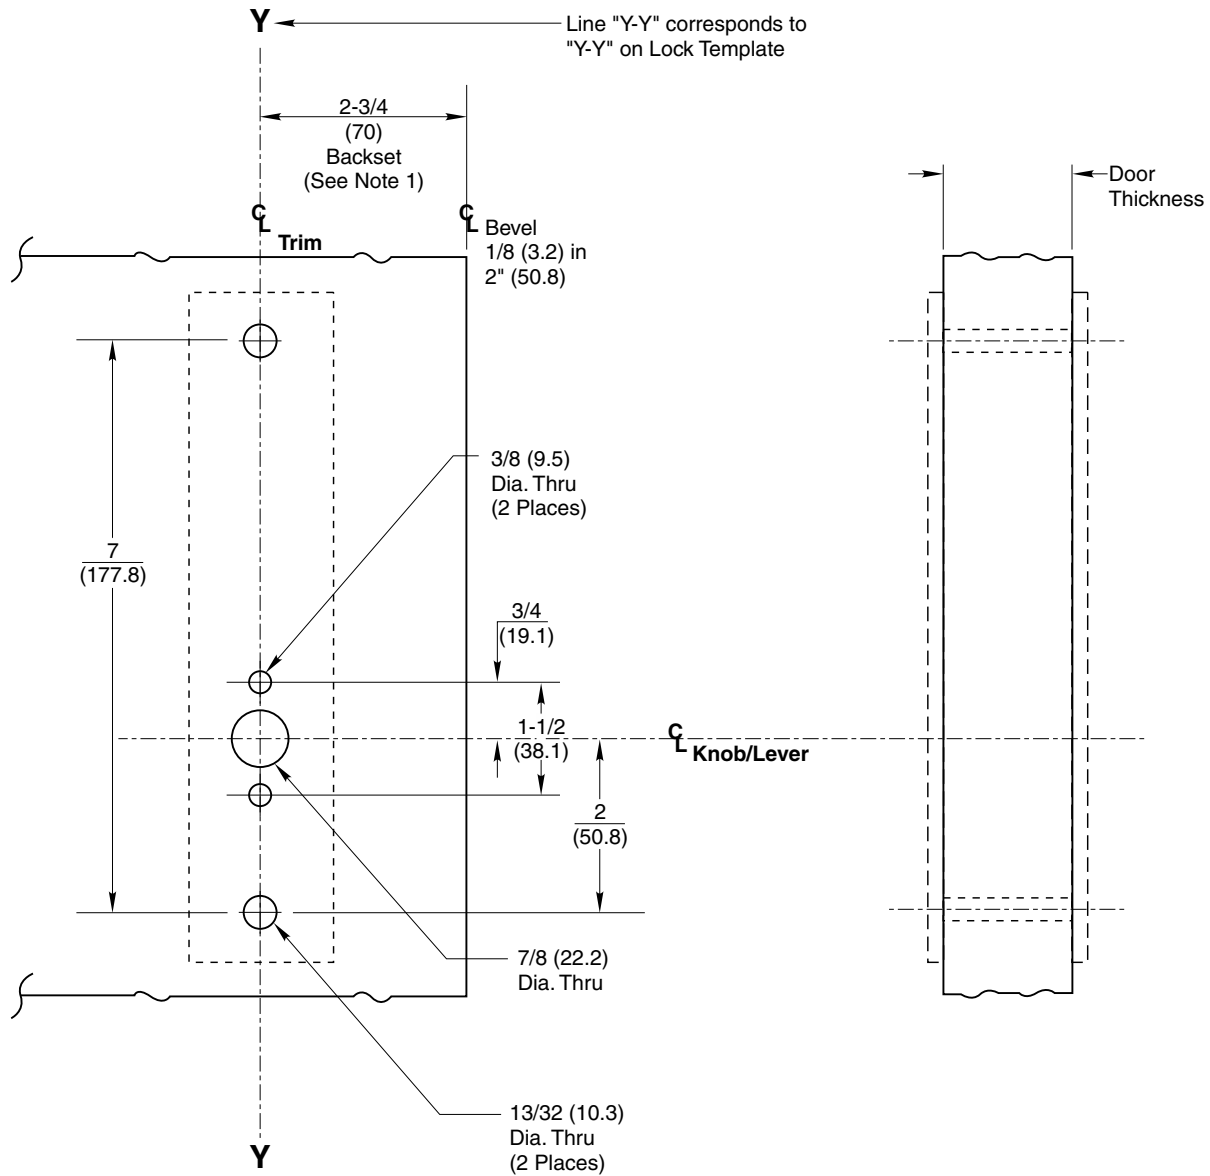

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

ASR	FSL	MSL	RWR
CSR	GZR	NSR	TSL
DSR	LSR	PSR	YZR
ESR	LWR	RSR	ZSL

⑥



ASSA ABLOY

www.corbinrusswin.com

Mortise Lock Escutcheon Trim

SUPERSEDES	T30572-5	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30572-6	DATE 11-18