


Notes:

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. For Half Dummy Trim, refer to template T30652.
3. Dimensions given in inches and (mm).

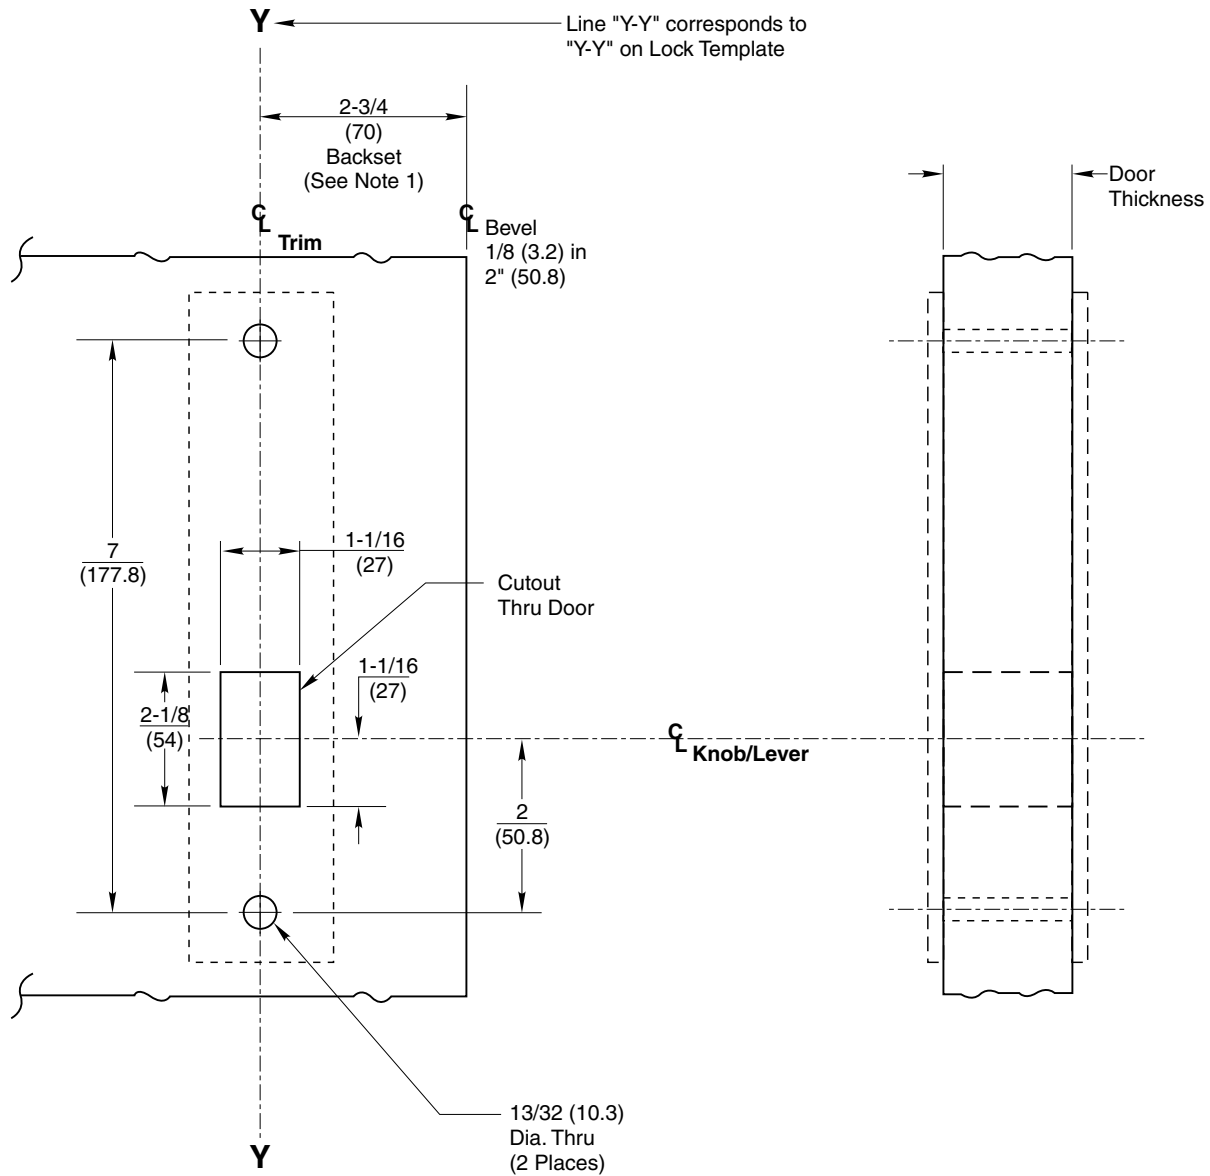

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

ASR	FSL	MSL	RWR	③
CSR	GZR	NSR	TSL	
DSR	LSR	PSR	YZR	
ESR	LWR	RSR	ZSL	

All MUSEO Levers x R/L-Esc
Mortise Lock Escutcheon
Full Dummy Trim

**Corbin
Russwin**
ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES	T30651-2	DO NOT SCALE DRAWING
TEMPLATE NUMBER	T30651-3	DATE 01-19