


**Notes:**

1. Backset is measured from centerline of bevel which is centerpoint of door thickness.
2. Full dummy trim, same as shown except applies to both sides.
3. Dimensions given in inches and (mm).

TEMPLATE CROSS REFERENCE	
Description	Template
CK4200 Series Cylindrical Lock	T30341
ML2000, ML2200 Series Mortise Lock	T30600

Trim	Rose Design
BRC	
BWC	2-7/8" Dia.
GRC	(73)
GWC	
BRD	
BWD	3-1/2" Dia.
GRD	(88.9)
GWD	
BRE	
BWE	3" Square
GRE	(76.2)
GWE	

**Half Dummy Trim Shown**

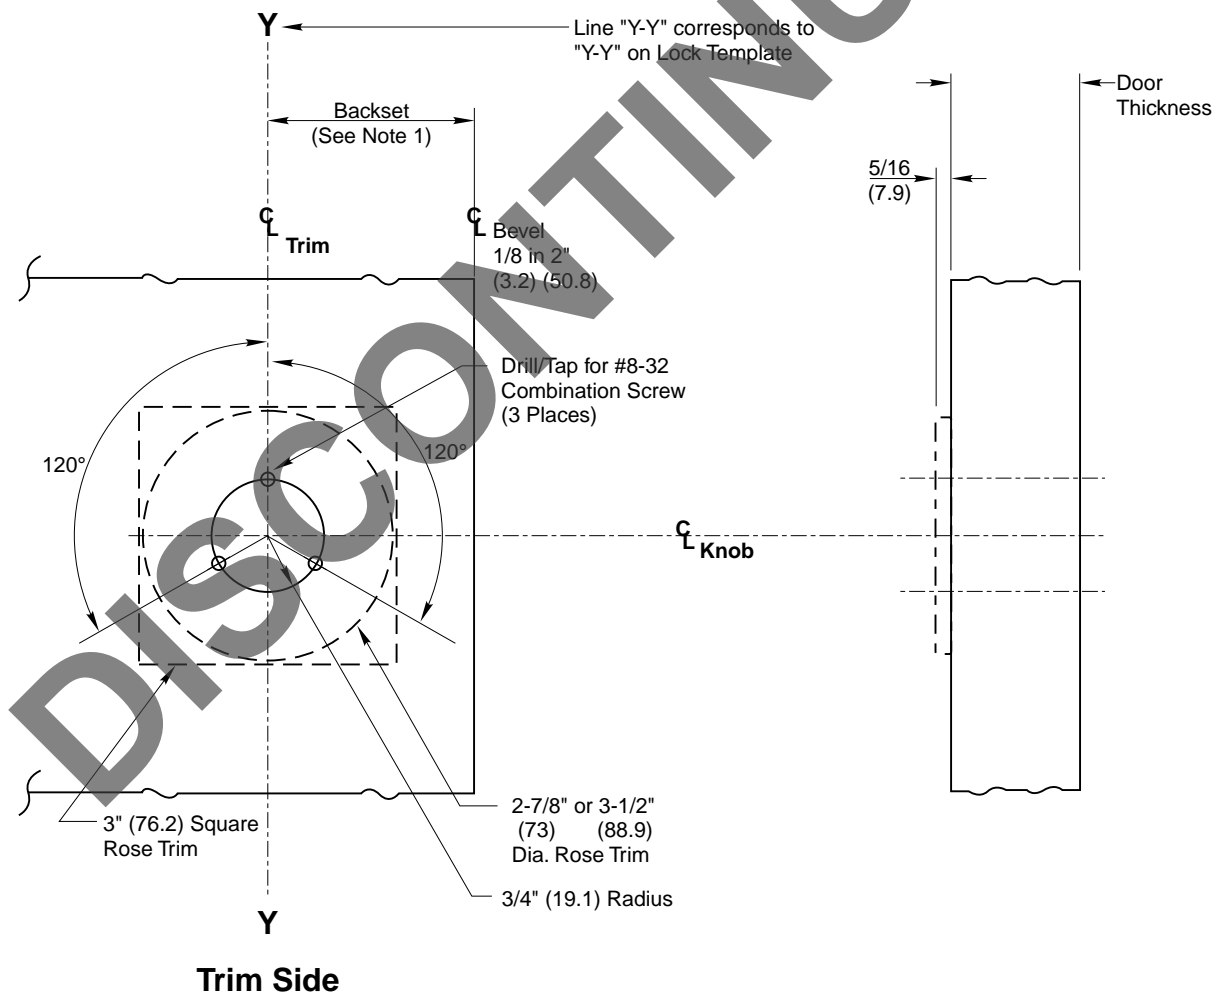

DISCONTINUED

<p><b>RESPONSIBILITY</b></p> <p>Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.</p>	<p>BRC      BWD      GRE</p> <p>BRD      BWE      GWC</p> <p>BRE      GRC      GWD</p> <p>BWC      GRD      GWE</p>	<p style="text-align: center;"><b>Knob by Rose</b></p> <p style="text-align: center;"><b>Half and Full Dummy Trim</b></p>	<p><b>Corbin Russwin</b>®</p> <p>www.corbinrusswin.com</p> <p>Do Not Scale Drawing</p>	
	<p>Supersedes T30561-1</p>			<p>Dr.      App.</p>
	<p>Date 8-99</p>			<p>Template Number T30561-2</p>