



LH/LHR DOORS

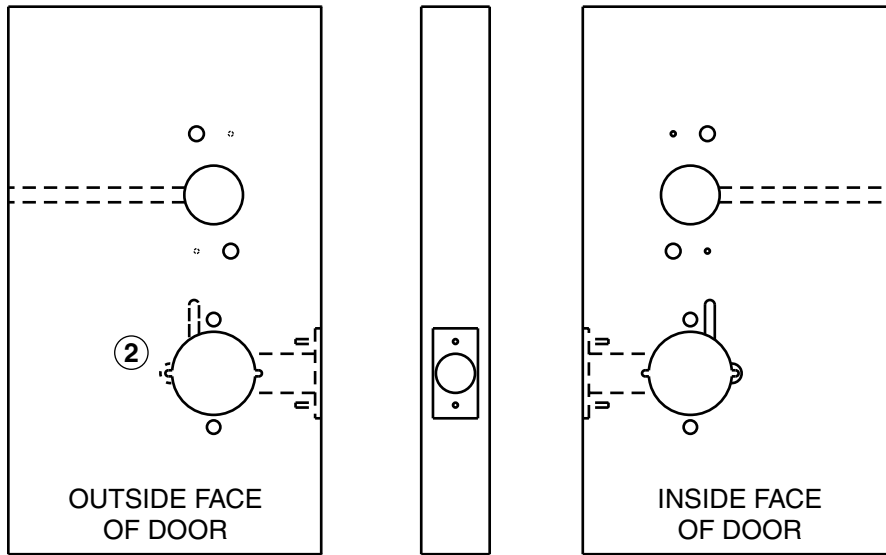

RH/RHR DOORS

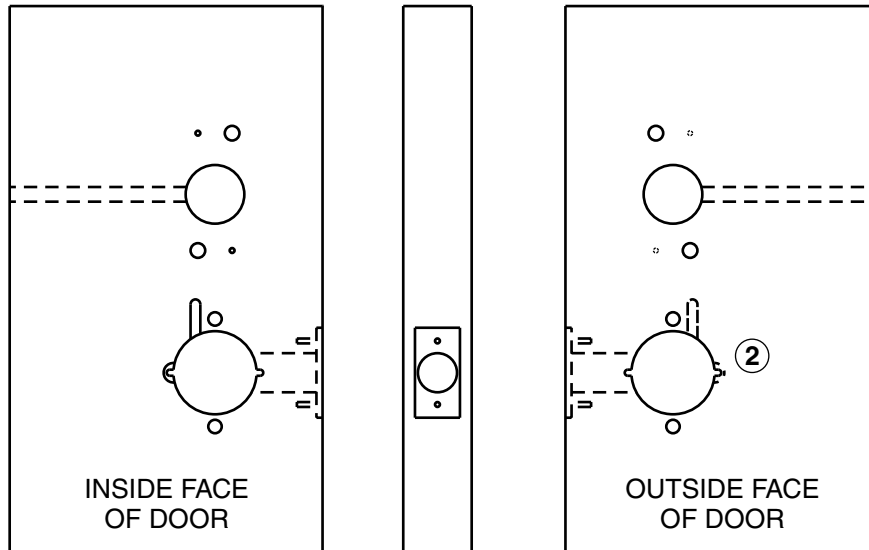

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

Access 600[®] TCRNE1 CL33600 Series Cylindrical Lever Lockset

**Corbin
Russwin**

ASSA ABLOY

www.corbinruswin.com

| | | | |
|-----------------|----------|----------------------|-------|
| SUPERSEDES | T31071-1 | DO NOT SCALE DRAWING | |
| TEMPLATE NUMBER | T31071-2 | SHEET | DATE |
| | | 2 of 2 | 08-18 |