

MOUNTING INFORMATION




Sex nuts or through bolts are required for wood and plastic covered composite doors, and any type of door without reinforcements and recommended for wood core and metal clad (Kalamein) type doors.

RH SHOWN
LH OPPOSITE

NOTES:

1. To obtain extra closing force, add 3" (76.2) to dimensions marked by (*). This will limit degree of door opening to 110°.
2. Dimensions given in inches and (mm).
3. Minimum Top Rail: 4-9/16 (115.9)
4. Parallel arm bracket shown is for non hold-open applications. Bracket mounting for hold-open applications is identical.
5. Dimensions marked (*) apply to centerline of hinge/pivot for butt or swing clear hinges; offset or center pivots.
6. Maximum degree of opening for swing clear hinge is 140°.

CAUTION: CLOSER TO BE INSTALLED IN A TRUE HORIZONTAL POSITION TO ENSURE PROPER CLOSER PERFORMANCE.

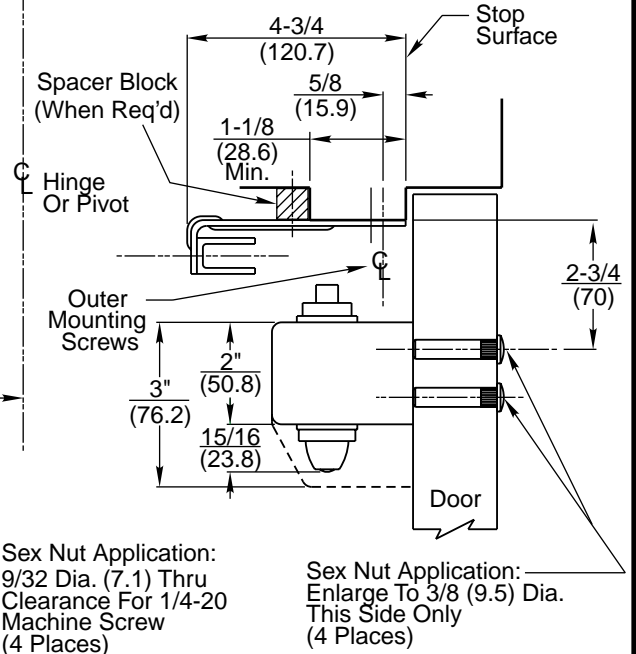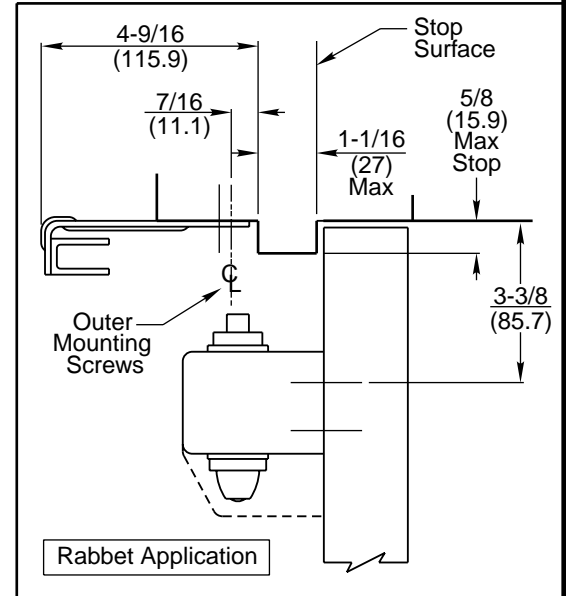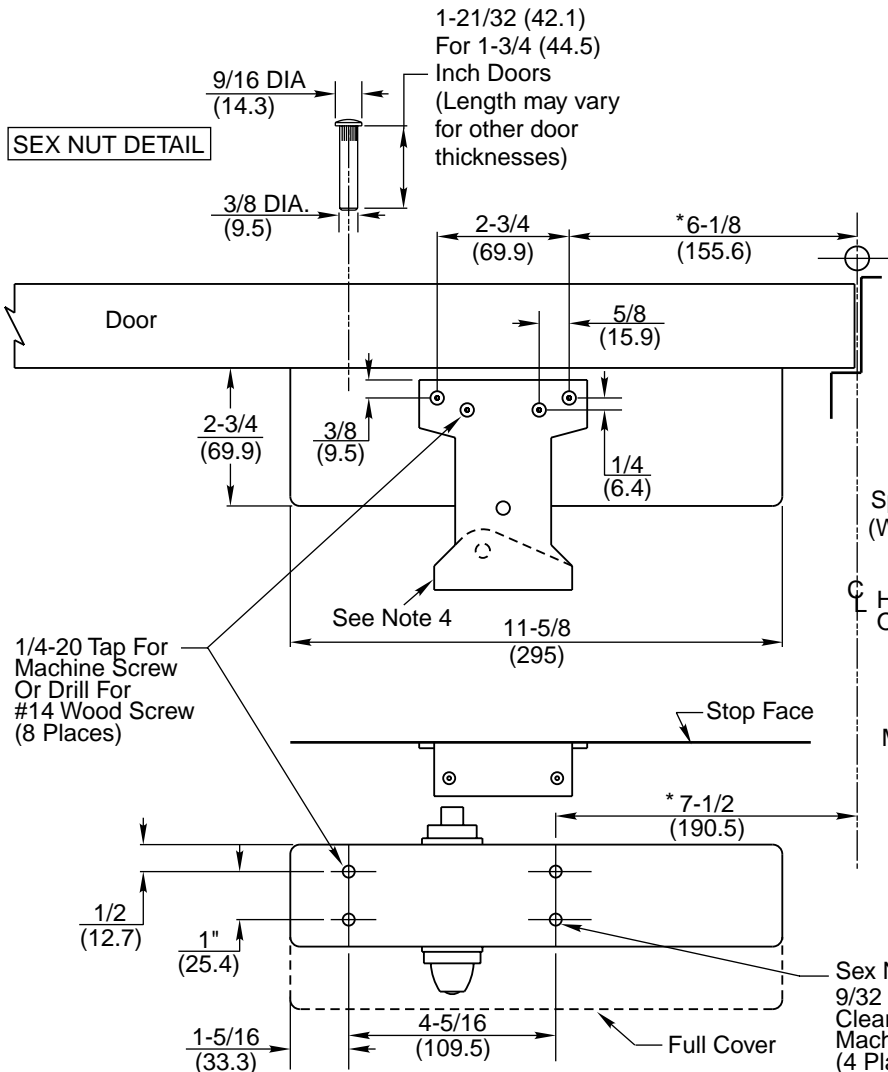

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

DC6210 Series
DC6410 Series

Surface Door Closer
Parallel Arm Mounting
(with or without A1)



www.corbinrusswin.com

Do Not Scale Drawing

Supersedes _____ Dr. _____ App. _____

Date 03-04 Template Number T30713