


**MOUNTING INFORMATION**

Sex nuts or through bolts are required for wood and plastic covered composite doors, and any type of door without reinforcements and recommended for wood core and metal clad (Kalamein) type doors.



RH SHOWN  
LH OPPOSITE

**CAUTION:** Closer To Be Installed In A True Horizontal Position To Ensure Proper Closer Performance.

Door Thickness	Sex Nut Length "L"
1-3/8 (35)	1-9/32 (33)
1-3/4 (44) & over	1-21/32 (42)

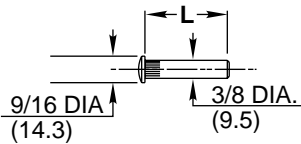

**SEX NUT DETAIL**

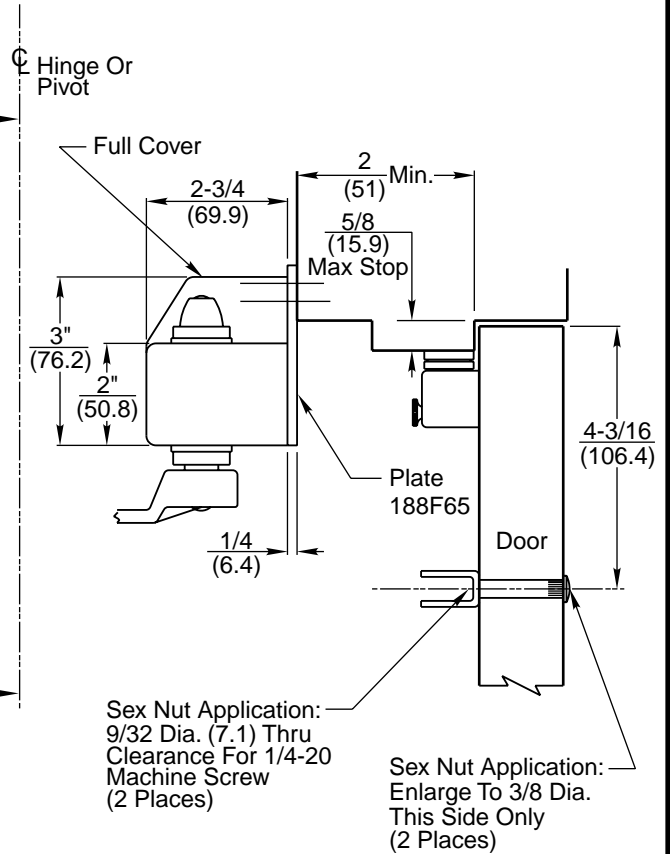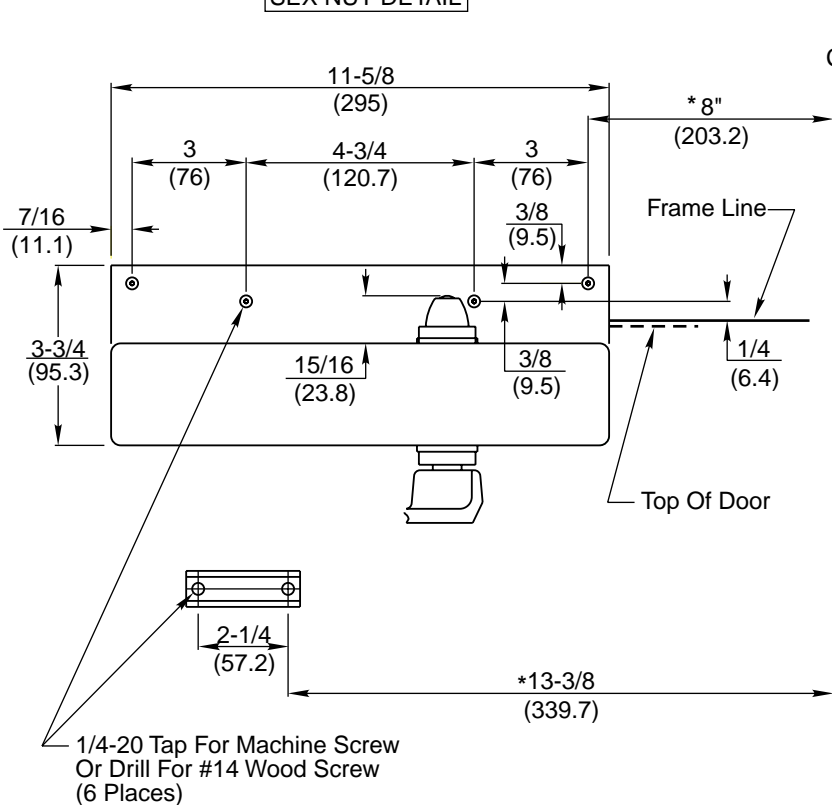

**NOTES:**

1. Dimensions given in inches and (mm).
2. 1" (25.4) minimum top jamb required for mounting plate.
3. Degree of opening: 85° through 110°
4. Minimum Top Rail: 4-1/2 (114.3)
5. Dimensions marked (\*) apply to centerline of hinge/pivot for butt or swing clear hinges; offset or center pivots.

**RESPONSIBILITY**

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

DC6220 Series By 188F65  
DC6420 Series By 188F65

Surface Door Closer  
Top Jamb Mounting for Extra Drop to  
Clear Overhead Holder  
(with or without A1, A6, or A8)



www.corbinrusswin.com

Do Not Scale Drawing

Supersedes \_\_\_\_\_ Dr. \_\_\_\_\_ App. \_\_\_\_\_

Date 06-04

Template Number T30723