


Mark and Drill Holes

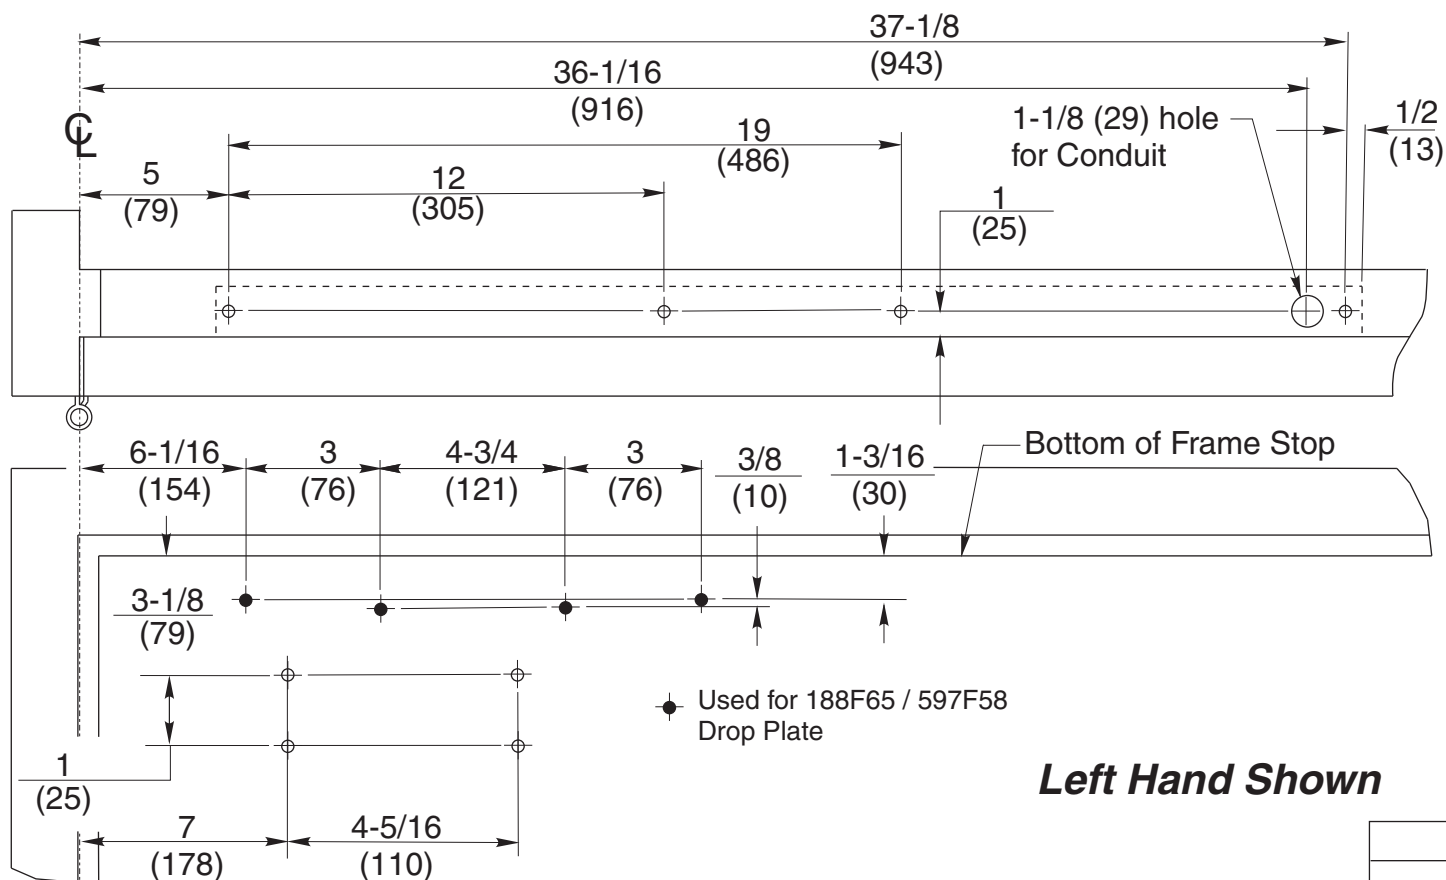

Left Hand Shown

NOTES:

- From centerline of pivot point to end of track and hook-up box is 37-1/8 (943).
- Left hand door shown.
- Do not scale drawing.
- Dimensions given in inches (mm).
- Hold Open angle between 85° and 110°.

Preparation for Fasteners

Fasteners	Door or Frame	Drill Sizes
Self-Drilling Screw	Aluminum or Metal	No drill required
	Wood (see Note)	3-16" (4.3mm)
1/4"-20 machine screw	Metal	Drill #7 (.201" dia) Tap 1/4"-20

Note: Wood doors/frames **MUST** have pilot hole when using Self-Drilling Screws.

DC62940 ETD Series Companion Unit
For Installations of a Combination Door Closer - Holder
with Single Point Hold Open Stop (Push) Side Mounting

1-800-543-3658

Corbin Russwin

ASSA ABLOY

www.corbinrusswin.com

TEMPLATE NUMBER

T31118

DATE

05-09